





rewaco[®] *refreshes your life.*

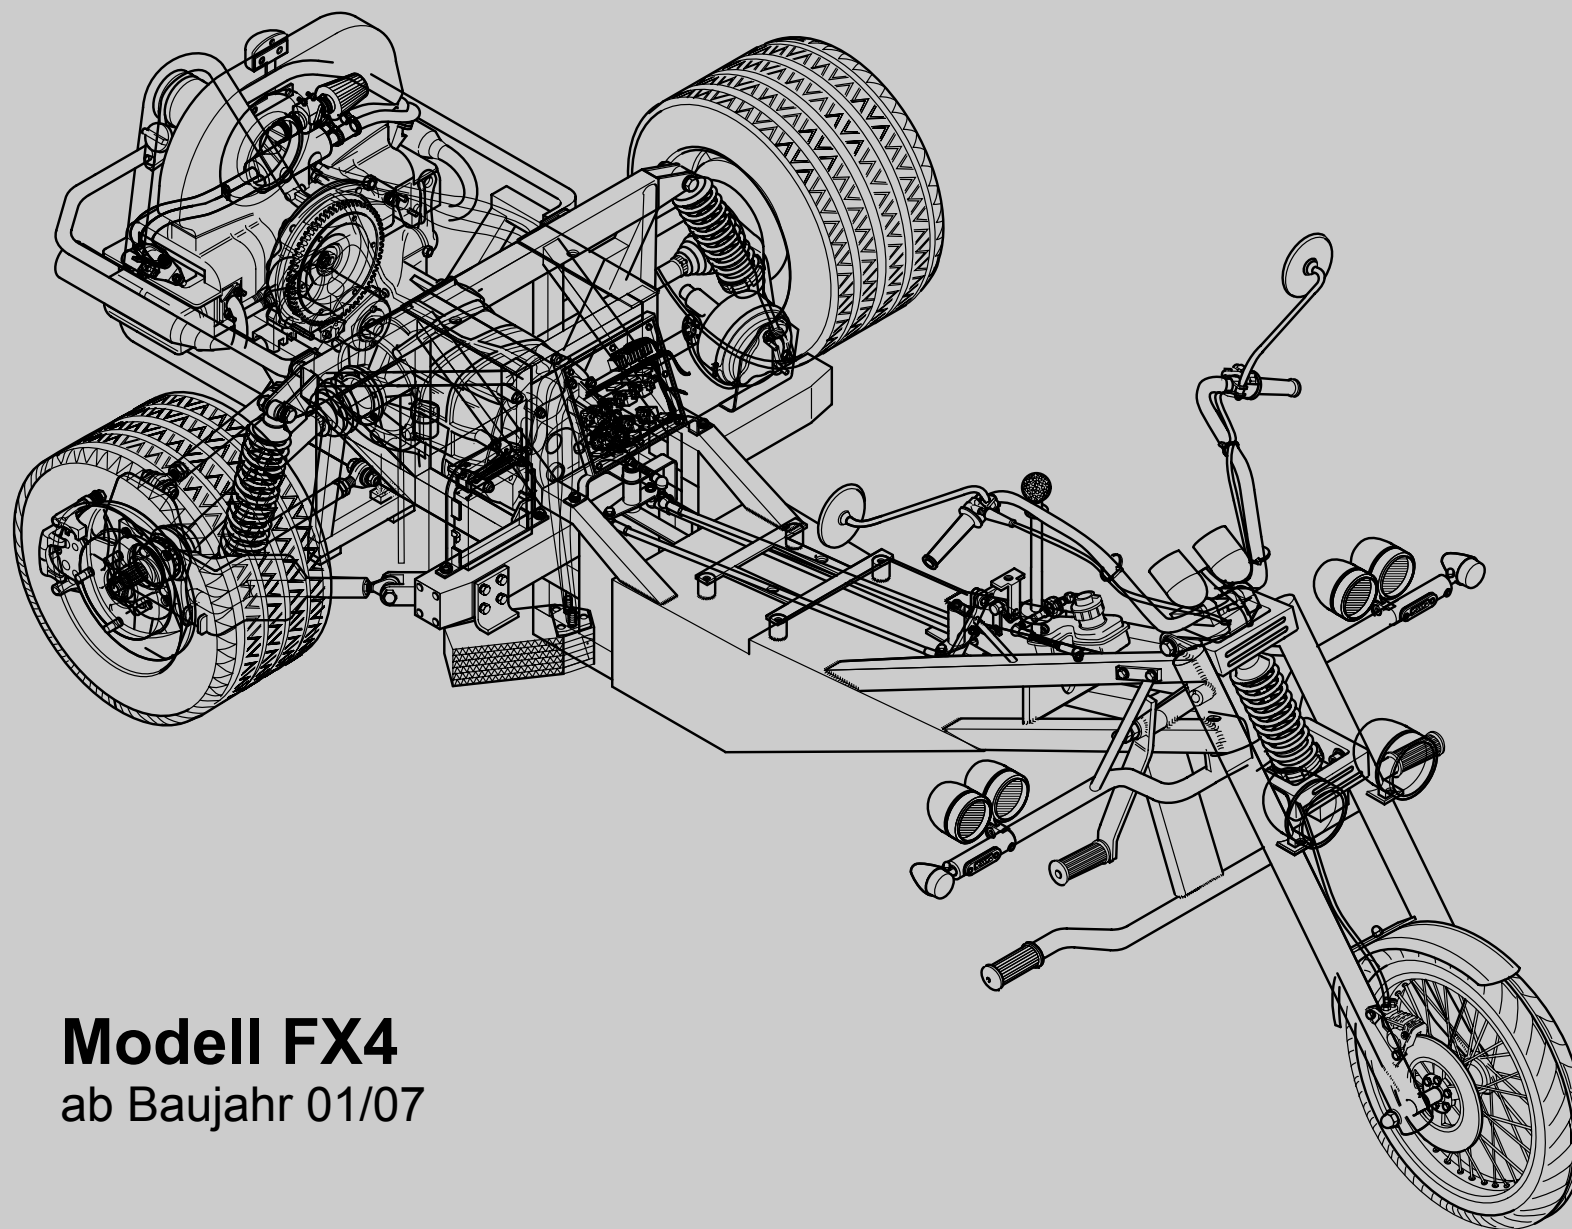

Modell FX4
ab Baujahr 01/07

Assembly Instructions 01

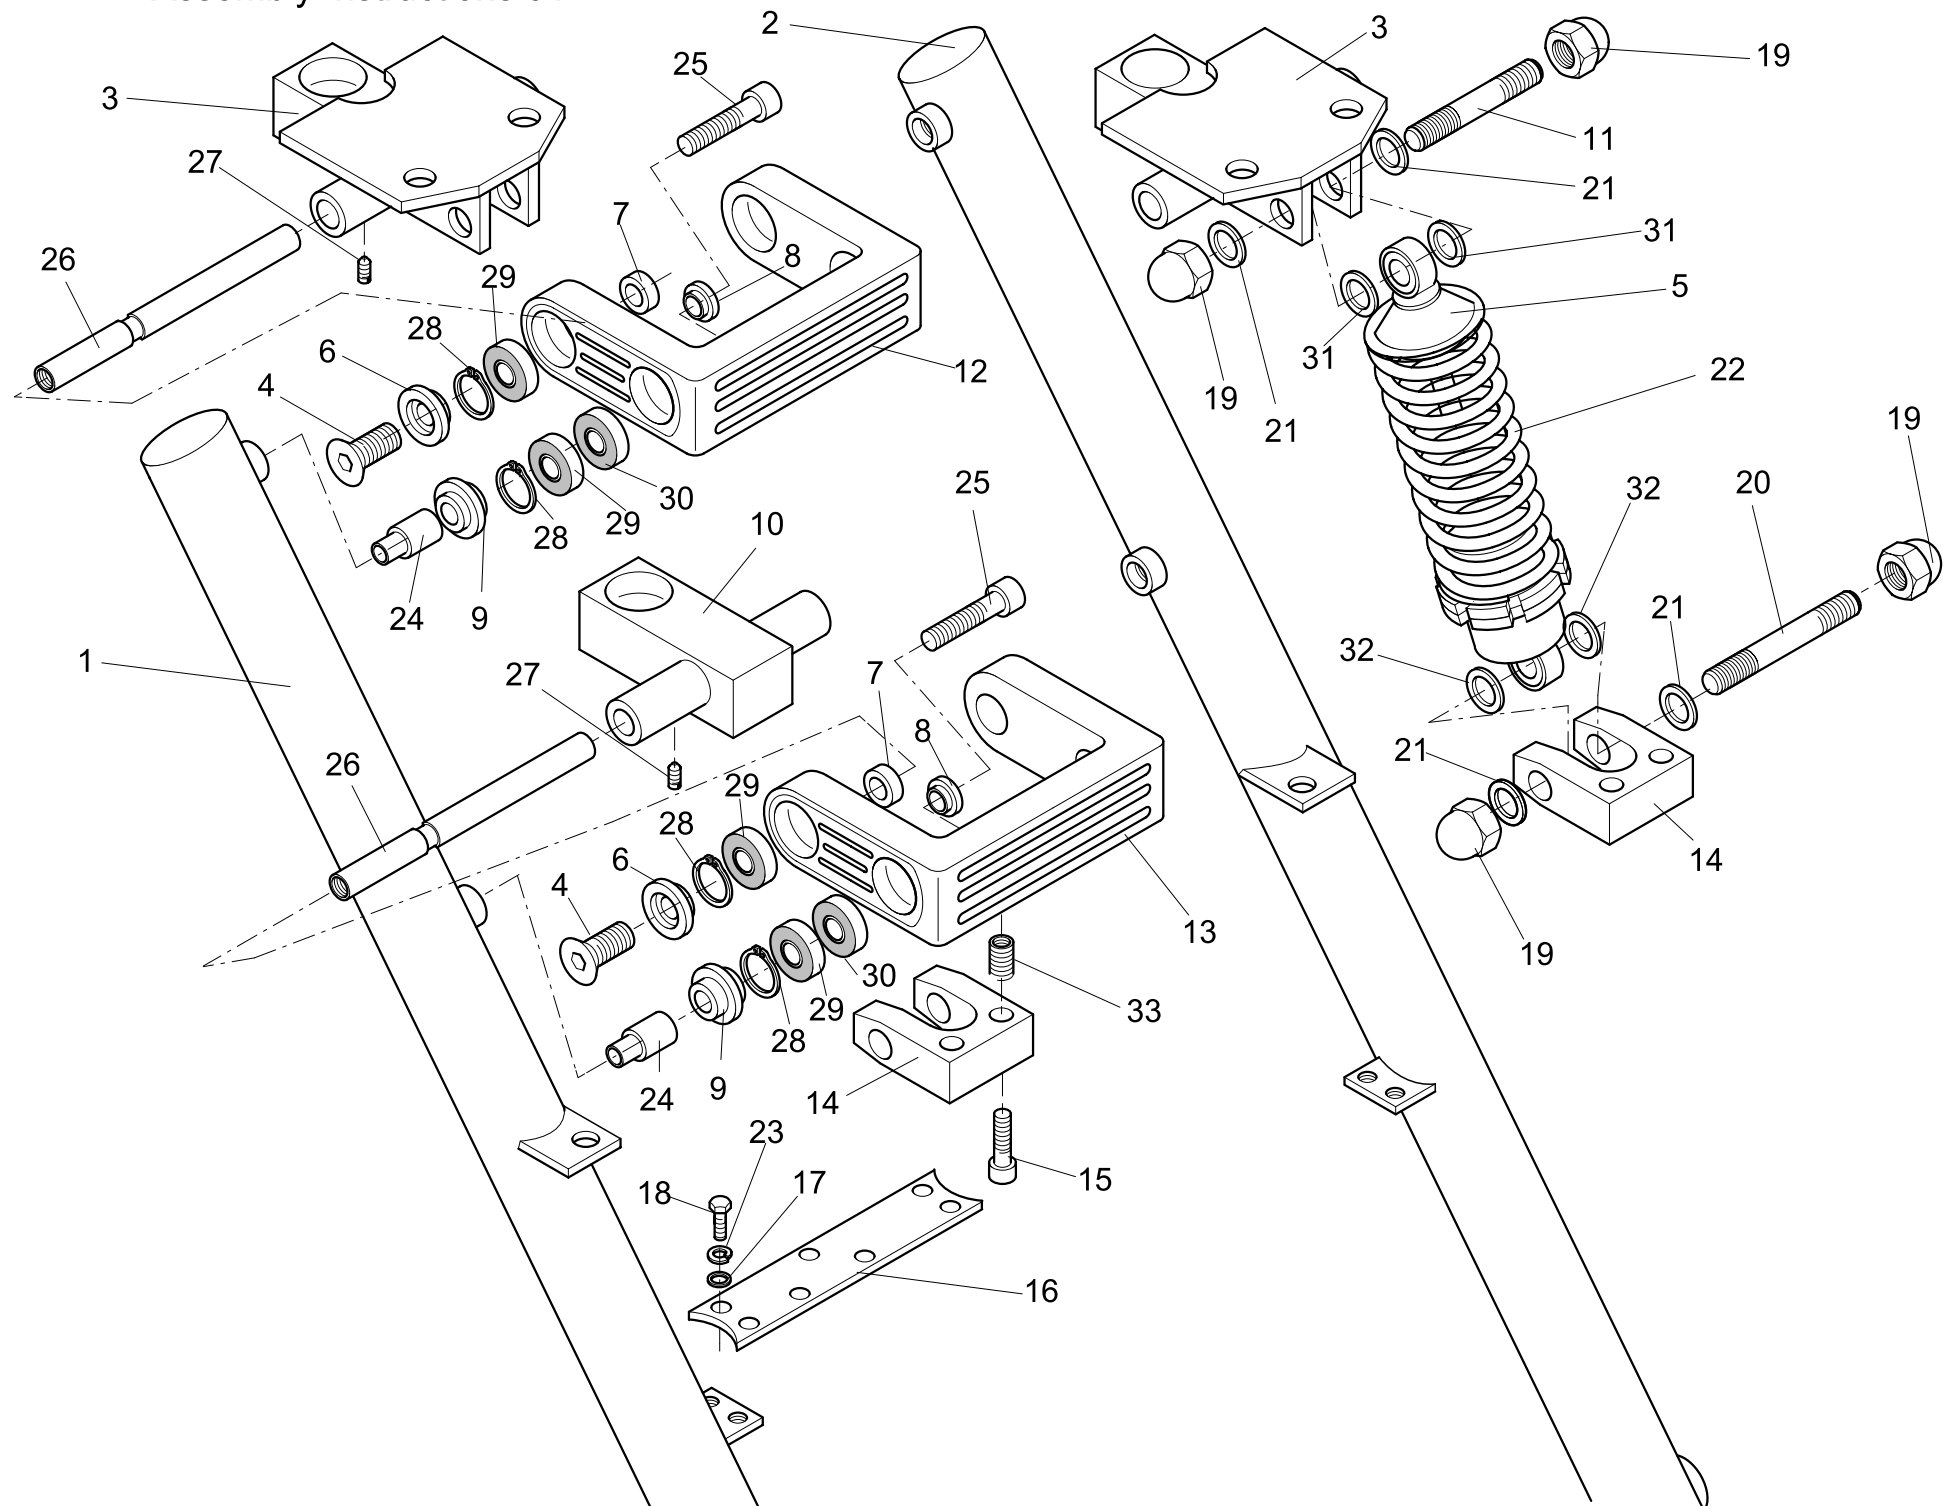


Modell: rewaco FX4 Base Seite: 1

Pos.	Q'ty	Art.-No.	Article Description
1	1	01 1002 2	fork tube Sport-Line rh
2	1	01 1002 3	fork tube Sport-Line lh
3	1	01 0052 1	stem head Sport-line front end, stainless steel, HS/FX
4	4	07-00037-U-01	countersunk flathead screw A2 M10X30 with screw retention and allan head
5	1	33 1781 2.1	shock absorber, Bilstein, without spring, HS since 01/2001 and all FX models front and rear/RF1, front end only
6	4	30 1035 4	shim, pos. 6, Sport-line
7	4	30 1035 5	shim, pos. 7, Sport-line
8	4	30 1035 6	shim, pos. 8, Sport-line
9	4	30 1035 9	shim, pos. 9, Sport-line
10	1	01 0052 3	steering stem Sport-line front end, stainless steel
11	1	0939 ZN 12/60	stud bolt 8.8 zinc plated M12x60
12	1	01 0031 2	upper bent, front end, Sport-line, polished aluminium
13	1	01 0032 3	lower bent, front end, Sport-line, polished aluminium
14	1	20 0045 3	bracket, shock absorber Sportline front end
15	2	0912 A2 10/40	hexagon socket screw A2 M10X40
16	1	19 1049 1	bracket, front fender for Sport-line front end
17	4	0125 A2 8	washer A2 M8
18	4	0933 A2 8/16	hexagon screw A2 M08X16
19	4	1587 A2 12.1	acorn nut A2 M12
20	1	0938 ZN 12/80	stud bolt 5.6 zinc plated M12X80
21	4	0125 A2 12	washer A2 M12
22	1	01-00201-P-01	spring for front end FX/HS since 4/2002, polished
23	4	0127 B A2 8	spring lock washer Form B A2 M8
24	4	33 1034 6	dowel, sport-line front end

Modell: rewaco FX4 Base Seite: 1

Pos.	Q'ty	Art.-No.	Article Description
25	4	07-00038-U-01	hexagon socket headcap screw A2 M10X60 with screw retention
26	2	01 0040 1	bolt, front end Sport-line
27	2	0914 A2 6/8	hexagon socket screw A2 M06X08 (slug)
28	8	05 1135 1	retaining ring DIN 472/35, bent/steering stem Sportline
29	8	05 1160 2	ball bearing 6202 2RS / Sportline front end
30	4	05 1160 4	ball bearing 6003ZZ
31	2	06-00568-G-01	shim pos.31 Sportline front end; outer dia.: 18, inner dia.: 12, width: 3.4
32	2	06-00569-G-01	shim pos.32 Sportline front end; outer dia.: 18, inner dia.: 12, width: 2.4
33	2	07-00039-U-01	threaded bushing M10x1.5x20


Assembly Instructions 02

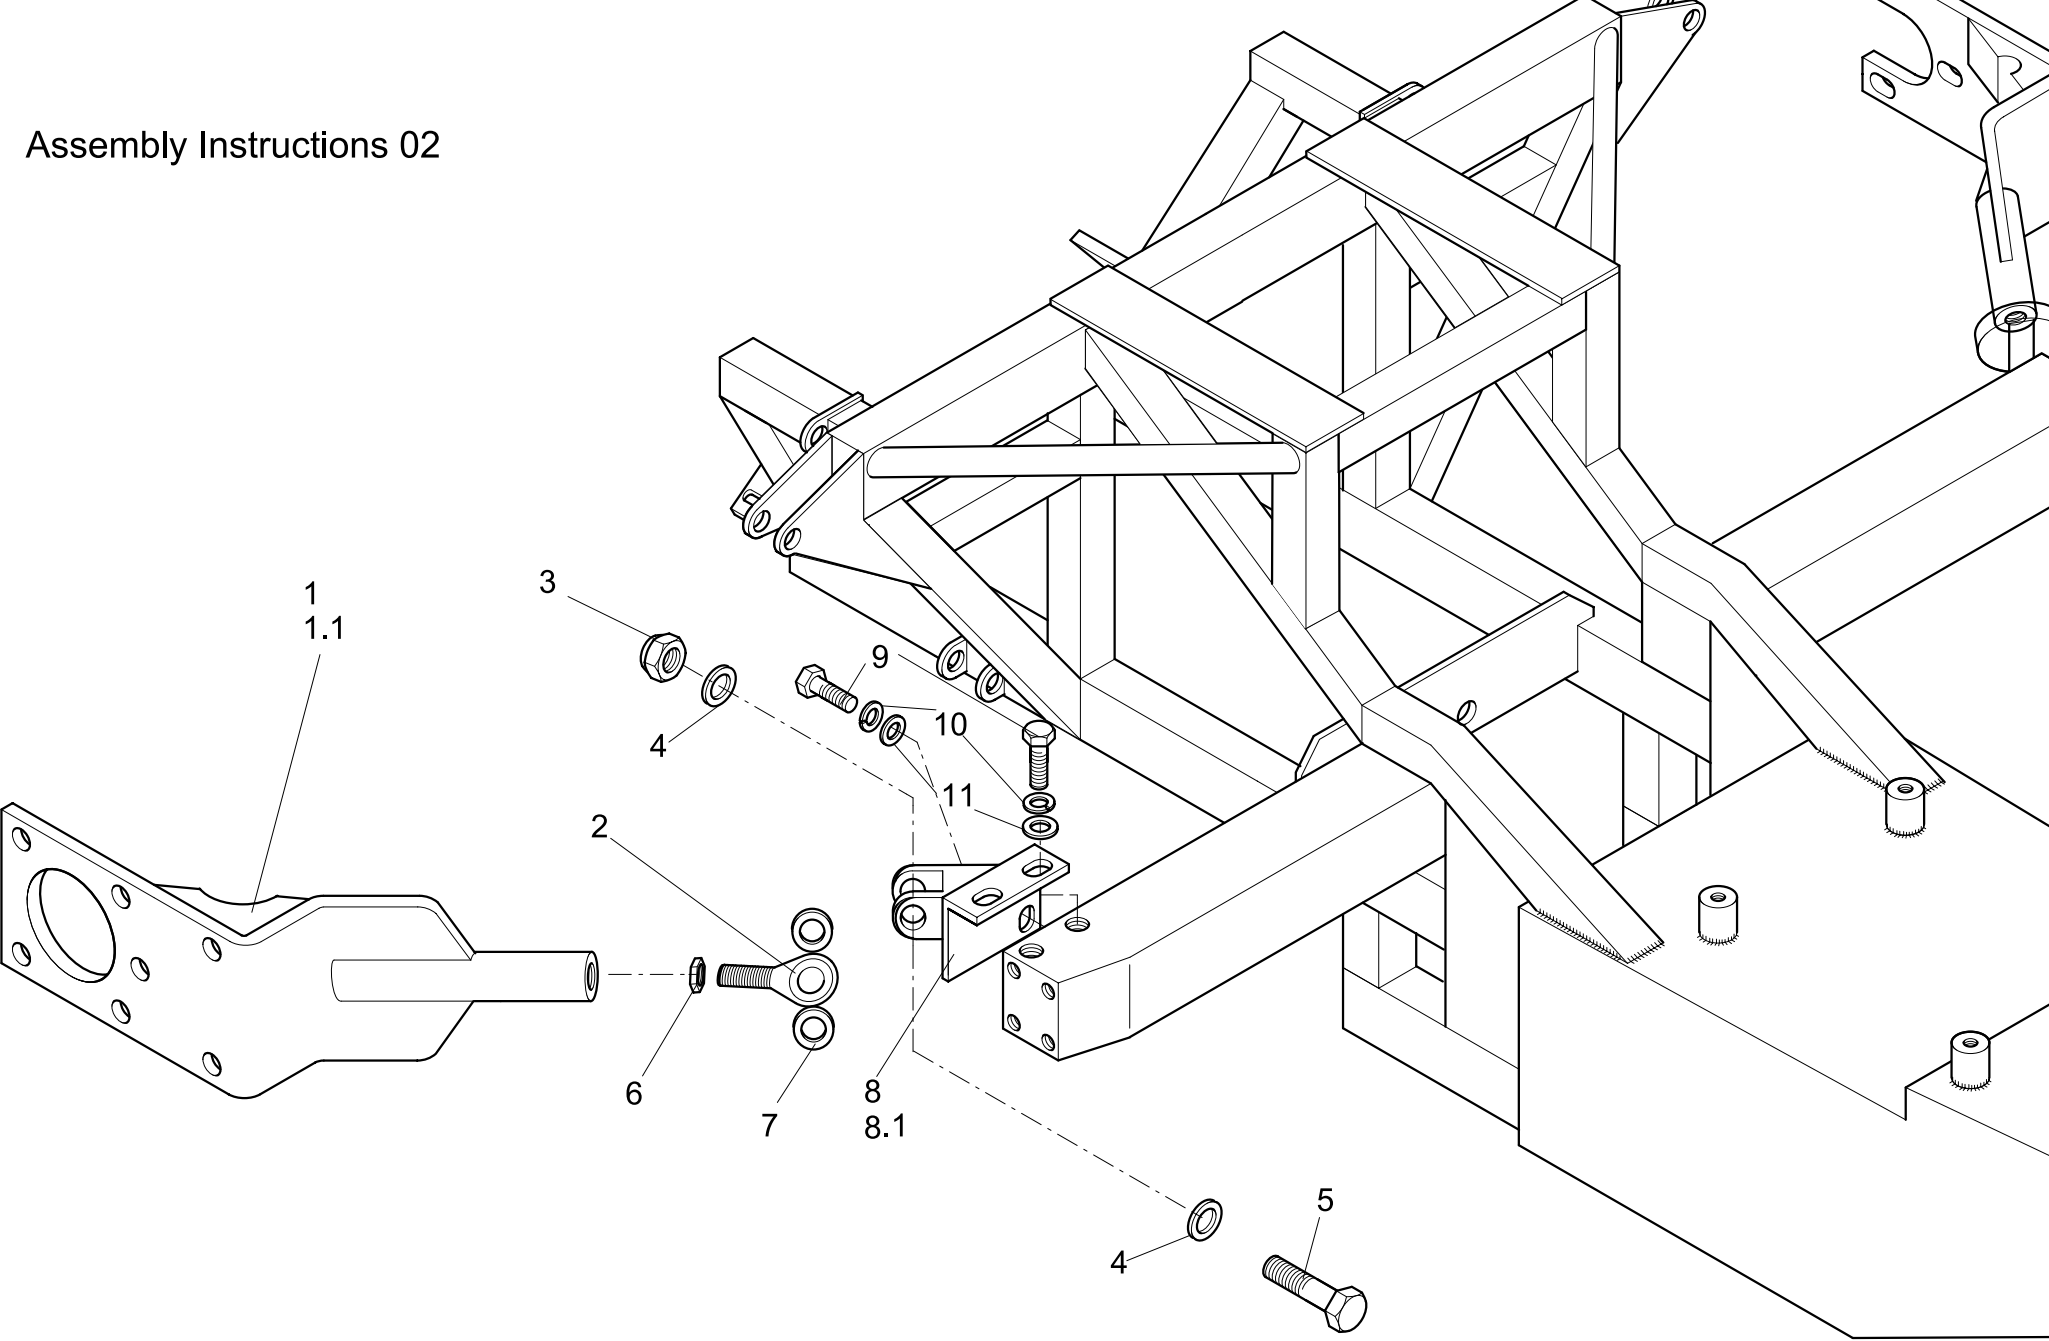

Modell: rewaco FX4 Base Seite: 2

Pos.	Q'ty	Art.-No.	Article Description
1	1	08-00566-E-01	transverse control arm, FX, lh
1,1	1	08-00567-E-01	transverse control arm, FX, rh
2	2	08-00047-C-01	swivel head, dia. 16mm/ maintenance free
3	2	0985 ZN 16	hexagon nut, self-locking zinc plated M16
4	4	0125 ZN 16	washer zinc plated M16
5	2	0931 16/55VZ	hexagon screw M16x55 galvanized
6	2	07-00196-U-01	hexagon nut, zinc plated, M16 (flat) DIN 0982
7	4	08-00581-01	shim, inner dia.: 16.1, outer dia.: 22/3.35mm for transverse control arm
8	1	08-00709-E-01	transverse control arm, FX, lh
8,1	1	08-00710-E-01	transverse control arm, FX, rh
9	8	0933 A2 10/30	hexagon screw A2 M10X30
10	8	0127 B A2 10	spring lock washer Form B A2 M10
11	8	0125 A2 10	washer A2 M10

Assembly Instructions 03

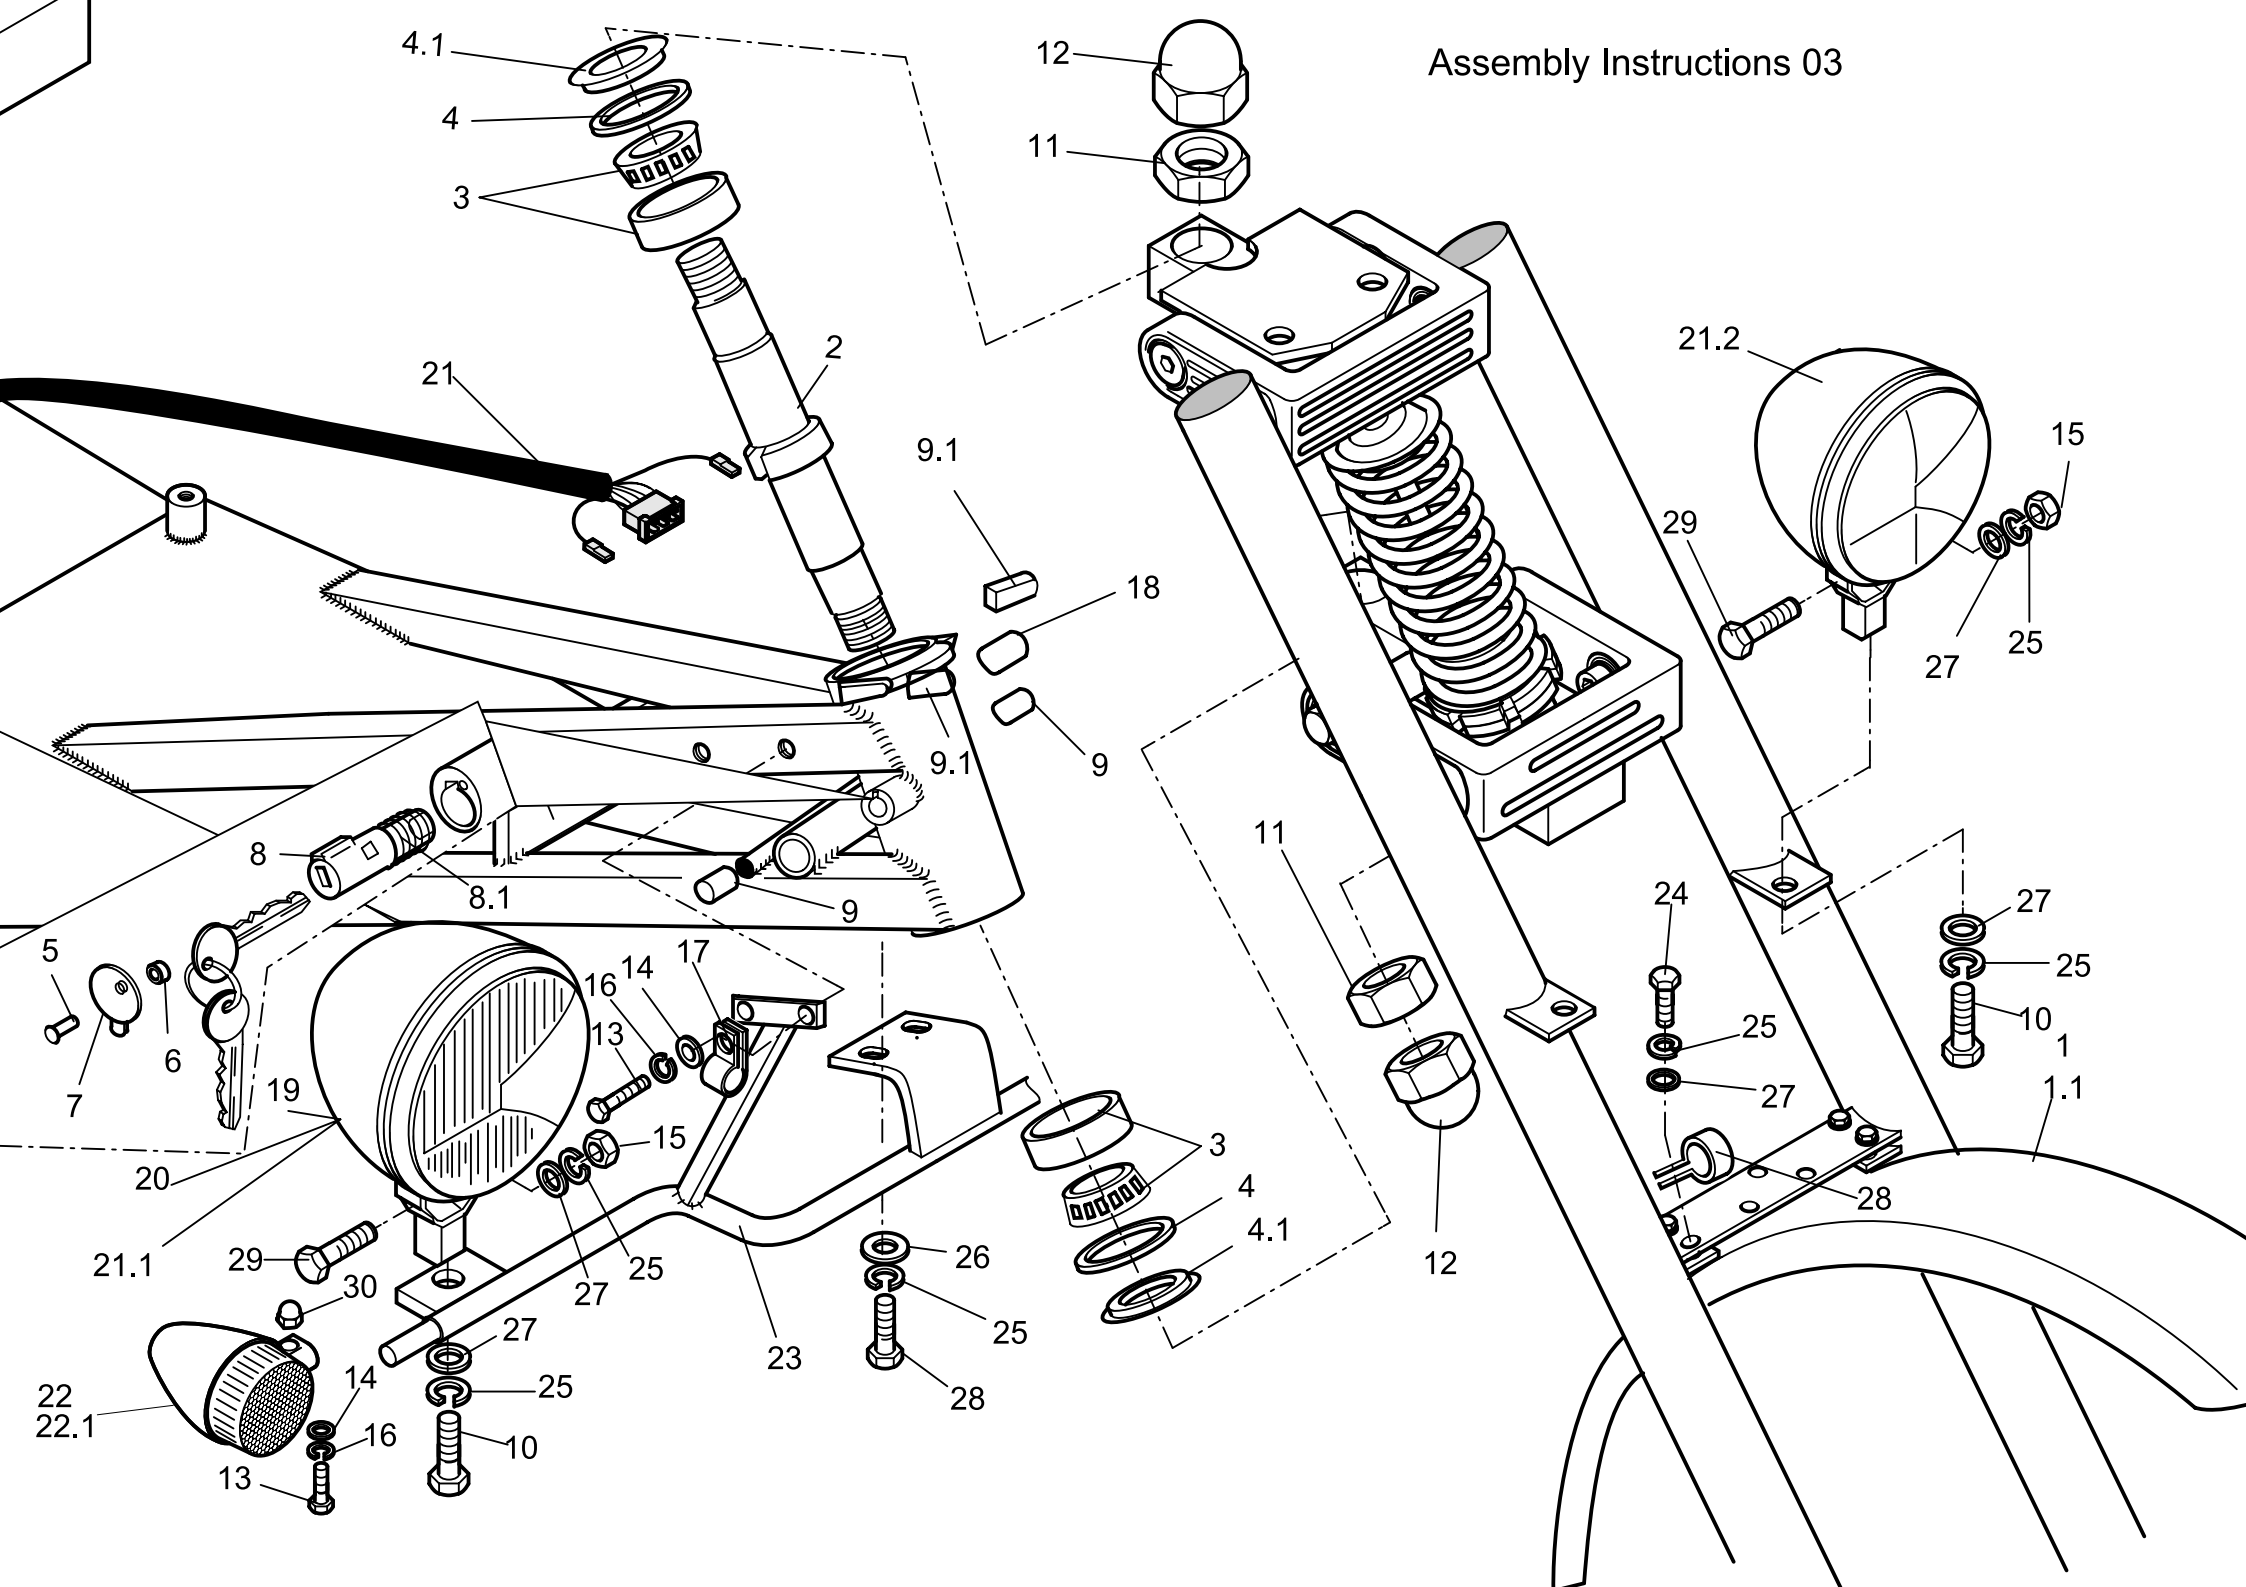


Modell: rewaco FX4 Base Seite: 3

Pos.	Q'ty	Art.-No.	Article Description
1	1	19 1047 0	front fender Indian glimmer effect or uni for 150/60-17
1,1	1	03-00567-E-01	front fender HS/FX/RF uni or glimmer, HS models since 04/2006, tire 180/55-17 or 200/50-17
2	1	03 0010 1	steering bolt with ring
3	2	03 0020 2	steering bearing 32006X
4	2	20 9571 2	oil seal, steering bearing
4,1	2	03 0015 6	cover for steering bearing
5	1	03 0100 2	steering lock - grooved drive stud
6	1	03 0090 2	steering lock - spring washer for grooved drive stud
7	1	03 0080 2	steering lock - cover
8	1	03 0070 2	steering lock
8,1	1	03 0075 2	steering lock - pressure spring
9	2	03 0051 2	plug 10 mm
9,1	2	03 0050 2	plug 8 mm
10	4	07 1254 2	hexagonal bolt 3/8"-24UNF 3/4" A2
11	2	0439 24/1.5	flat nut M24x1.5, chrome plated
12	2	1587 24/1.5	acorn nut M24X1.5 chrome-plated
13	9	0933 A2 6/20	hexagon screw A2 M06X20
14	9	9021 A2 6	washer, body, A2 M6
15	4	0934 UNF A2 3/8	hexagon nut UNF A2 3/8"
16	9	0127 B A2 6	spring lock washer Form B A2 M6
17	1	16 0120 8	pipe clip with rubber inlay 6 mm
18	1	03 0052 2	plug 12 mm
19	2	03 0120 2	H4 bulb
20	2	03 0110 2	connector for H4 lamp / connector for headlight
21	1	18 0202 4	wire harness for headlights and turn signals, standard

Modell: rewaco FX4 Base Seite: 3

Pos.	Q'ty	Art.-No.	Article Description
21,1	2	22 6661 2	headlight assembly, complete with H4 lens
21,2	2	22 1048 1	additional headlight H3 standard 4 1/2"
21,3	2	22 1049 1	headlight H4 Indian
21,4	2	22 1047 1	additional headlight H3 Indian 4 1/2"
22	2	01-00100-D-01	turn signal, front, chromed EC (incl. bulb 12V/18W)
22,1	2	18 0581 1	bulb 12V 18W
23	1	09 1051 2	headlight and turn signal bracket HS4-HS6 FX4-FX6 Sportline
24	3	0125 A2 6	washer A2 M6
25	6	0127 B A2 8	spring lock washer Form B A2 M8
26	2	9021 A2 8	washer, body, A2 M8
27	8	0125 A2 8	washer A2 M8
28	1	16 0120 9	pipe clip with rubber inlay 8 mm
29	4	07 1254 1	hexagon screw 3/8"-24UNF 1 3/4" A2
30	5	1587 A2 6	acorn nut A2 M06

Assembly Instructions 03.1

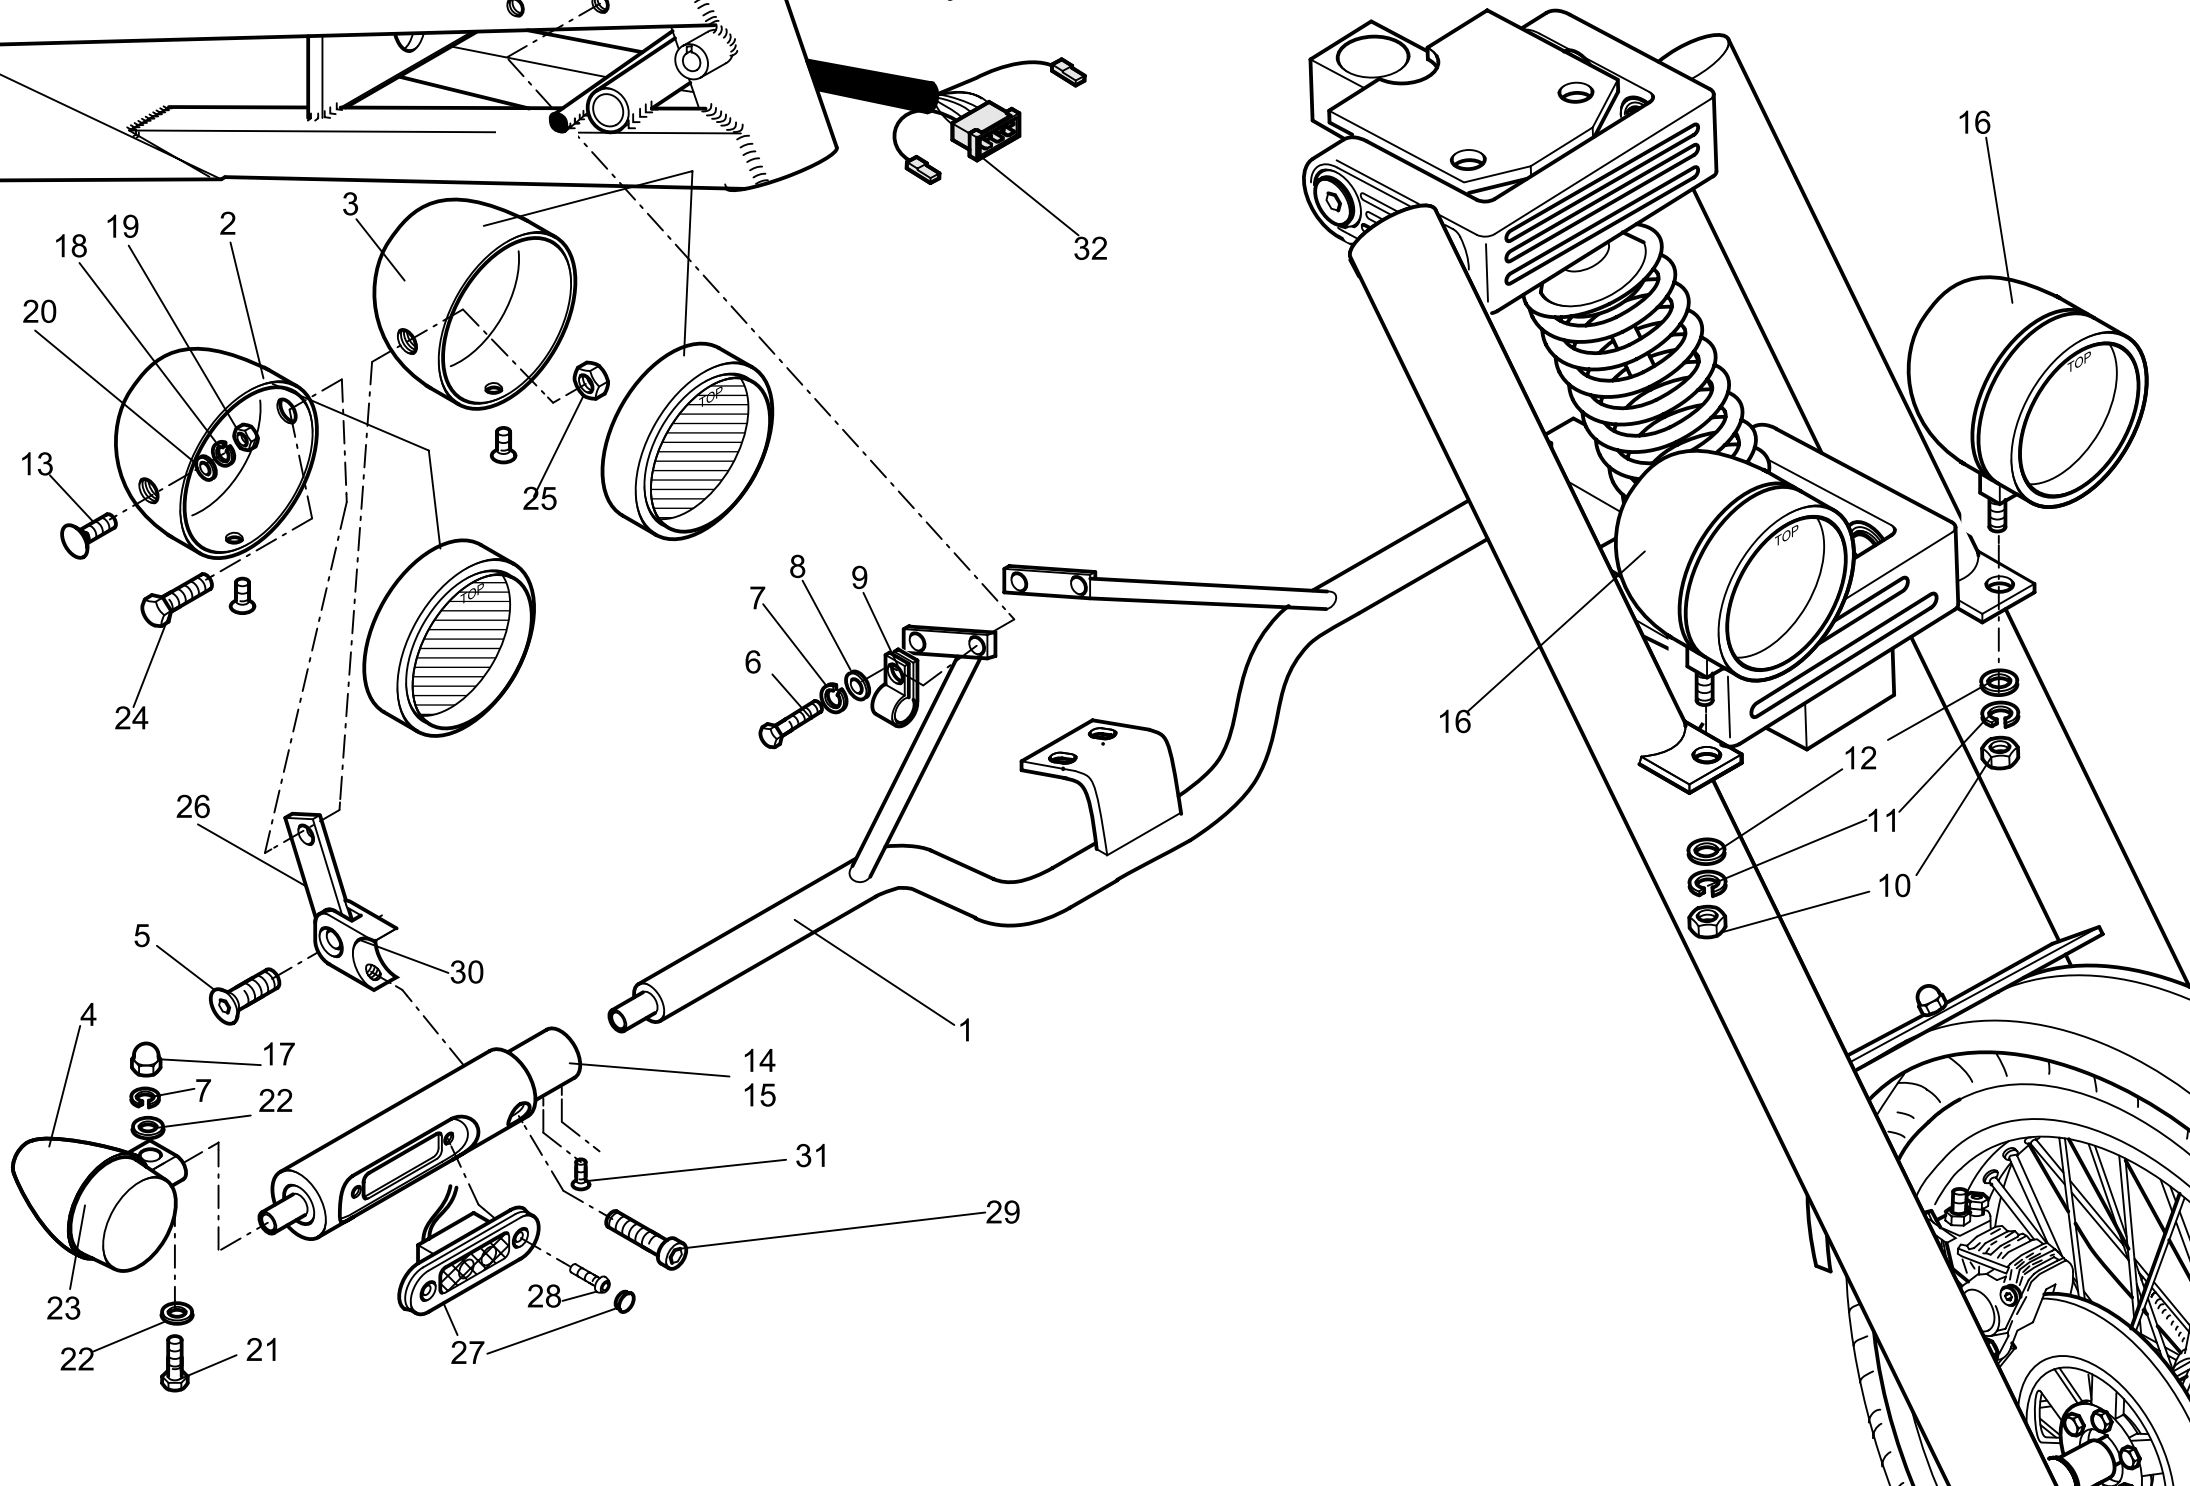


Modell: rewaco FX4 Base Seite: 3,1

Pos.	Q'ty	Art.-No.	Article Description
1	1	08-00080-C-01	headlight and turn signal bracket, HS and FX, for double headlights
2	2	01-00195-p-01	double headlight, low beam, outer, H7 12V 55W - only in combination with double headlight, inner 01-001196-P-01
3	2	01-00196-P-01	double headlight, high beam, inner, H4 12V 60/55W - only in combination with double headlight, outer 01-001195-P-01
4	2	01-00088-D-01	turn signal, front, chromed EC, clear glass, (incl. bulb, yellow, 12V 21W)
5	2	07-00025-U-01	countersunk flathead screw A2 M8x30 with allan head
6	2	0933 A2 6/20	hexagon screw A2 M06X20
7	4	0127 B A2 6	spring lock washer Form B A2 M6
8	2	9021 A2 6	washer, body, A2 M6
9	1	16 0120 8	pipe clip with rubber inlay 6 mm
10	2	0934 UNF A2 3/8	hexagon nut UNF A2 3/8"
11	2	0127 B A2 10	spring lock washer Form B A2 M10
12	2	0125 A2 10	washer A2 M10
13	4	0603 A2 5/16	coach bolt A2 M05X16
14	1	16-00181-D-01	holder for position light and double headlights, rh, polished aluminium
15	1	16-00182-D-01	holder for position light and double headlights, lh, polished aluminium
16	2	01-00090-B-01	additional headlights, 90mm, low beam, H7 55W
17	2	1587 A2 6	acorn nut A2 M06
18	4	0127 B A2 5	spring lock washer Form B A2 M5
19	4	0934 A2 5	hexagon nut A2 M05
20	4	0125 A2 5	washer A2 M5
21	2	0933 A2 6/30	hexagon screw A2 M06X30

Modell: rewaco FX4 Base Seite: 3,1

Pos.	Q'ty	Art.-No.	Article Description
22	4	0125 A2 6	washer A2 M6
23	2	01-00085-U-01	bulb 12V 21W, yellow
24	2	0933 A2 8/25	hexagon screw A2 M08X25
25	2	0985 ZN 8	hexagon nut, self-locking zinc plated M08
26	2	06-00536-C-01	bracket (stainless steel) for connection double headlights/light holder
27	2	01-00137-U-01	position lamp for double headlights since 04/2006
28	4	07-00191-F-01	fillister head screw, cross slot A2 M4X8 + small cap for position light
29	4	6912 A4 6/25	hexagon socket screw (flat head) A2 M06X20
30	2	16-00180-D-01	holder for double headlight, polished aluminium
31	4	7991 A2 4/20	hexagon socket countersunk flathead screw A2 M04X20
32	1	01-00148-U-01	wiring harness for headlights and turn signal - double headlights

Assembly Instructions 04

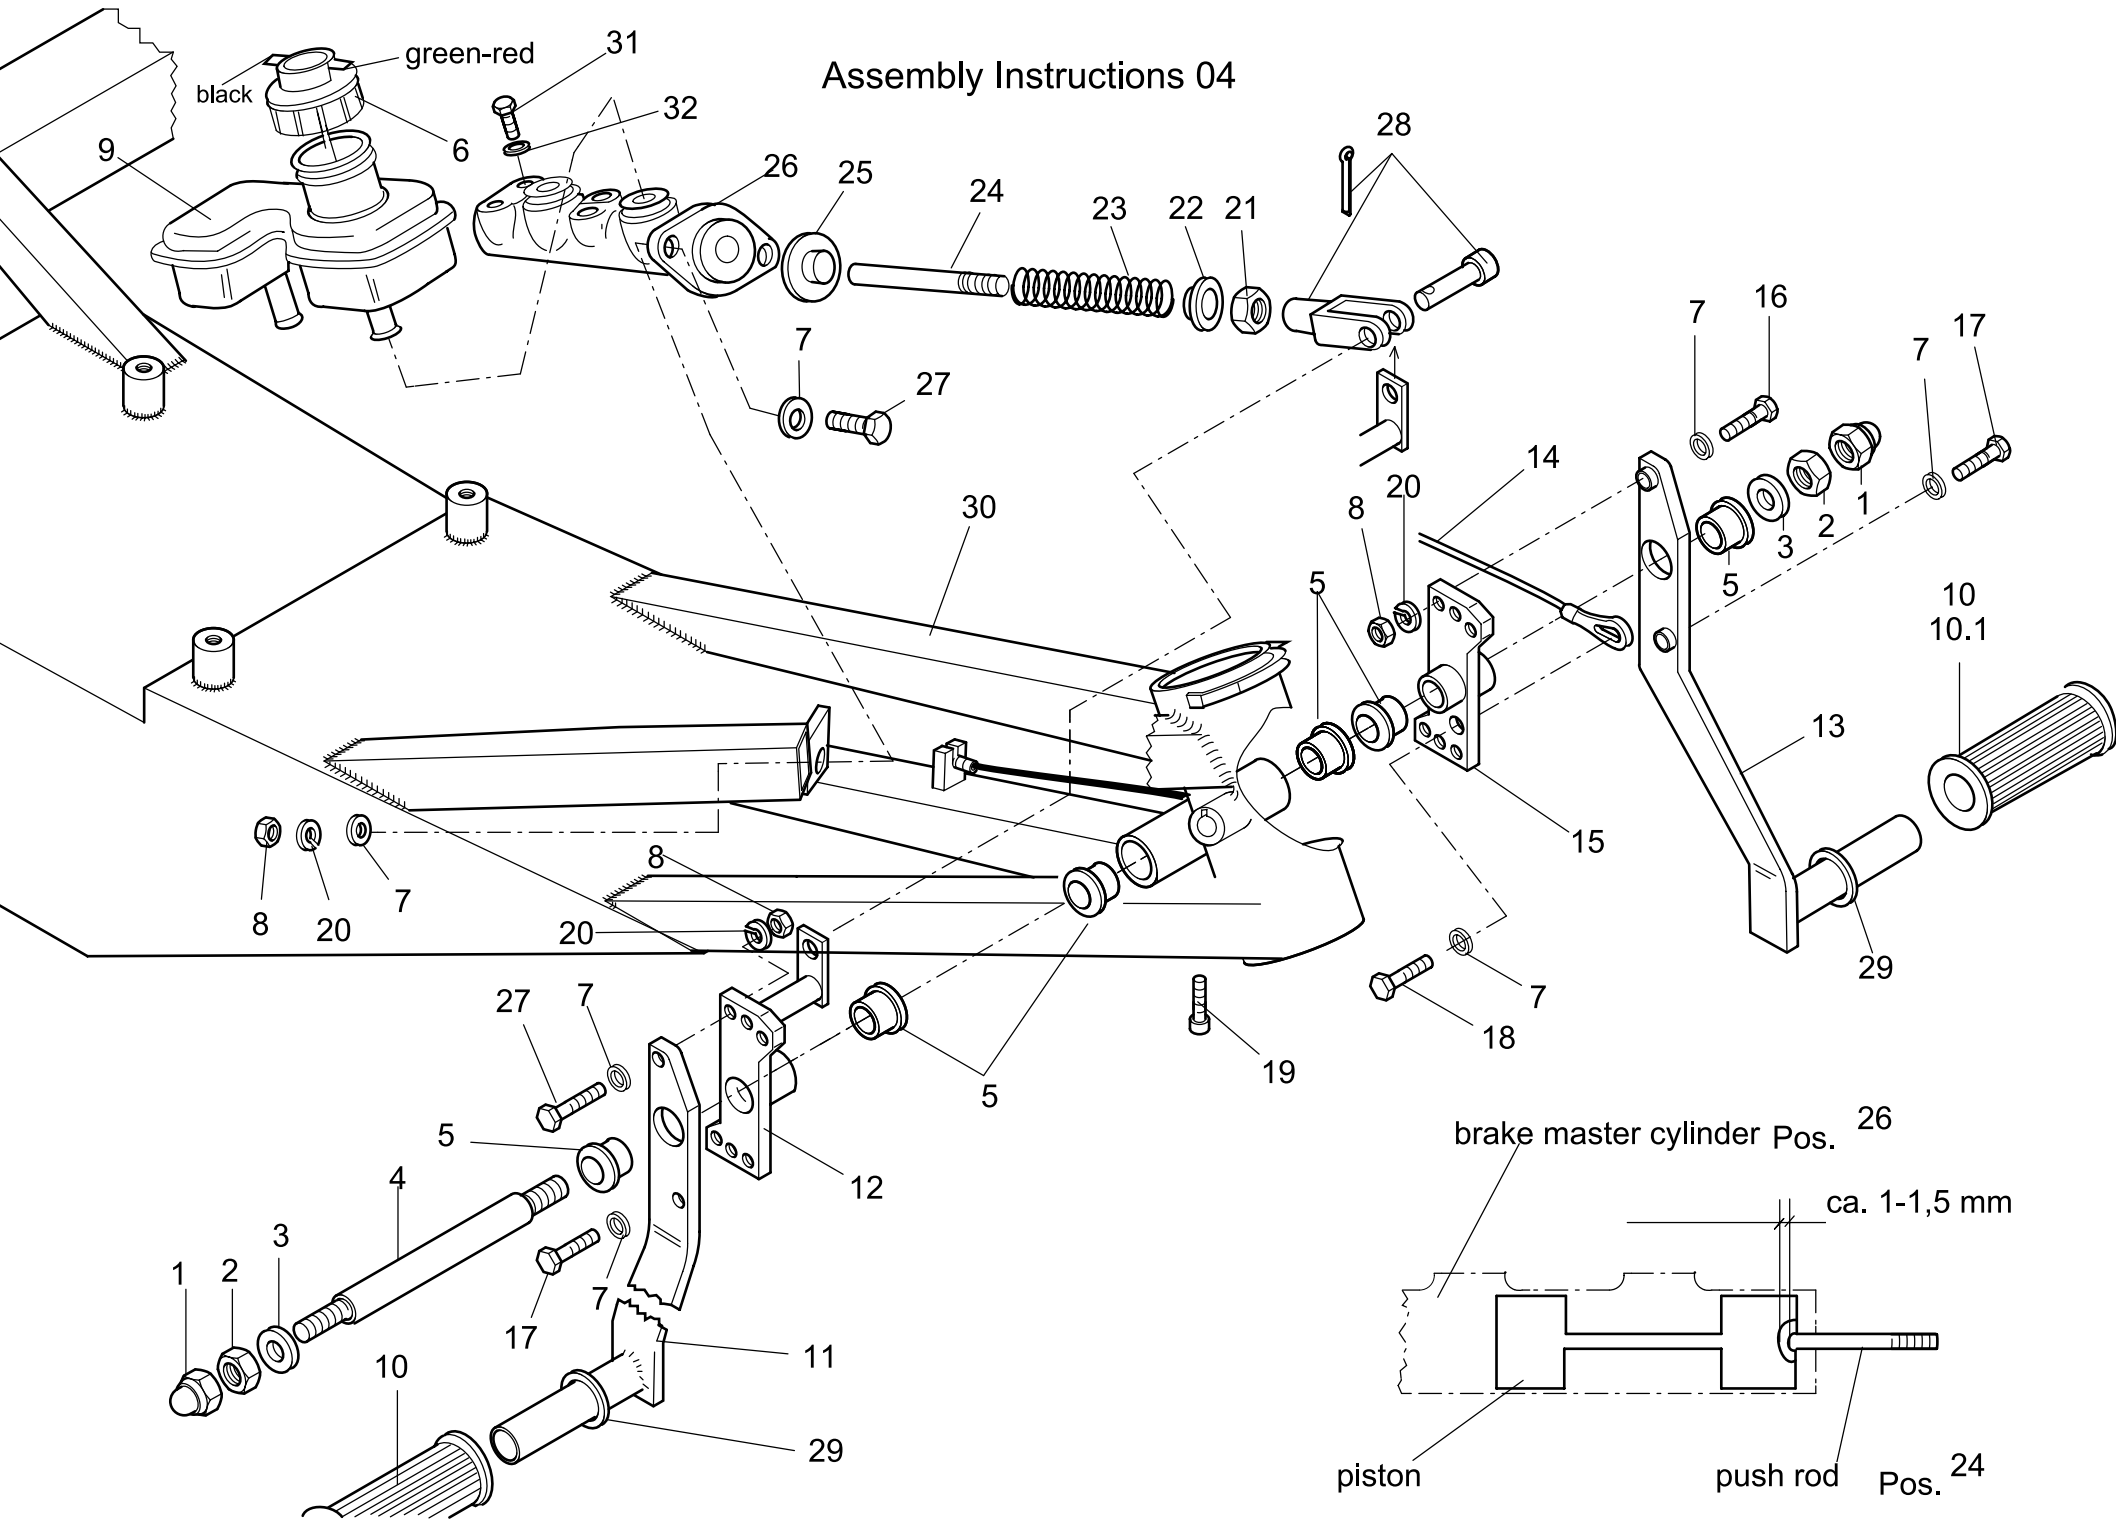


Modell: rewaco FX4 Base Seite: 4

Pos.	Q'ty	Art.-No.	Article Description
1	2	1587 A2 12.1	acorn nut A2 M12
2	2	0439 A2 12	flat nut A2 M12
3	2	0125 A2 12	washer A2 M12
4	1	04 0121 1	axle, pedal 16 mm
5	6	01 0040 2	bearing bushing 16/18
6	1	04 0010 2	cap, brake fluid reservoir
7	9	0125 A2 8	washer A2 M8
8	4	0934 A2 8	hexagon nut A2 M08
9	1	03-00566-01	brake fluid reservoir
10	2	04 0090 2	footrest cover, rubber
10,1	1	22 1051 1	pad, pedal, chrome plated (pair)
11	1	04 0114 1	brake pedal, adjustable HS/FX
12	1	33 0115 1	bent, adjustment brake pedal HS/FX since 1/2001
13	1	04 0114 3	clutch pedal, adjustable HS/FX
14	1	04 0062 2	clutch cable, guided, HS/FX
15	1	04 0114 4	bent, adjustment clutch pedal HS/FX
16	1	0933 A2 8/40	hexagon screw A2 M08X40
17	2	0933 A2 8/25	hexagon screw A2 M08X25
18	1	0933 A2 8/20	hexagon screw A2 M08X20
19	1	0933 A2 6/20	hexagon screw A2 M06X20
20	4	0127 B A2 8	spring lock washer Form B A2 M8
21	1	0934 ZN 10/15	hexagon nut SW15 zinc plated M10
22	1	04 0041 2	spring seat, small
23	1	04 0040 2	spring, brake master cylinder
24	1	04 0031 2	push rod, brake master cylinder
25	1	04 0042 2	spring seat, big
26	1	04-00690-U-01	brake master cylinder since 12/07
27	3	0933 A2 8/30	hexagon screw A2 M08X30

Modell: rewaco FX4 Base Seite: 4

Pos.	Q'ty	Art.-No.	Article Description
28	1	39 0111 2	fork joint, master brake cylinder HS/FX
29	2	14 0017 2	aluminium ring for brake- and clutch pedal HS/FX
30	1	08-00580-F-01	frame FX
31	1	07-00192-U-01	screw plug M10x1
32	1	02-00193-U-01	gasket ring, copper 10x16x1

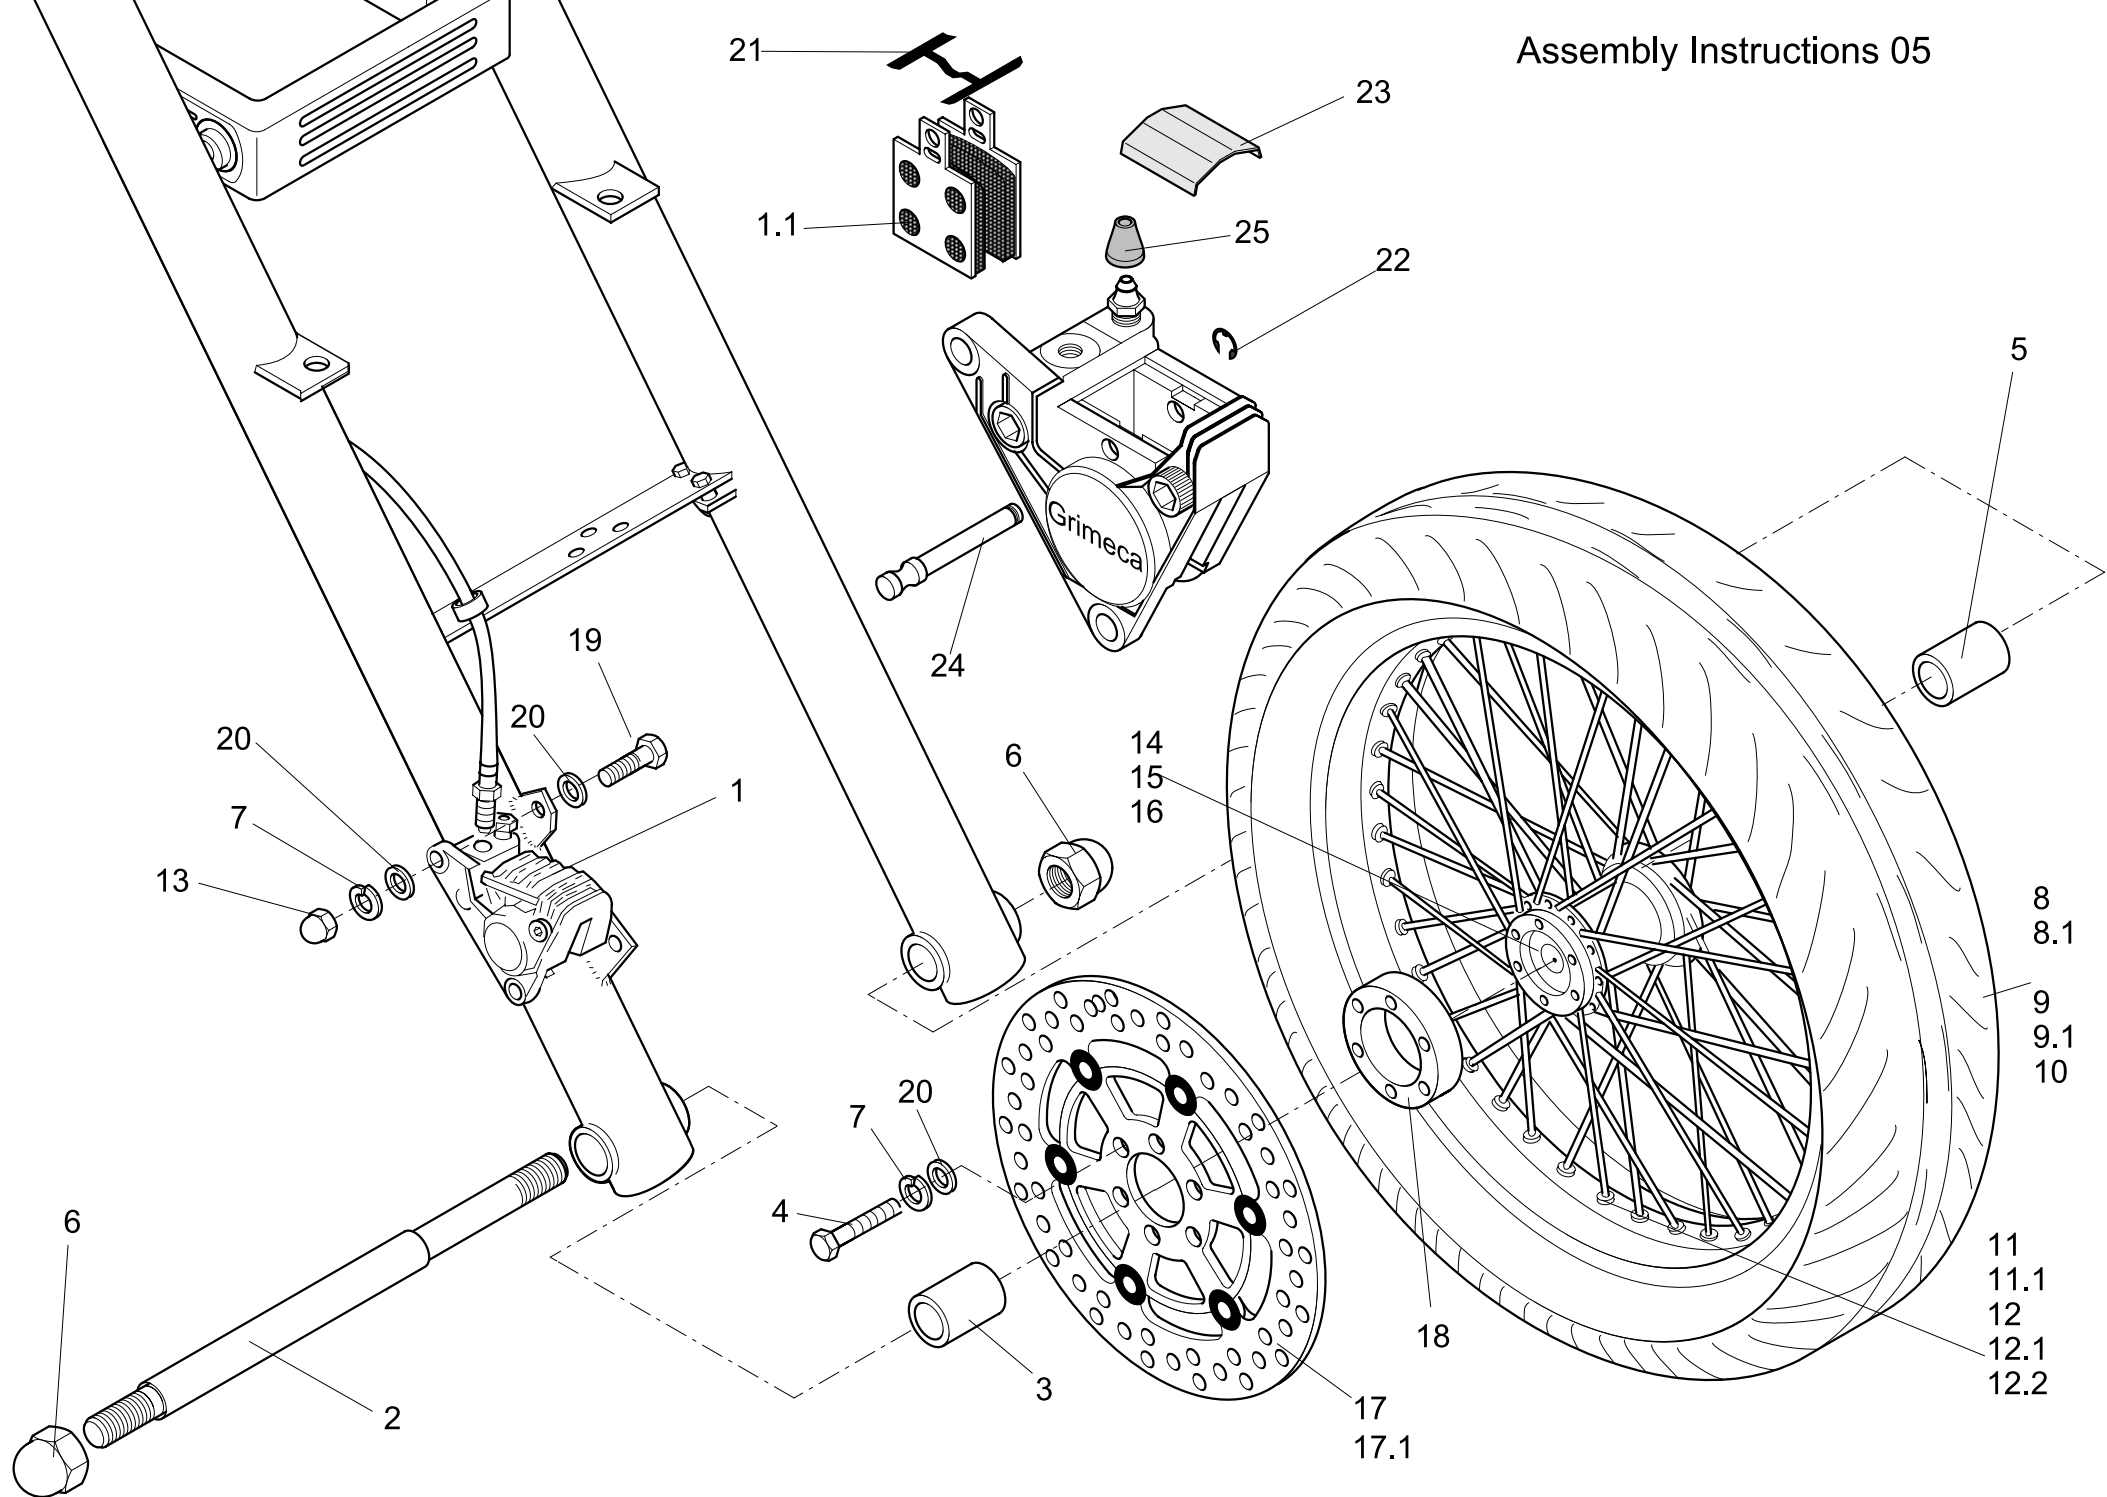

Modell: rewaco FX4 Base Seite: 5

Pos.	Q'ty	Art.-No.	Article Description
1	1	05 0120 2	brake caliper assy, front
1,1	1	05 0121 2	brake pads, front
2	1	05 1101 2	front axle, Sport-Line front end
3	1	05 0092 2	spacer 55mm, front wheel, Sport-Line, dia. 17mm
4	6	0933 A2 8/40	hexagon screw A2 M08X40
5	1	05 0073 1	spacer 55mm, front wheel, electr. speedometer, inner dia. 16mm
6	2	1587 16/1.5	acorn nut M16X1.5 chrome-plated
7	8	0127 B A2 8	spring lock washer Form B A2 M8
8	1	08-00096-D-01	tire 150/60R-17 66H
8,1	1	08-00081-D-01	tire 180/55 ZR17 Michelin
9	1	05 0025 2	tube for tire 150/60 17
9,1	1	05 0025 3	tube for tire 180/55-17
10	1	05 0035 2	rim band 17"
11	1	05 0045 2	rim - aluminium 4.50" x 17" (outer annulus only)
11,1	1	05 0050 1	rim - aluminium 5.00" x 17" (outer annulus only)
12	40	05 0170 2	spoke nipple M4, chrome plated
12,1	20	05 0171 2	spoke 180 ankle 95°, 17"
12,2	20	05 0181 2	spoke 180 ankle 80° 17"
13	2	1587 A2 8	acorn nut A2 M08
14	1	05 0141 2	hub, front wheel since 01/2001
15	1	05 0150 1	sleeve for wheel bearing
16	2	05 0160 2	wheel bearing 6303 2RSC, front wheel
17	1	05 0100 2	front brake disk
17,1	1	07 0170 3	punched front brake disk, stainless steel
18	1	05 0220 3	spacer washer, front brake disk, Sport-line front end since 1/2003
19	2	0933 A2 8/25	hexagon screw A2 M08X25
20	10	0125 A2 8	washer A2 M8


Modell: rewaco FX4 Base Seite: 5

Pos.	Q'ty	Art.-No.	Article Description
21	1	02-00007-D-01	spring, brake caliper assy, front
22	1	02-00010-D-01	circlip, brake caliper assy, front
23	1	02-00011-D-01	dust cover, brake caliper assy, front
24	1	02-00008-D-01	pin, brake caliper assy, front
25	1	04-00203-D-01	rubber cap, bleeder valve, brake caliper assembly, front

This technical diagram illustrates the assembly of a vehicle's rear suspension and wheel. The components are numbered as follows:

- 1, 1.1:** Brake master cylinder and its mounting bracket.
- 2:** Rear axle shaft.
- 3:** Rear axle nut.
- 4:** Axle pin.
- 5:** Rear brake disc.
- 6:** Axle pin nut.
- 7:** Axle pin washers.
- 8:** Axle pin lock nut.
- 9:** Axle pin lock washers.
- 10:** Axle pin lock cap.
- 11:** Wheel hub nut.
- 12:** Wheel hub washer.
- 13:** Wheel hub.
- 14:** Wheel hub flange.
- 15:** Wheel hub pin.
- 16:** Wheel hub cap.
- 17, 17.1, 17.2, 17.3:** Wheel rim.
- 18:** Wheel rim flange.
- 19, 19.1, 19.2:** Wheel rim hub.
- 20:** Wheel rim nut.
- 21:** Wheel rim lock cap.
- 22:** Wheel rim lock pin.
- 23:** Wheel rim lock washer.
- 24:** Wheel rim lock pin.
- 25:** Wheel rim lock cap.

The diagram shows the master cylinder (1) mounted on the frame (1.1) and connected to the brake disc (5) via a line. The axle (2) is shown with its pin (4) and nut (6). The wheel assembly (11-17) is shown being mounted onto the axle. The wheel rim (17) is shown with its flange (18) and hub (19). The wheel rim lock cap (21) is shown being installed on the wheel rim (17).

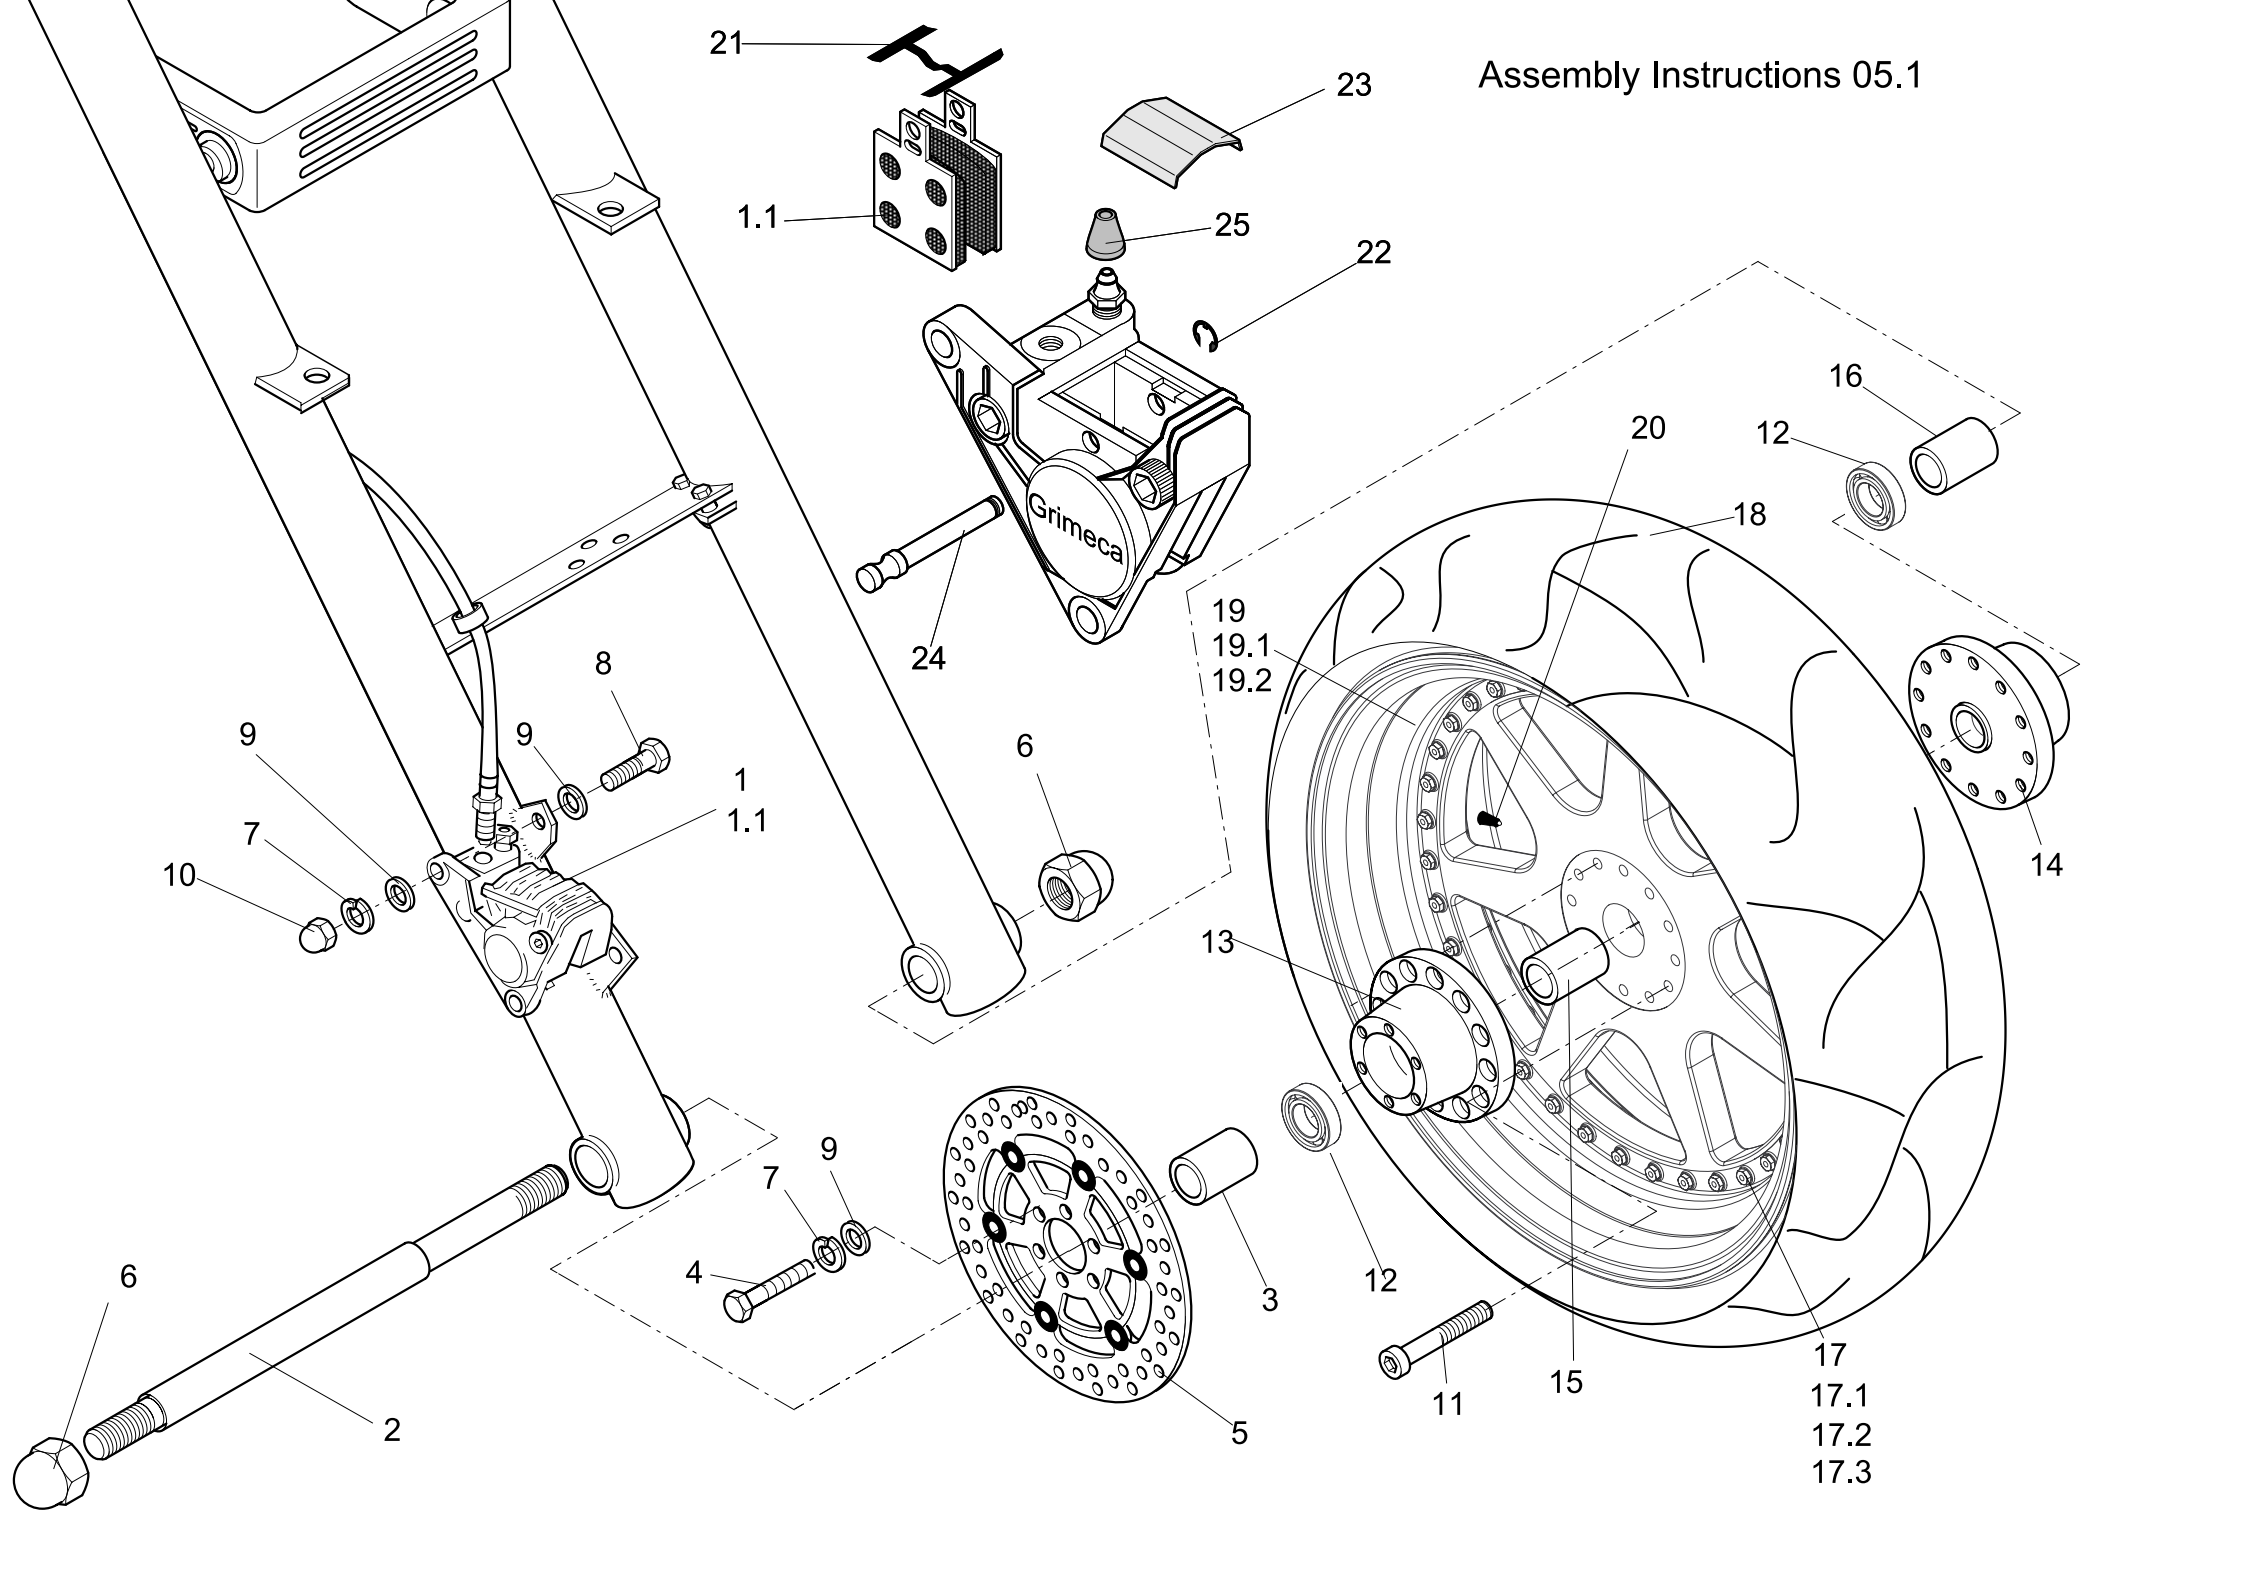


Modell: rewaco FX4 Base Seite: 5,1

Pos.	Q'ty	Art.-No.	Article Description
1	1	05 0120 2	brake caliper assy, front
1,1	1	05 0121 2	brake pads, front
2	1	05 1101 2	front axle, Sport-Line front end
3	1	05 0092 2	spacer 55mm, front wheel, Sport-Line, dia. 17mm
4	6	0933 A2 8/20	hexagon screw A2 M08X20
5	1	07 0170 3	punched front brake disk, stainless steel
6	2	1587 16/1.5	acorn nut M16X1.5 chrome-plated
7	8	0127 B A2 8	spring lock washer Form B A2 M8
8	2	0933 A2 8/25	hexagon screw A2 M08X25
9	10	0125 A2 8	washer A2 M8
10	2	0934 A2 8	hexagon nut A2 M08
11	12	0912 A2 8/45	hexagon socket screw A2 M08x45
12	2	05 0160 2	wheel bearing 6303 2RSC, front wheel
13	1	05 0144.1	wheel hub for three-pc. rim, rh, 17 x 5.5", polished
14	1	05 0143.1	wheel hub for three-pc. rim, lh, 17 x 5.5", polished
15	1	05 0150 1	sleeve for wheel bearing
16	1	05 0073 1	spacer 55mm, front wheel, electr. speedometer, inner dia. 16mm
17	36	08-00065-D-01	screw, M7x1x32 for 3-pc. rim / 10.9 /steel, chrome plated
17,1	36	08-00066-D-01	screw, M7x1x32 for rear 3-pc. rim, stainless steel, gold color
17,2	36	01-00200-D-01	union nut for rear 3pc. rim M7x1x32, chrome plated steel
17,3	36	08-00068-D-01	collar nut for rear 3pc. rim M7x1x32/steel, gold color
18	1	08-00082-D-01	tire 200/50 ZR17 Michelin Pilot Sport
19	1	40.1111.1.2	center disc, 17", front wheel, polished X004
19,1	1	40.1116.1	rim well, 2.5" x 17", polished, without valve bung, X006

Modell: rewaco FX4 Base Seite: 5,1

Pos.	Q'ty	Art.-No.	Article Description
19,2	1	40.1117.1	rim well, 2.5" x 17", polished, with valve bung, X003
20	1	08-00139-U-01	valve for aluminium rims 8.3x25
21	1	02-00007-D-01	spring, brake caliper assy, front
22	1	02-00010-D-01	circlip, brake caliper assy, front
23	1	02-00011-D-01	dust cover, brake caliper assy, front
24	1	02-00008-D-01	pin, brake caliper assy, front
25	1	04-00203-D-01	rubber cap, bleeder valve, brake caliper assembly, front

Assembly Instructions 06

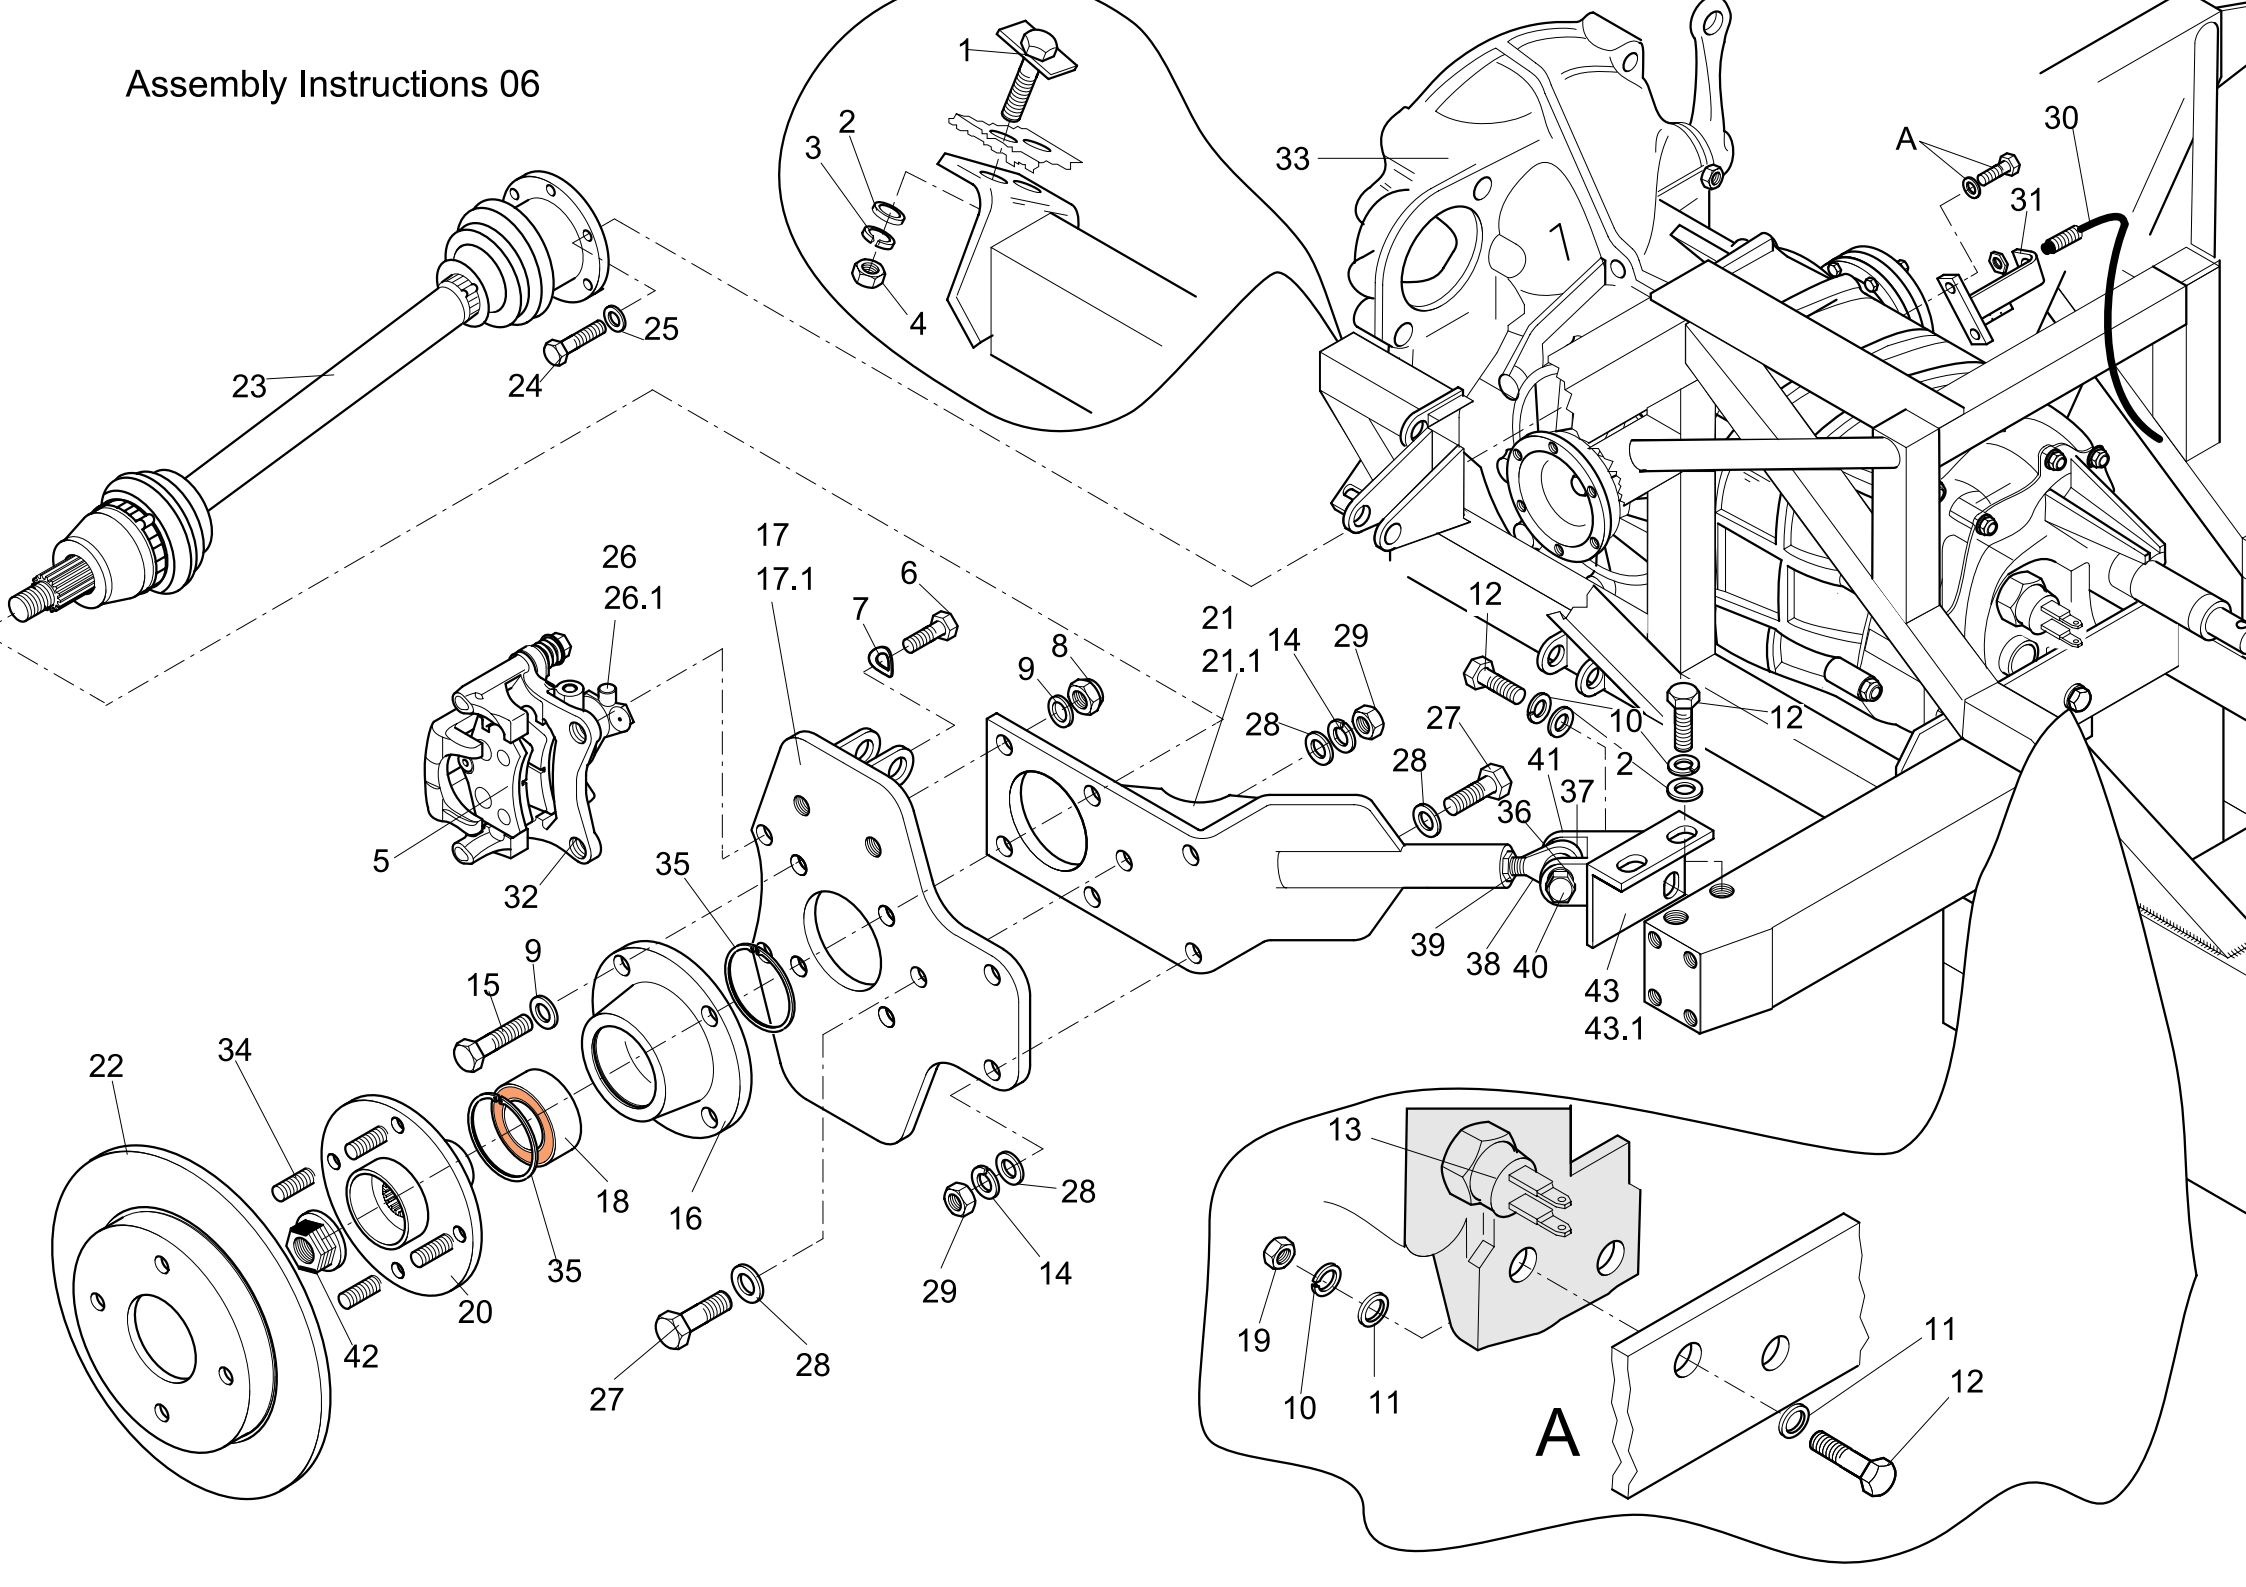


Modell: rewaco FX4 Base Seite: 6

Pos.	Q'ty	Art.-No.	Article Description
1	4	04-00200-F-01	hexagon screw ZN M10x35 with welded plate for fixation of the bell housing FX
2	12	7349 ZN 10/25/4	washer zinc M10X25X4
3	4	0127 A ZN 10	spring lock washer A zinc plated M10
4	4	0934 A2 12	hexagon nut A2 M12
5	1	EAGDB472	rear brake pads FX/RF
6	4	0933 ZN 10/30	hexagon screw zinc plated M10X30
7	4	0137 B ZN 10	spring lock washer Form B zinc plated M10
8	8	0985 ZN 10	hexagon nut, self-locking zinc plated M10
9	16	0125 A2 10	washer A2 M10
10	10	0127 B A2 10	spring lock washer Form B A2 M10
11	4	0125 ZN 10	washer zinc plated M10
12	10	0933 A2 10/30	hexagon screw A2 M10X30
13	1	06 0030 2	switch, reversing lamp, VW
14	6	0127 A ZN 12	spring lock washer A zinc plated M12
15	8	0933 A2 10/35	hexagon screw A2 M10X35
16	2	08-00569-E-01	bearing cover, wheel bearing, FX
17	1	08-00568-E-01	support, wheel hub, FX, rh
17,1	1	08-00576-E-01	support, wheel hub, FX, lh
18	2	05 0175 1.1	wheel bearing RF1 and FX
19	2	0934 ZN 10/15	hexagon nut SW15 zinc plated M10
20	2	08-00107-U-01	wheel hub FX, 4x130, drilled, since 08/2006
21	1	08-00566-E-01	transverse control arm, FX, lh
21,1	1	08-00567-E-01	transverse control arm, FX, rh
22	2	07 0170 1	rear brake disk, 4 holes, FX, hole circle 130mm, since 04/2006 D253/d10.5/h 33.2
23	2	04-00201-E-01	drive shaft, FX, rh/lh
24	12	0933 10.9 ZN 8/20	hexagon screw 10.9 zinc plated M08X20
25	12	0125 A2 8	washer A2 M8

Modell: rewaco FX4 Base Seite: 6

Pos.	Q'ty	Art.-No.	Article Description
26	1	35 0010 2	rear brake caliper, rh
26,1	1	35 0011 2	rear brake caliper, lh
27	6	0933 ZN 12/40	hexagon screw zinc plated M12X40
28	12	0125 A2 12	washer A2 M12
29	6	0934 A2 12	hexagon nut A2 M12
30	1	18 0072 1	active sensor, ROAD
31	1	08-00126-F-01	holder, speed sensor FX at the rear axle
32	2	35 0017 1	brake bracket for brake pads FX/RF since 04/2006
33	1	EA080/300041/10	IRS transmission since 04/2006 with final ratio 3.88
34	8	00-00003-M-01	milled bolt for wheel hub M14x1.5x40
35	4	04-00692-B-01	circlip 77x2
36	4	0125 ZN 16	washer zinc plated M16
37	4	08-00581-01	shim, inner dia.: 16.1, outer dia.: 22/3.35mm for transverse control arm
38	2	08-00047-C-01	swivel head, dia. 16mm/ maintenance free
39	2	07-00196-U-01	hexagon nut, zinc plated, M16 (flat) DIN 0982
40	2	0931 16/55VZ	hexagon screw M16x55 galvanized
41	2	0985 ZN 16	hexagon nut, self-locking zinc plated M16
42	2	03-00559-E-01	nut for drive shaft FX/ RF
43,1	1	08-00710-E-01	transverse control arm, FX, rh
43,1	1	08-00709-E-01	transverse control arm, FX, lh


Assembly Instructions 07

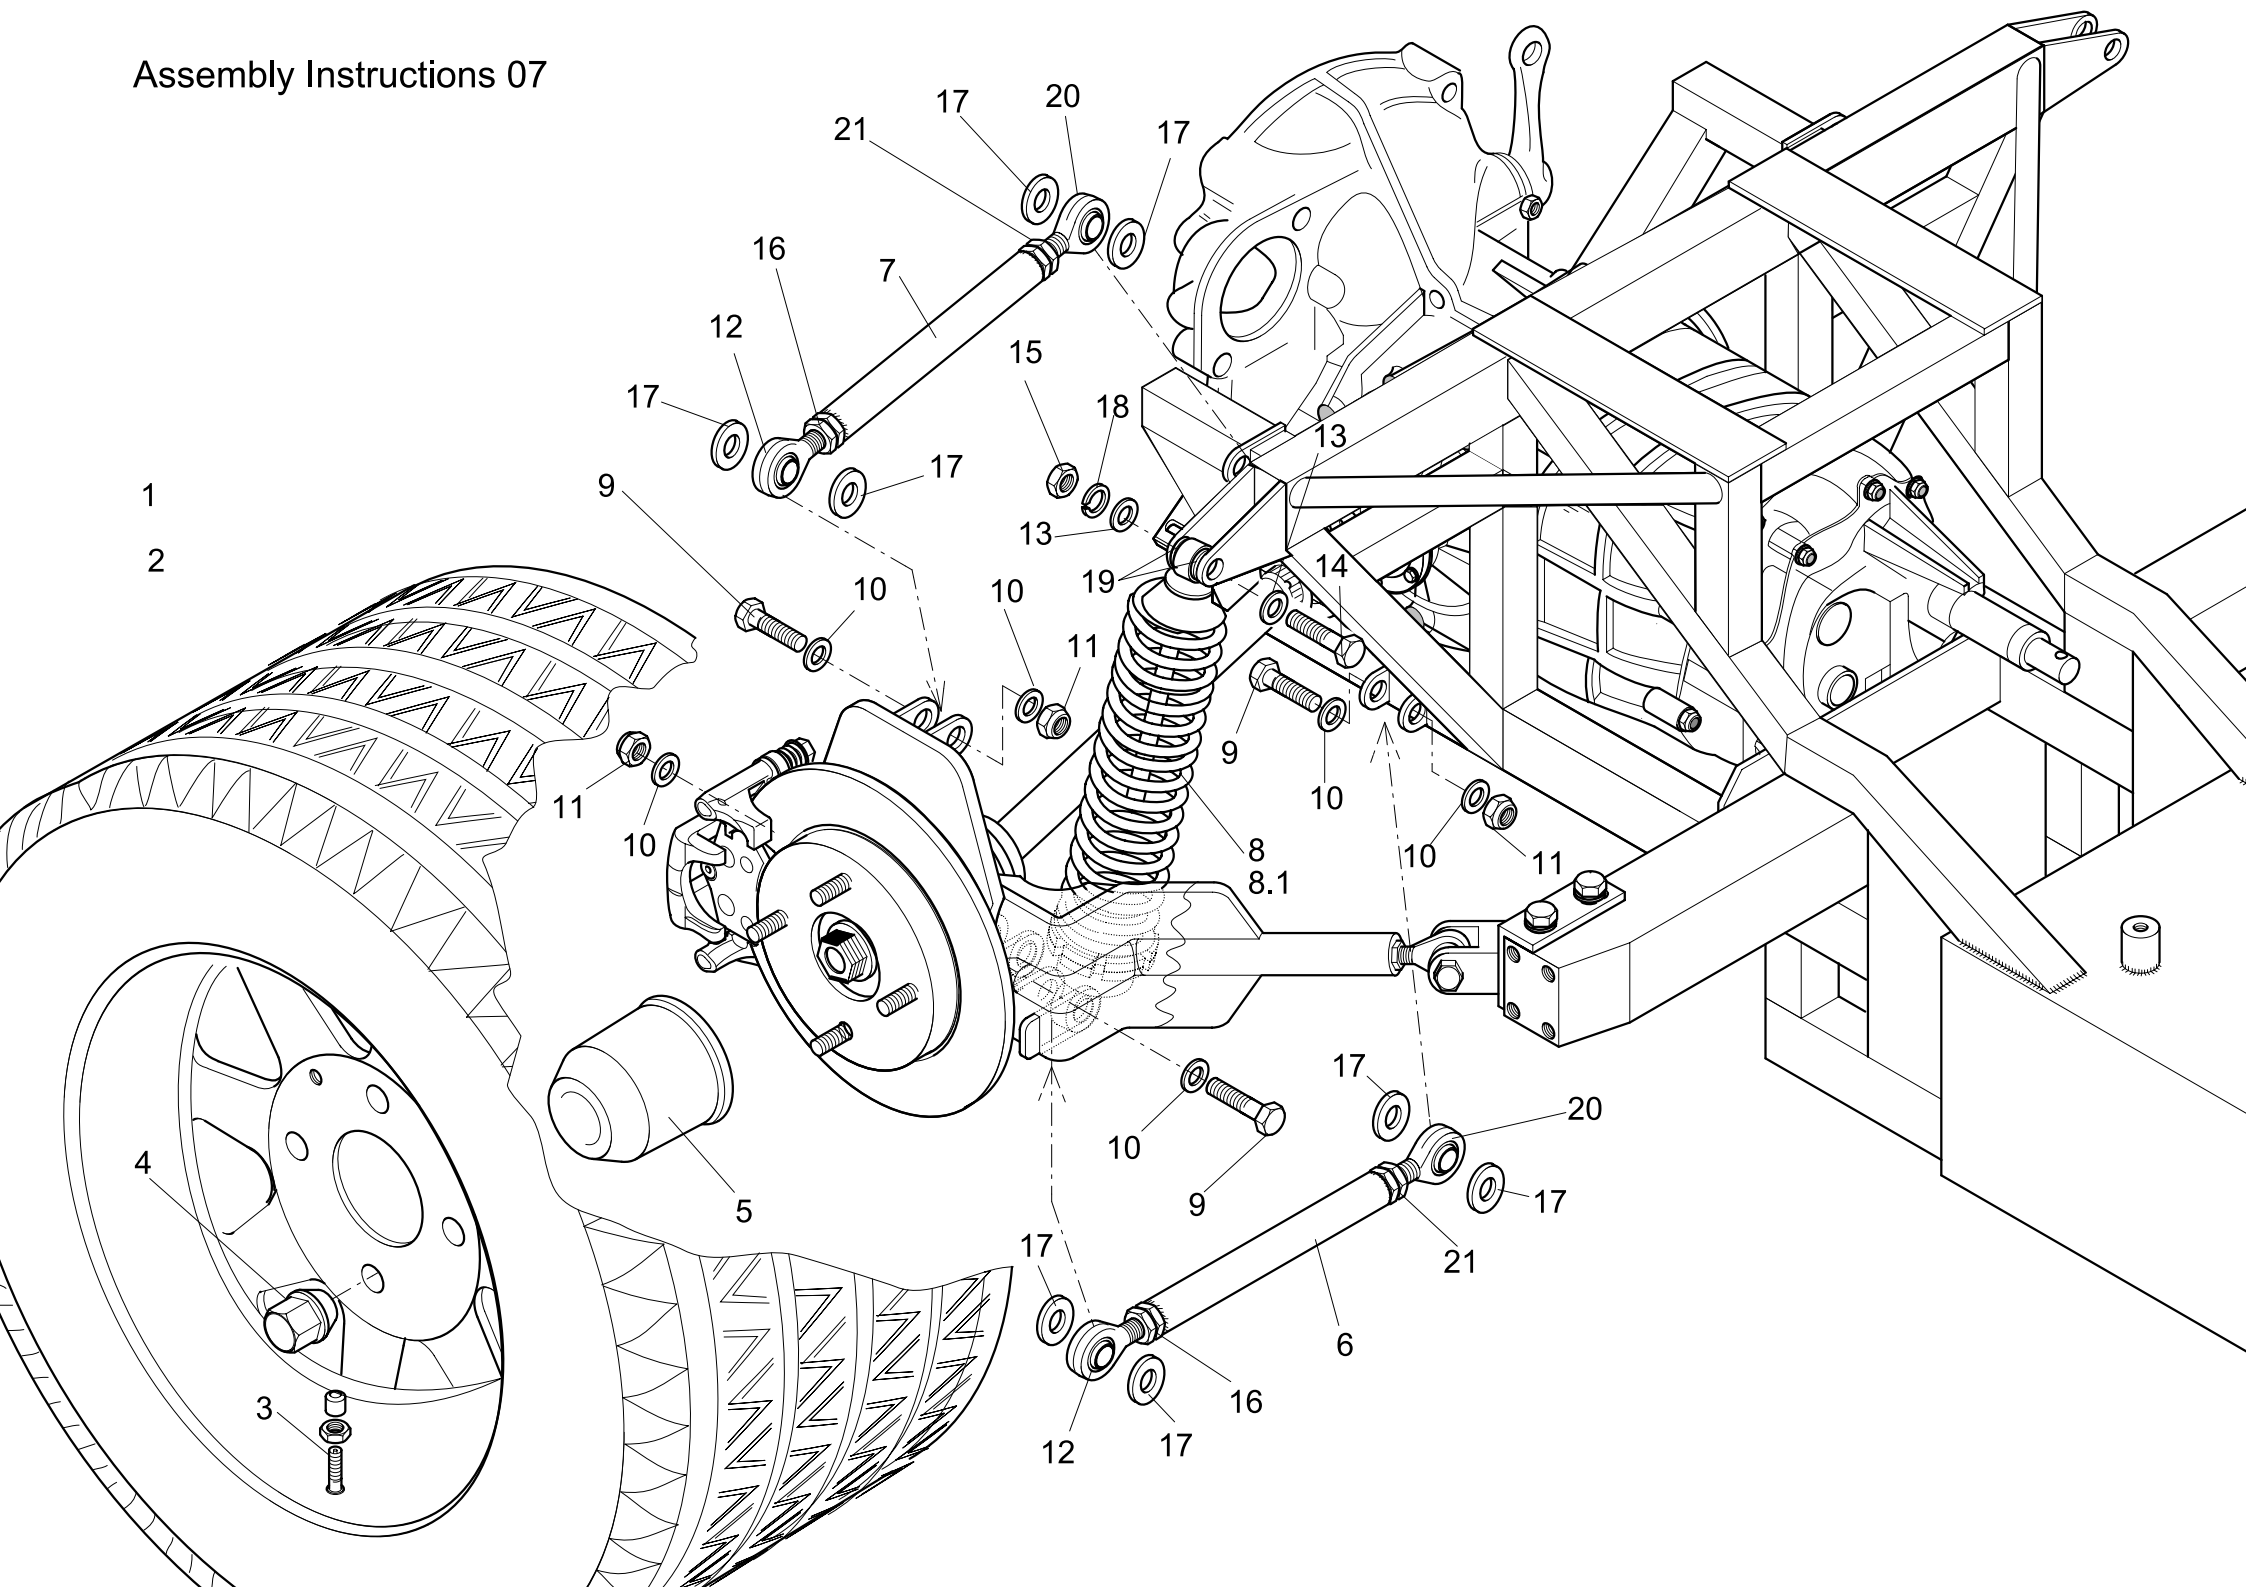

Modell: rewaco FX4 Base Seite: 7

Pos.	Q'ty	Art.-No.	Article Description
1	2	08 0085 2	rim 10X15 ET -37 chrome-plated US Wheels
2	2	08 0075 2.1	tire 295/50 R 15
3	2	08-00140-U-01	valve for steel rims 11.3x43
4	8	08-00083-U-01	wheel nuts, closed, for chrome/steel rim / M14x1.5x35, conus 60°, sw 19, class 8, chrome plated
5	2	08 1087 2	center cap for US Wheel
6	2	08-00572-F-01	lower brace, transverse control arm, FX
7	2	08-00573-F-01	upper brace, transverse control arm, FX
8	2	33 1781 2.1	shock absorber, Bilstein, without spring, HS since 01/2001 and all FX models front and rear/RF1, front end only
8,1	2	08-00114-01	spring, shock absorber, rear axle, FX
9	8	0931 ZN 16/60	hexagon screw zinc plated M16X60
10	16	0125 ZN 16	washer zinc plated M16
11	8	0985 ZN 16	hexagon nut, self-locking zinc plated M16
12	4	08-00047-C-01	swivel head, dia. 16mm/ maintenance free
13	8	0125 ZN 12	washer zinc plated M12
14	2	0933 ZN 12/60	hexagon screw zinc plated M12X60
15	2	0934 A2 12	hexagon nut A2 M12
16	4	07-00196-U-01	hexagon nut, zinc plated, M16 (flat) DIN 0982
17	16	08-00581-01	shim, inner dia.: 16.1, outer dia.: 22/3.35mm for transverse control arm
18	2	0127 B A2 12	spring lock washer Form B A2 M12
19	8	08-00705-G-01	shim pos.19 seating shock absorber mounting
20	4	01-00697-C-01	swivel head, dia. 16mm/ maintenance free
21	4	0982 ZN 16 L	hexagon nut, M16, zinc plated, flat


Assembly Instructions 07.1

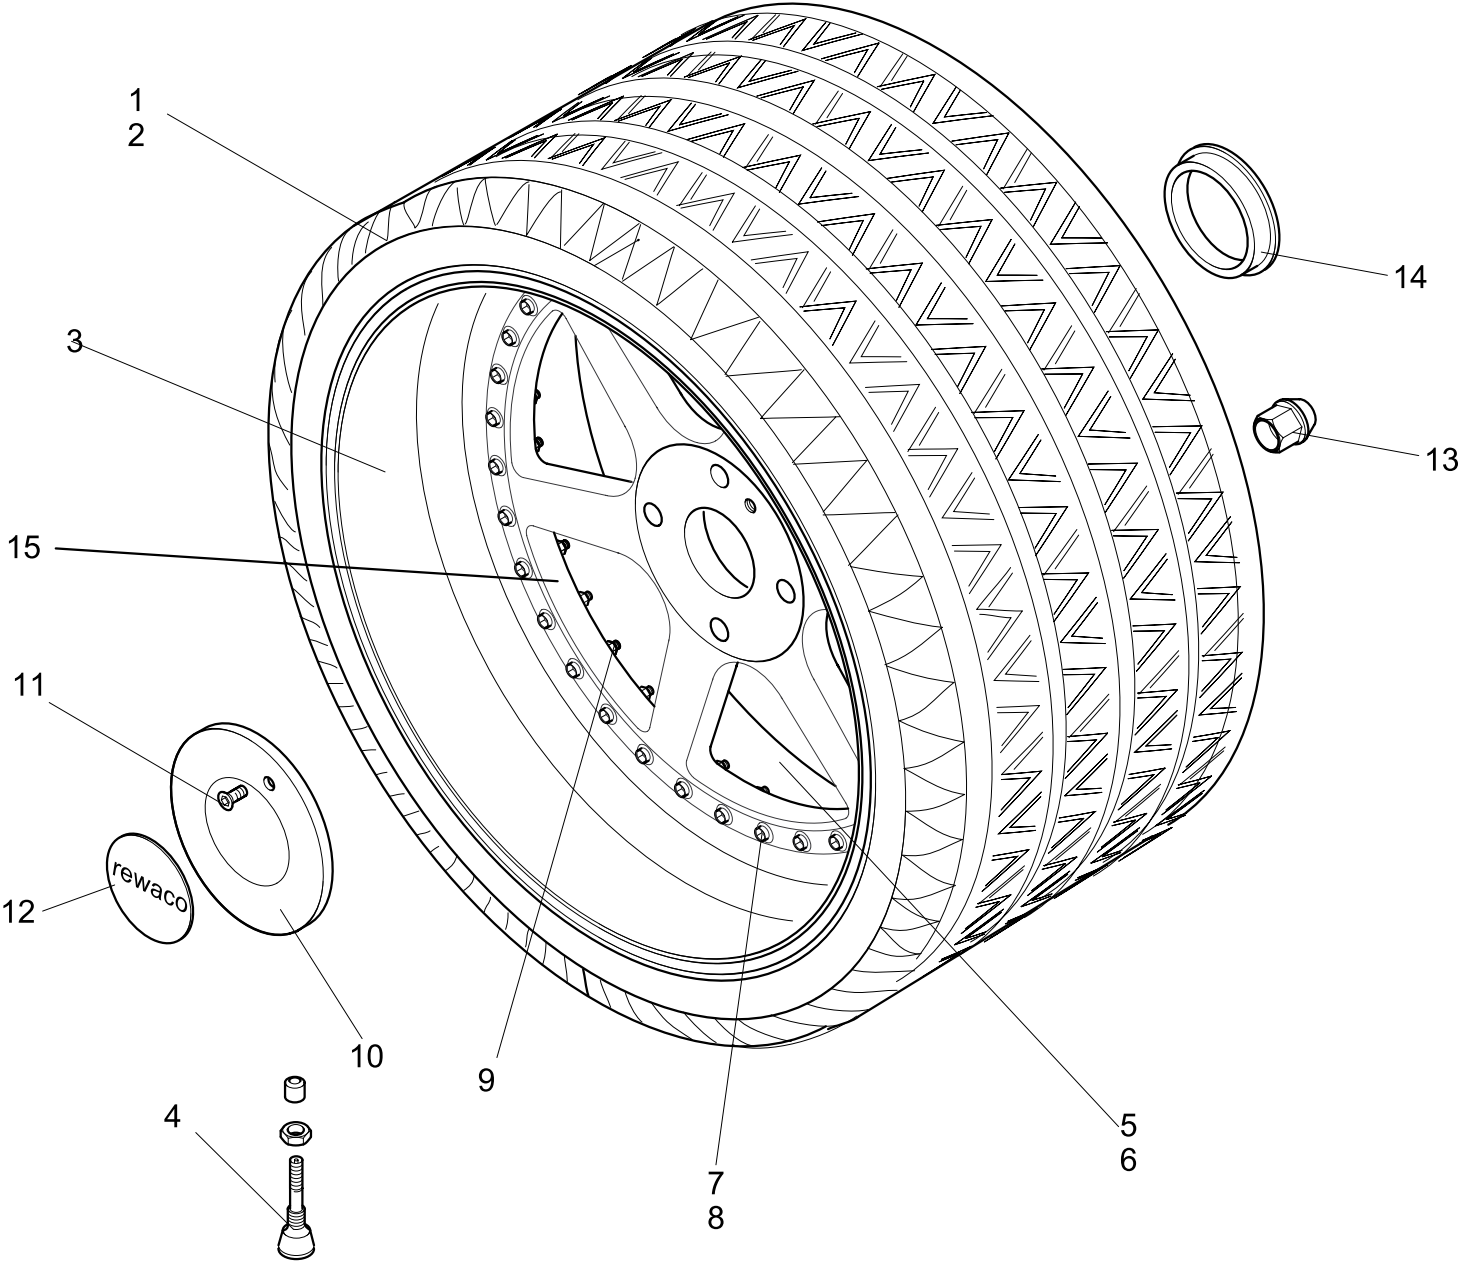

Modell: rewaco FX4 Base Seite: 7,1

Pos.	Q'ty	Art.-No.	Article Description
1	2	08-00121-01	tire 285/35 ZR18
2	2	08-00123-C-01	tire 335/30 ZR18 102Y
3	2	40.1113.1	rim well, 6" x 18", polished X001
4	2	EA20 0661 1	tire valve, metal valve for screwing in
5	2	40 1014.1	rim - aluminium, rim well by steps, 4.50 x 18, inner anulus FX4+FX6, 11"
6	2	08-00103-D-01	rim - aluminium, rim well by steps, 5.75 x 18, inner rim, FX4 + FX6, 12"
7	72	08-00065-D-01	screw, M7x1x32 for 3-pc. rim / 10.9 /steel, chrome plated
8	72	08-00066-D-01	screw, M7x1x32 for rear 3-pc. rim, stainless steel, gold color
9	72	08-00067-D-01	collar nut for rear 3pc. rim M7x1x32/steel, zinc plated
10	2	44 0011 1	cap for rim 11x18 and 12x18
11	2	09-00191-F-01	hexagon socket screw A2 M08X20
12	2	06-00717-U-01	decals rewaco logo, round bow
13	8	04-00189-E-01	open wheel nut M14x1.5x25, conus 60°, SW 19, class 8, zinc plated
14	2	08-00142-F-01	center ring FX4 for 3-pc. rim
15	2	40.1110.1.2	center disc, 18", hole circle 4x140, polished X005
16	2	08 0088 8	rim, 11x18", (3-pc.), hole circle 4/130, HS4/FX4 HS6/FX6
17	2	08-00119-D-01	rim, 12x18", (3-pc.), hole circle 4/130, HS4/FX4 HS6/FX6


Assembly Instructions 08

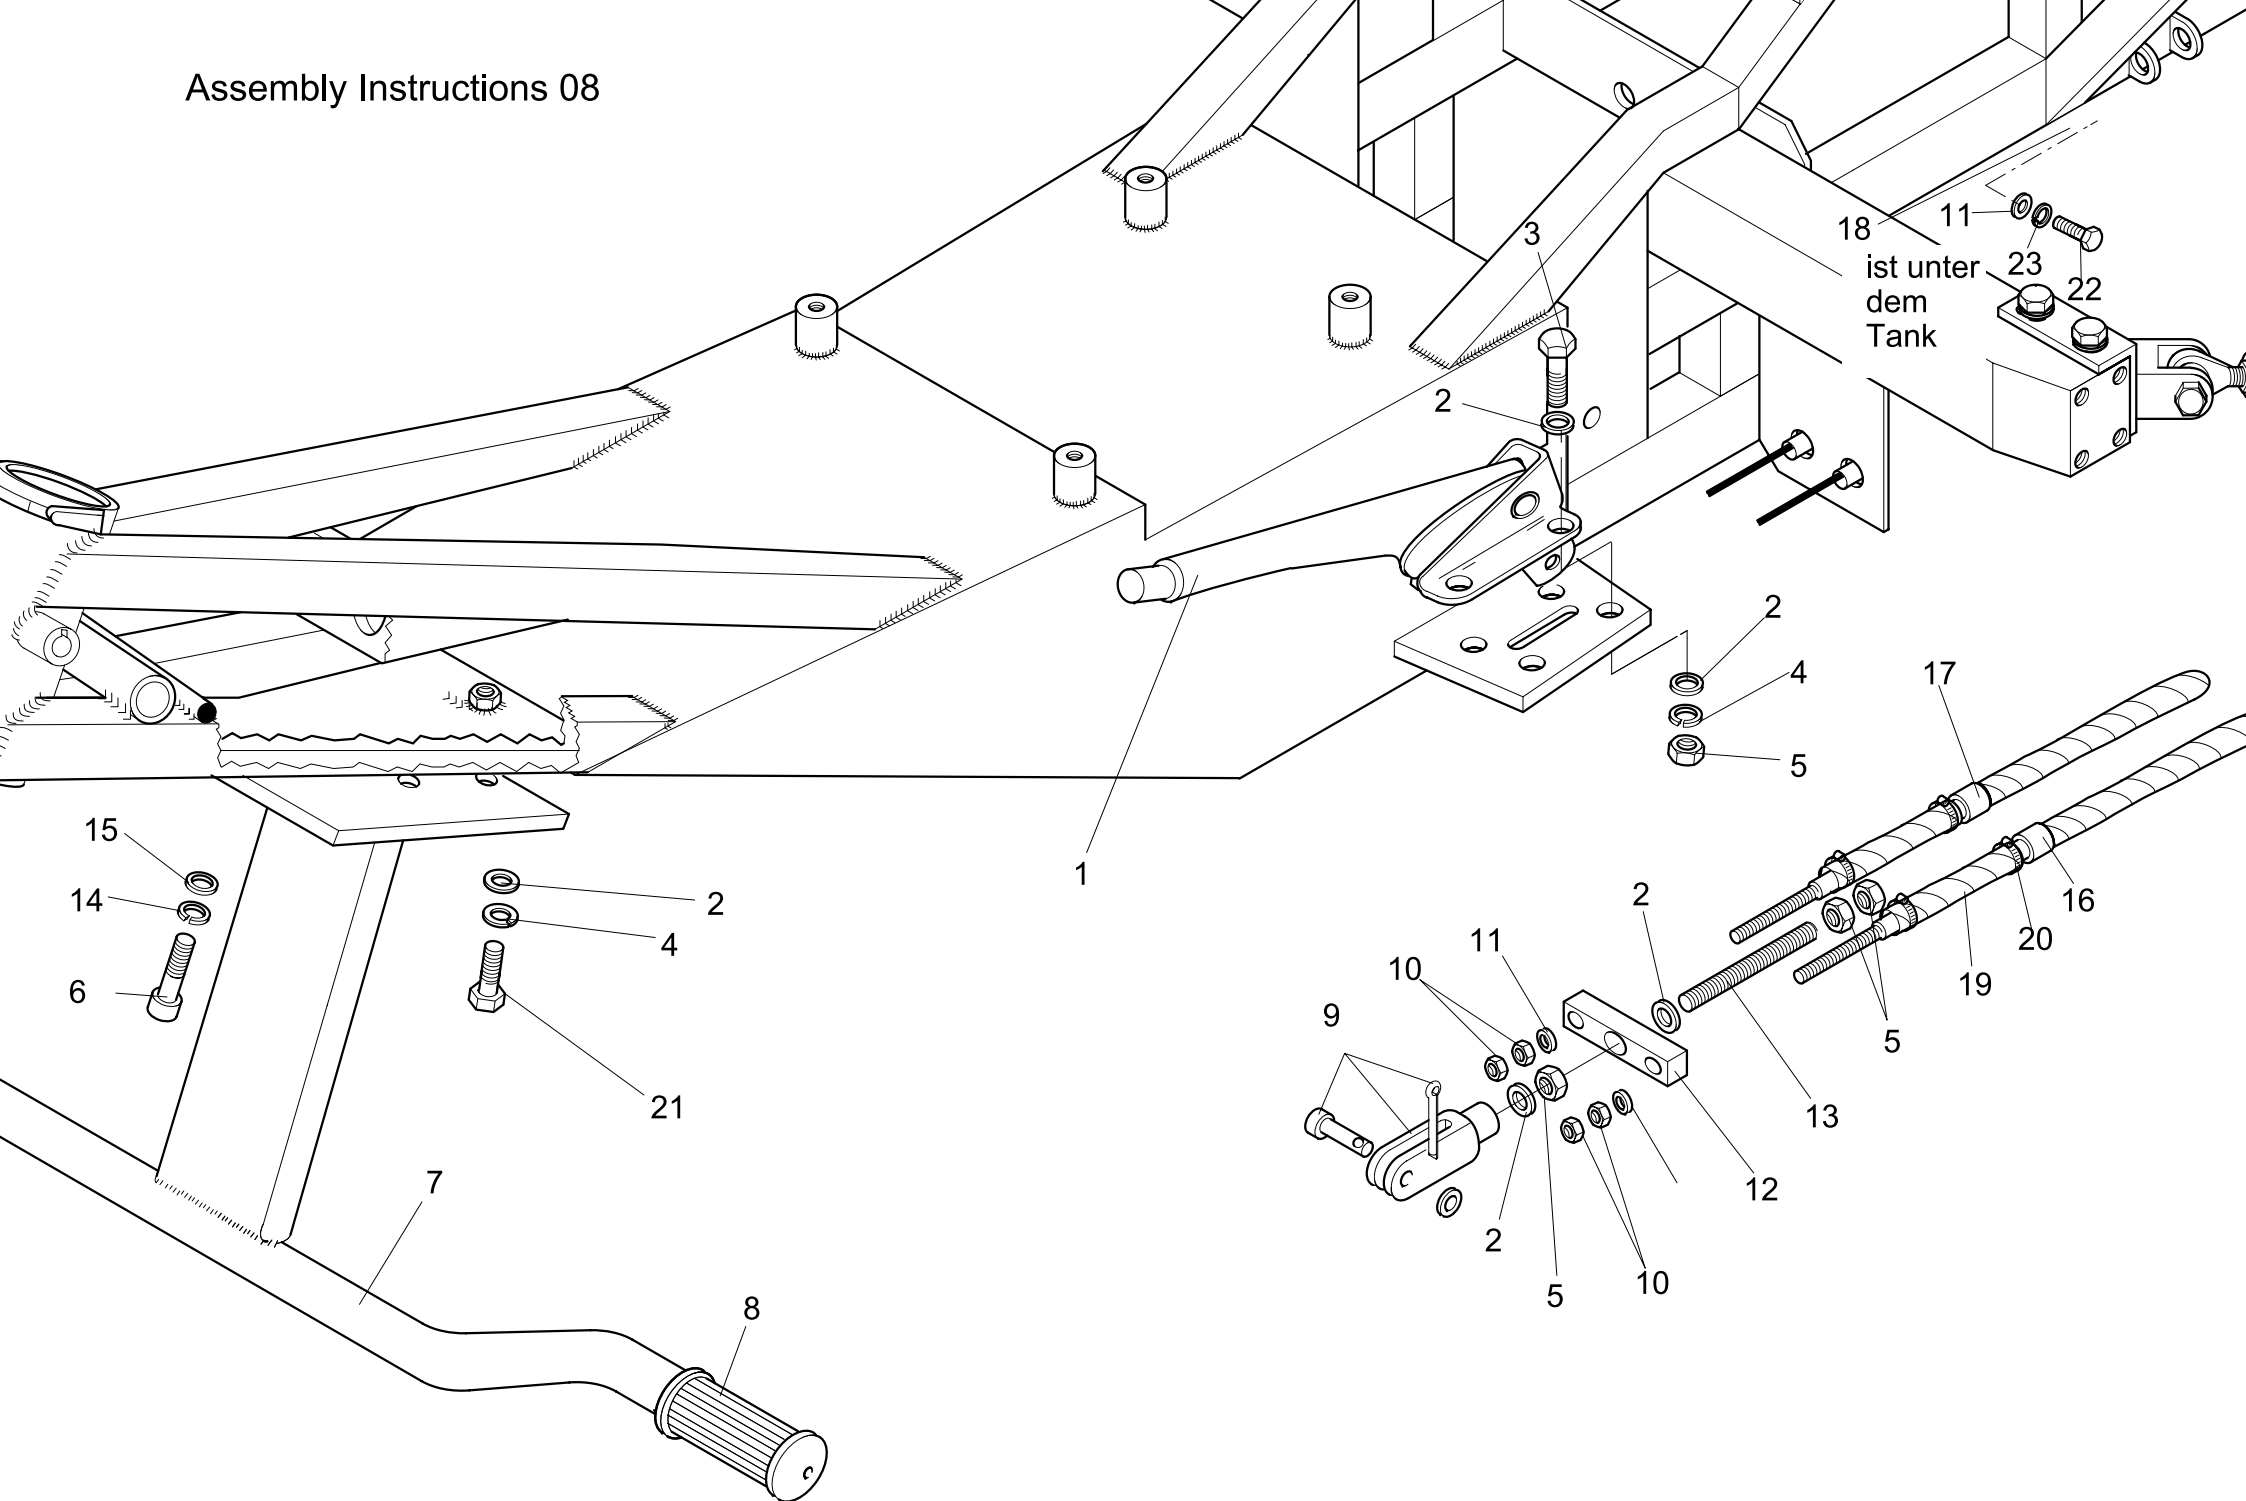

Modell: rewaco FX4 Base Seite: 8

Pos.	Q'ty	Art.-No.	Article Description
1	1	09 0010 2	parking brake lever
2	13	0125 A2 8	washer A2 M8
3	4	0933 A2 8/25	hexagon screw A2 M08X25
4	8	0127 B A2 8	spring lock washer Form B A2 M8
5	7	0934 A2 8	hexagon nut A2 M08
6	2	0912 A2 10/25	hexagon socket screw A2 M10X25
7	1	09 0021 1	footrest, front HS/FX chrome-plated
8	2	04 0090 2	footrest cover, rubber
9	1	09 0110 2	fork joint with bolt and cotter-pin for parking brake and trunk lid lock RF1, 8x32 VZ
10	4	0934 A2 6	hexagon nut A2 M06
11	3	0125 A2 6	washer A2 M6
12	1	09 0140 2.1	manifold for parking brake cable since 1/2001
13	1	0976 ZN 8/120	threaded bolt zinc plated M08X120
14	2	0127 B A2 10	spring lock washer Form B A2 M10
15	2	9021 A2 10	washer, body, A2 M10
16	1	33 0280 2	cable, parking brake (short) for disk brake
17	1	33 0270 2	cable, parking brake (long) for disk brake
18	3	0912 A2 10/35	hexagon socket screw A2 M10X35
19	4	04-00690-B-01	protection tube, brake cable
20	4	539 8 12	Zebra-hose clip B 7.5mm SW6 8-12
21	1	0933 A2 8/30	hexagon screw A2 M08X30
22	1	0933 A2 6/20	hexagon screw A2 M06X20
23	1	0127 B A2 6	spring lock washer Form B A2 M6

Assembly Instructions 09

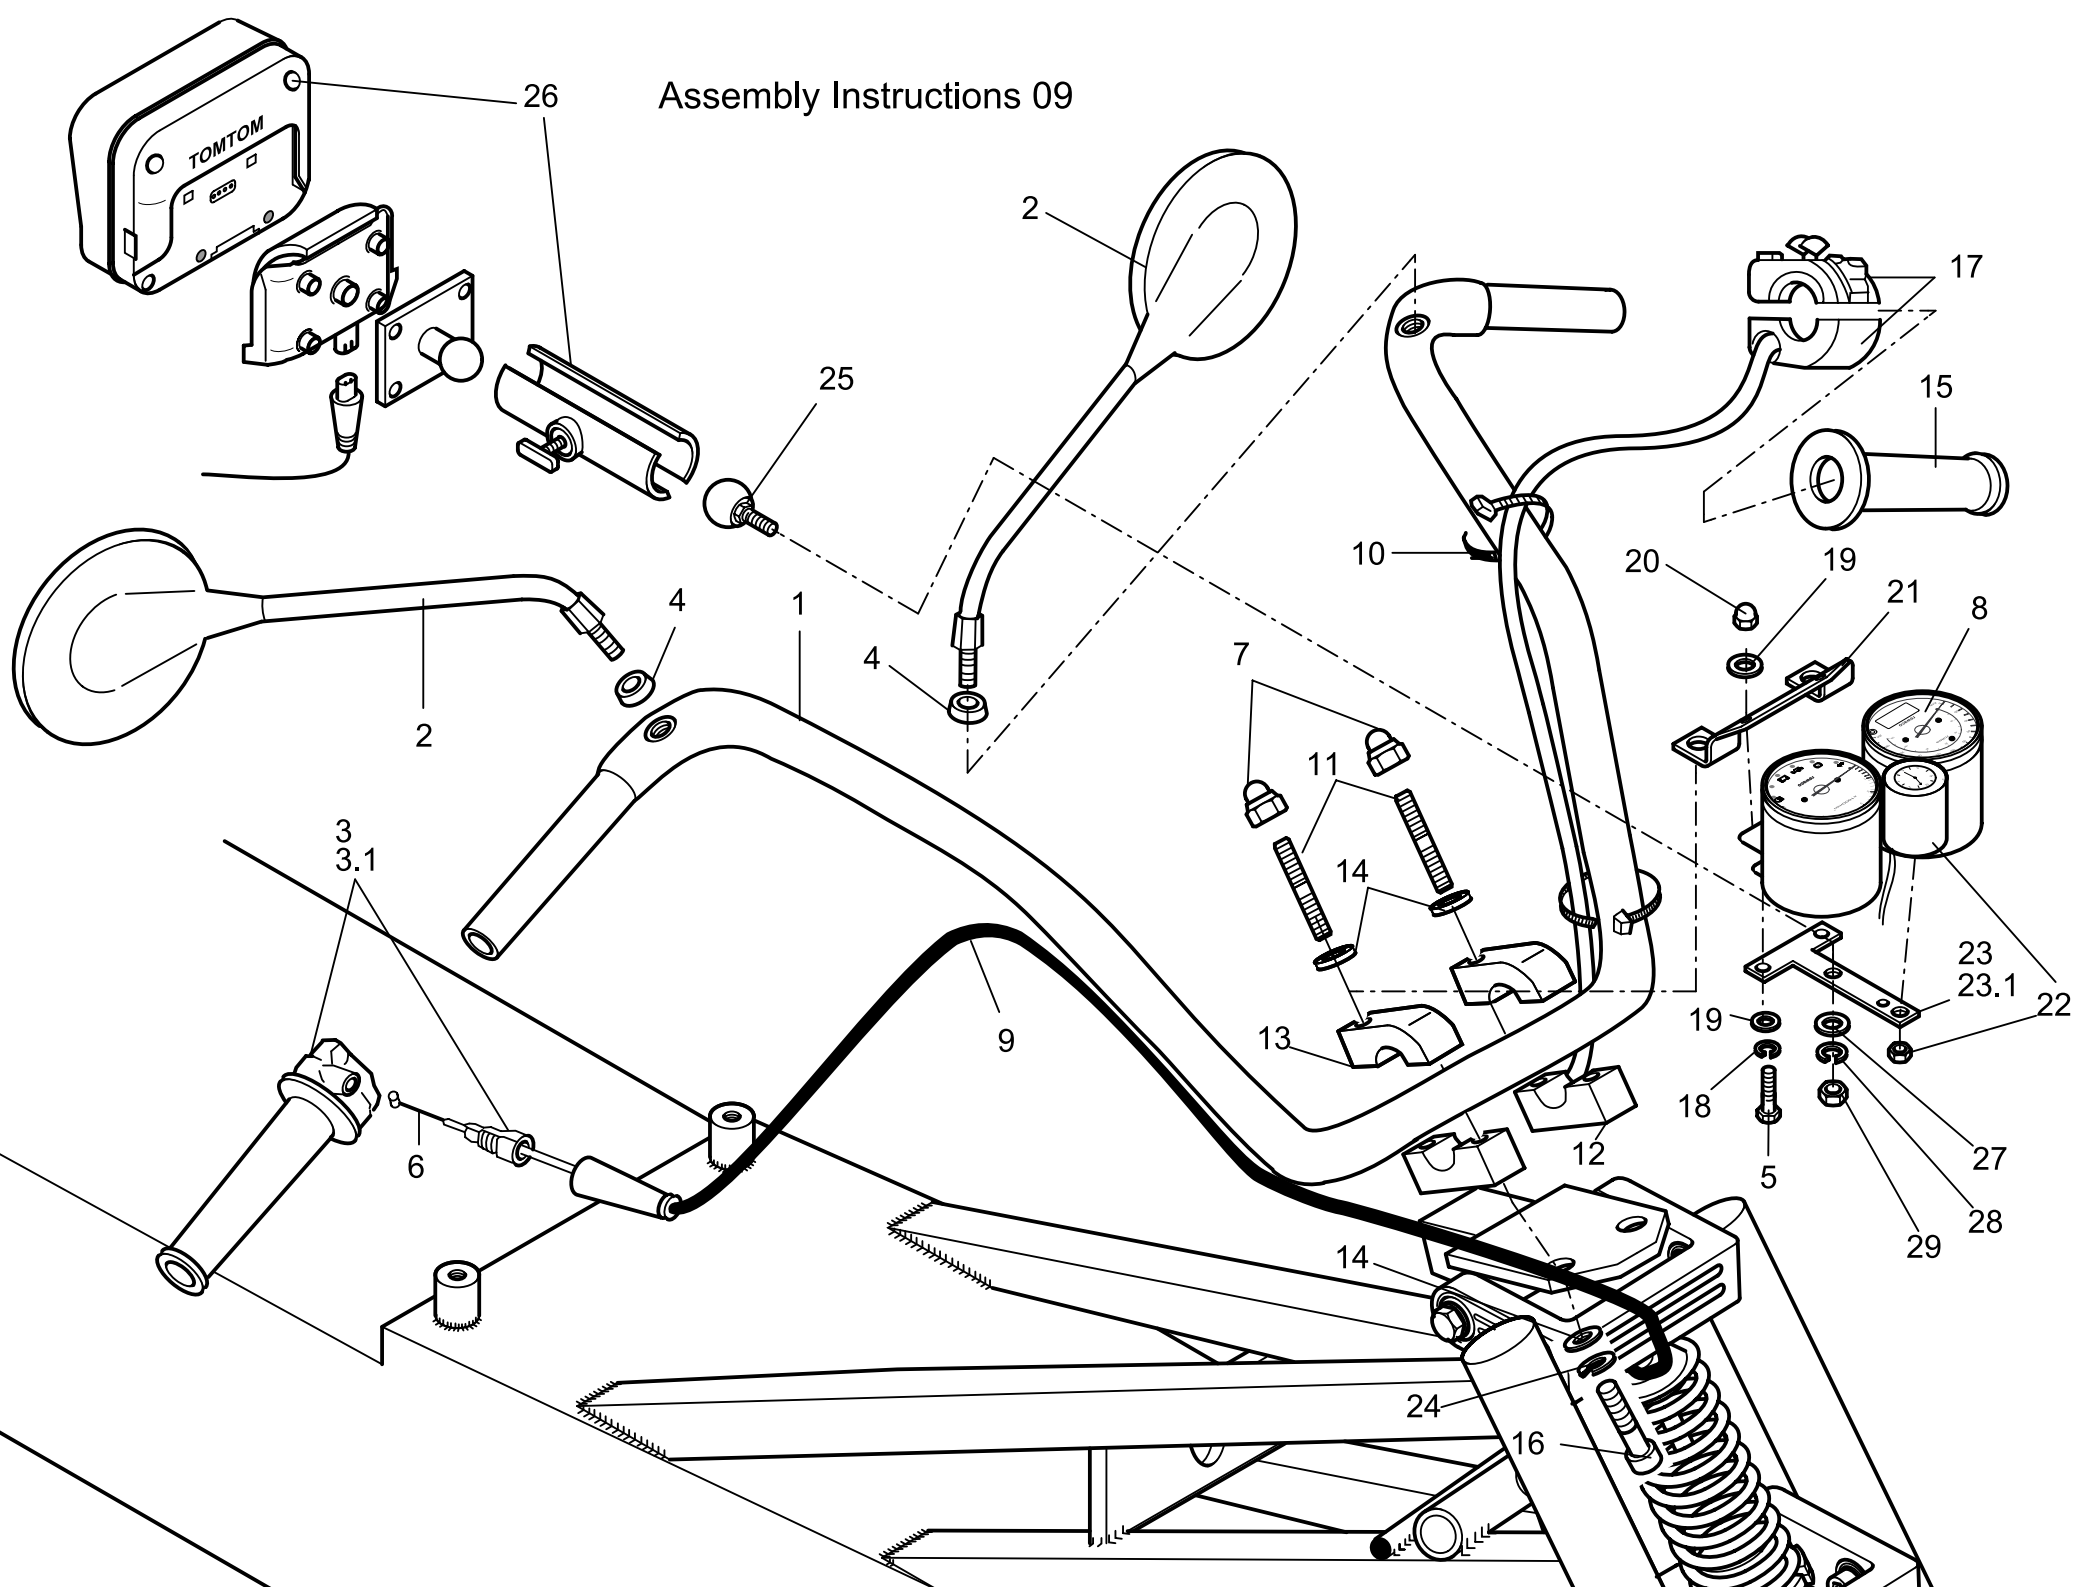


Modell: rewaco FX4 Base Seite: 9

Pos.	Stk.	Artikel-Nr	Artikel bezeichnung
1	1	10 0010 1.2	Lenker 28 mm in VA poliert HS/FX
2	2	22 1033 2	Spiegel verchromt mit M10 Gewinde
3	1	10 0150 2	Gasgriff Standard
3,1	1	10 0151 3	Gasgriff Alu poliert mit Feststeller
4	2	30-00527-01	Unterlegscheibe 5mm für Spiegelbefestigung d20 / Bohrung 11mm
5	2	0933 A2 6/35	Skt-Schraube A2 M06X35
6	1	34 2210 1	Gaszugseele in VA 3300 mm lang für HS/FX/RF
7	1	1587 A2 12.1	Hutmutter A2 M12
8	1	18 0074 1	Cockpit Instrumententafel Road mit E-Tacho und Drehzahlmesser
9	1	10 0100 1.1	Gaszug-Aussenhülle HS/FX/RF ohne Innenkabel
10	5	N1304850 S	Kabelbinder 4,8X200 mm
11	2	0938 ZN 12/40	Stiftschraube 8.8 ZN M12X40
12	2	10 0090 2	Lenkerklemmstück Unterteil
13	2	10 0080 2.1	Lenkerklemmstück Oberteil 28 mm
14	4	0125 A2 12	U-Scheibe A2 M12
15	1	10 0070 2	Griffgummi
16	2	0912 A2 12/45	Innensechskantschraube A2 M12X45 Innensechskantschraube 12/45 VA
17	1	22 6053 1	Schalterkombination ab 01/2005 (Ersetzt Schalterkombination Art.Nr. 22 6052 1)
18	2	0127 B A2 6	Federring Form B A2 M6
19	4	9021 A2 6	K-Scheibe A2 M6
20	2	1587 A2 6	Hutmutter A2 M06 / Hutmutter M6 VA
21	1	05 0122 2	Halter für Instrumententafel Road HS/FX
22	1	22 1045 1	Uhr verchromt / bis 09-08
23	1	08-00079-U-01	Halter Uhr für Road-Instrumente
23,1	1	06-00836-U-01	Halter Uhr für Style RF1

Modell: rewaco FX4 Base Seite: 9

Pos.	Stk.	Artikel-Nr	Artikel bezeichnung
24	2	0127 B A2 12	Federring Form B A2 M12 VA 12
25	1	06-00766-U-01	Kugel für Navi TomTom
26	1	05-00180-D-01	Navigationssystem TomTom Rider II D, A, CH
27	1	0125 A2 8	U-Scheibe A2 M8
28	1	0127 B A2 8	Federring Form B A2 M8
29	1	0934 A2 8	Skt-Mutter A2 M08

Assembly Instructions 10

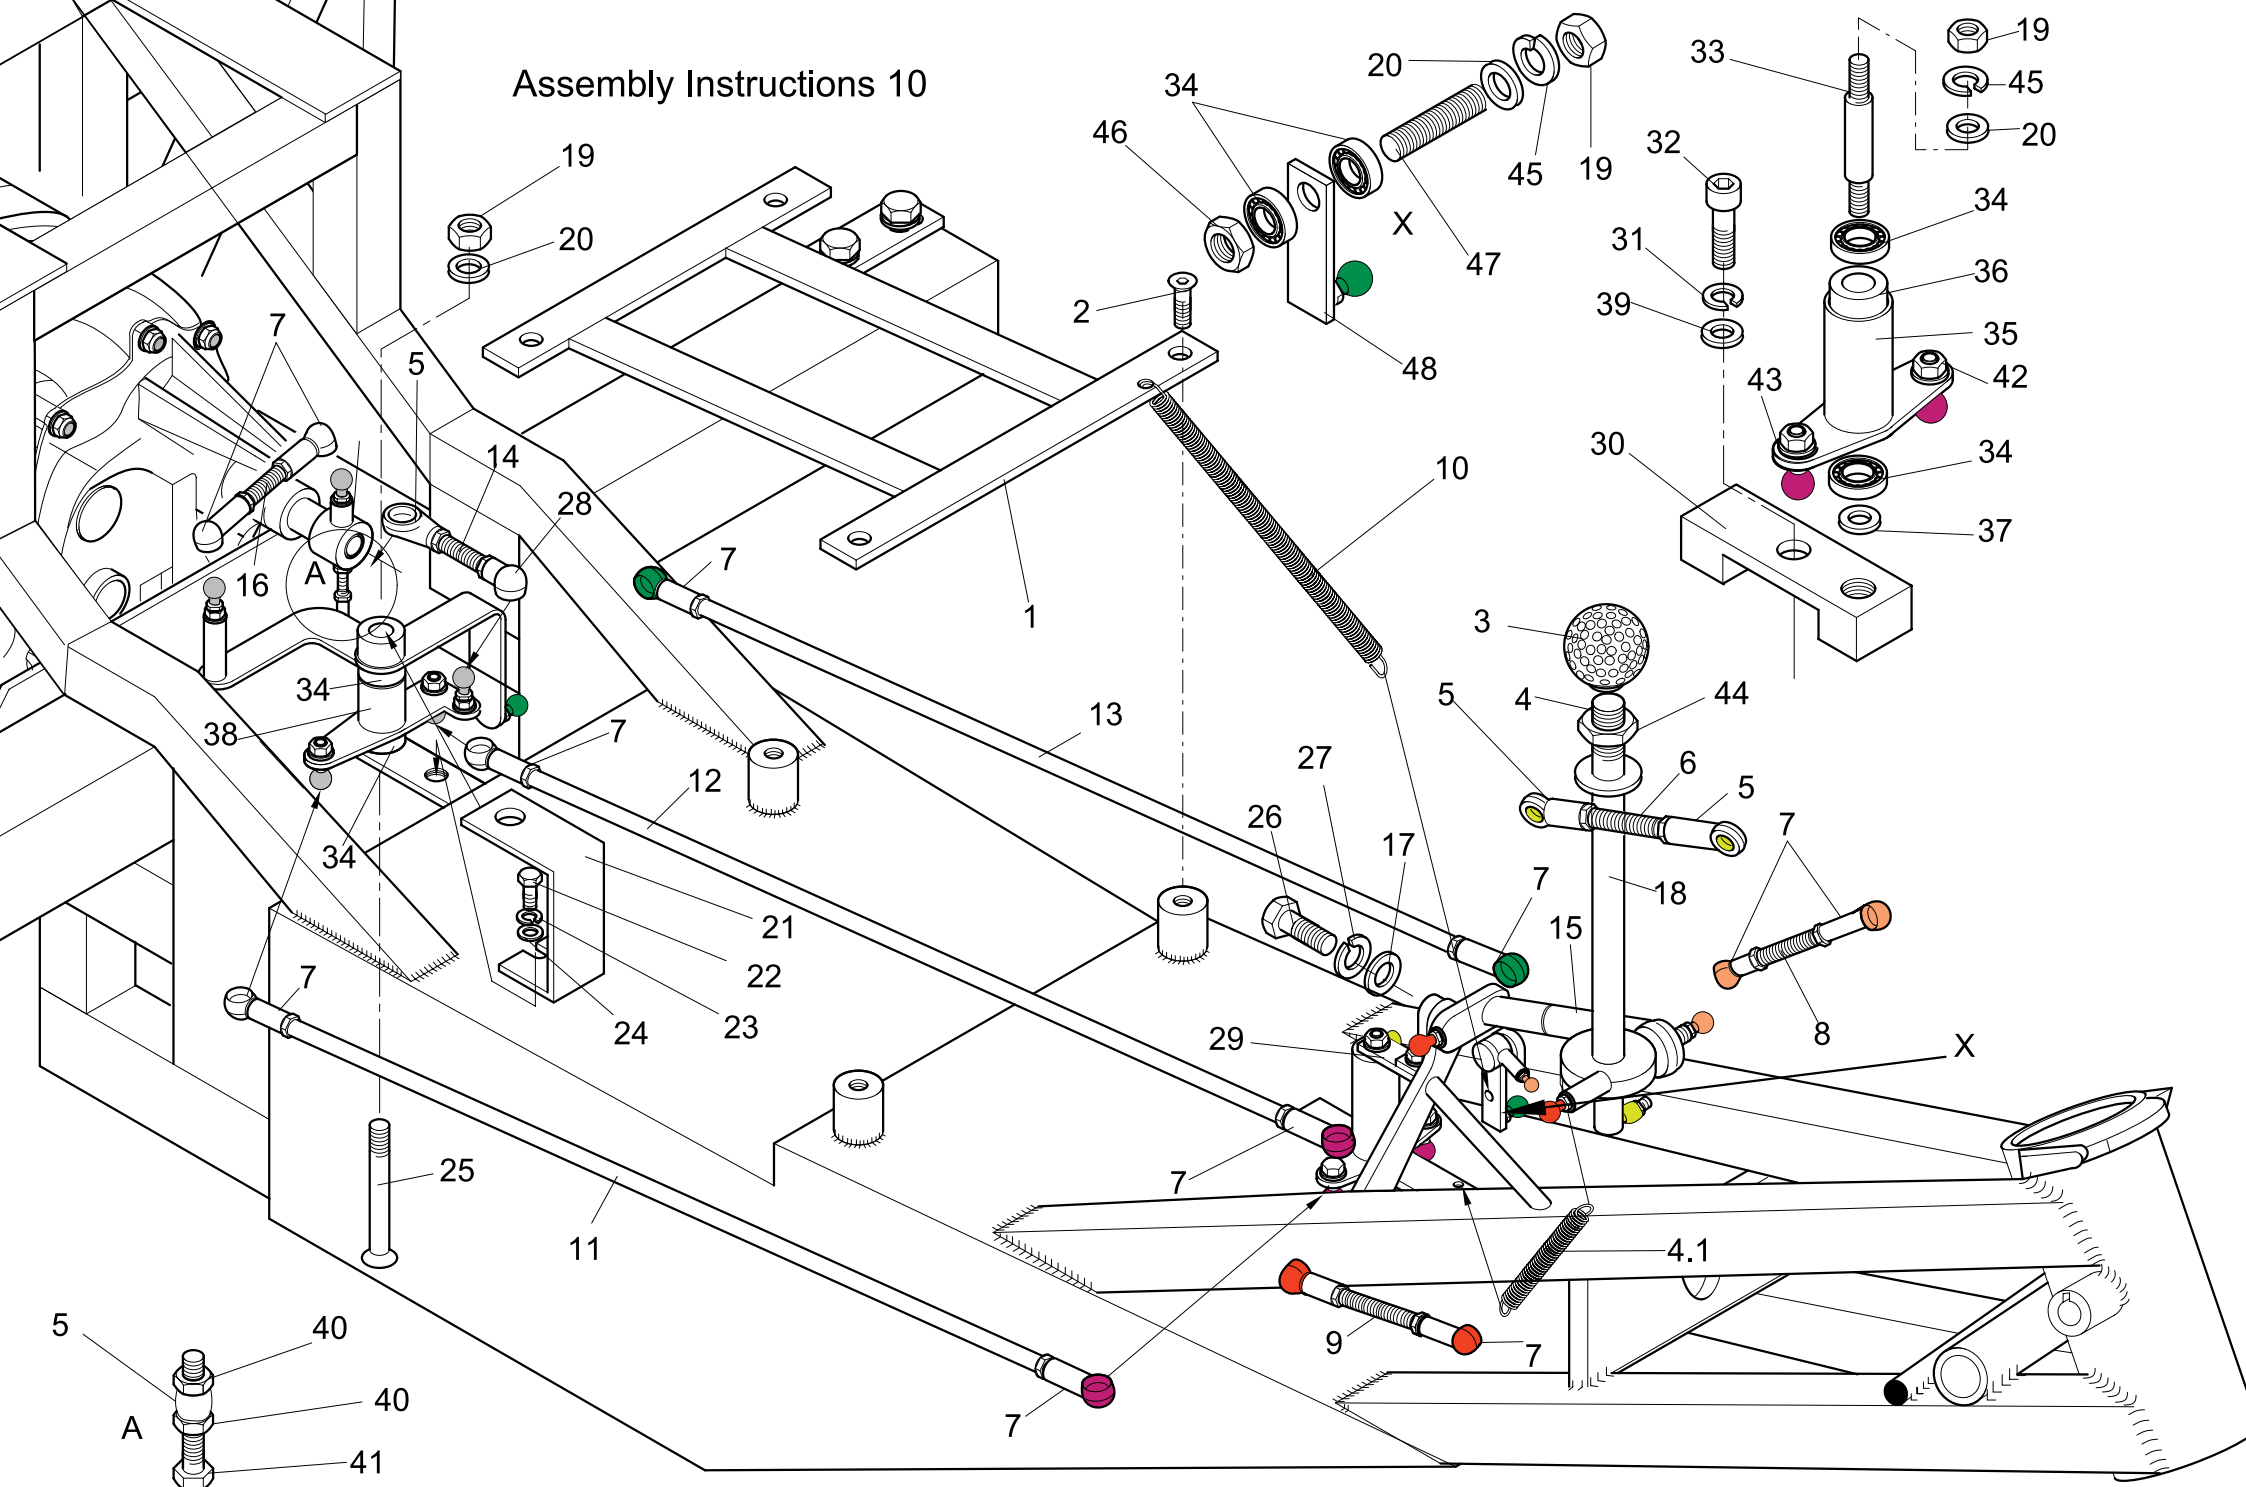


Modell: rewaco FX4 Base Seite: 10

Pos.	Q'ty	Art.-No.	Article Description
1	1	08-00551-F-01	front cross brace FX4-FX6
2	4	7991 A2 10/25	hexagon socket countersunk flathead screw A2 M10x25
3	1	11 0010 2	knob, gearshift lever
4	1	13 0161 2	gearshift lever FX
4,1	1	06-00176-N-01	tension spring for gear shift; wire dia.: 1.0, spring outer dia.: 9.0mm; length: 100
5	3	07-00042-01	swivel head D8/maintenance free
6	1	08-00552-F-01	redirection, gear shift, FX4-FX6 pos. 6
7	12	01-00678-F-01	knuckle joint DIN 71802/C10-M6 zinc plated, white
8	1	08-00554-F-01	redirection, gear shift, FX4-FX6 pos. 8
9	1	08-00553-F-01	redirection, gear shift, FX4-FX6 pos. 9
10	1	06-00084-N-01	tension spring for hinge HS5 and throttle valve FX/RF, gear shift FX; wire dia.: 1.0, spring dia.: 11mm, length: 130 mm
11	1	08-00558-F-01	pull-push rod, gear shift, FX4-FX6
12	1	08-00556-F-01	pull-push rod, gear shift, FX4-FX6
13	1	08-00557-F-01	pull-push rod, gear shift, FX4-FX6
14	1	08-00555-F-01	redirection, gear shift, FX4-FX6 pos. 14
15	1	07-00045-L-01	swivel head D12/maintenance free
16	1	08-00559-F-01	redirection, gear shift, FX4-FX6 pos. 16
17	1	0125 ZN 12	washer zinc plated M12
18	1	06-00548-F-01	barrier for reverse gear for gearshift stick FX
19	3	0934 A2 10	hexagon nut A2 M10
20	3	0125 A2 10	washer A2 M10
21	1	08-00575-F-01	bracket, gear shift redirection, FX4-FX6
22	1	0933 A2 8/20	hexagon screw A2 M08X20
23	1	0127 B A2 8	spring lock washer Form B A2 M8
24	1	0125 A2 8	washer A2 M8

Modell: rewaco FX4 Base Seite: 10

Pos.	Q'ty	Art.-No.	Article Description
25	1	7991 A2 10/60	hexagon socket countersunk flathead screw A2 M10X60
26	1	0933 ZN 12/30	hexagon screw zinc plated M12X30
27	1	0127 B A2 12	spring lock washer Form B A2 M12
28	1	33 13 120 0.1	knuckle joint DIN 71802 HS5 body CS 13 M 8 yellow zinc plated
29	1	08-00590-F-01	front gear shift holder, plastic-coated
30	1	08-00591-F-01	additional sheet for gear shift, plastic-coated
31	1	0127 B A2 10	spring lock washer Form B A2 M10
32	1	0912 A2 10/35	hexagon socket screw A2 M10X35
33	1	03-00638-E-01	bearing shaft, pedals, FX
34	4	05 1160 3	ball bearing 6800 2RS /for throttle valve VW
35	1	08-00617-F-01	redirection, gear shift, FX4-FX6 pos. 35
36	1	03-00689-E-01	supporting bushing
37	1	02-00193-U-01	gasket ring, copper 10x16x1
38	1	08-00689-F-01	redirection, gear shift, FX4-FX6 pos. 38
39	1	7349 ZN 10/25/4	washer zinc M10X25X4
40	2	0934 A2 8	hexagon nut A2 M08
41	1	0933 A2 8/40	hexagon screw A2 M08X40
42	6	0934 A2 6	hexagon nut A2 M06
43	6	0125 A2 6	washer A2 M6
44	1	0439 A2 12	flat nut A2 M12
45	6	0127 B A2 10	spring lock washer Form B A2 M10
46	1	09-00709-U-01	flat nut A2 M10
47	1	08-00695-F-01	threaded bolt M10X185
48	1	08-00696-F-01	redirection, gear shift, FX4-FX6 pos. 48


Assembly Instructions 11

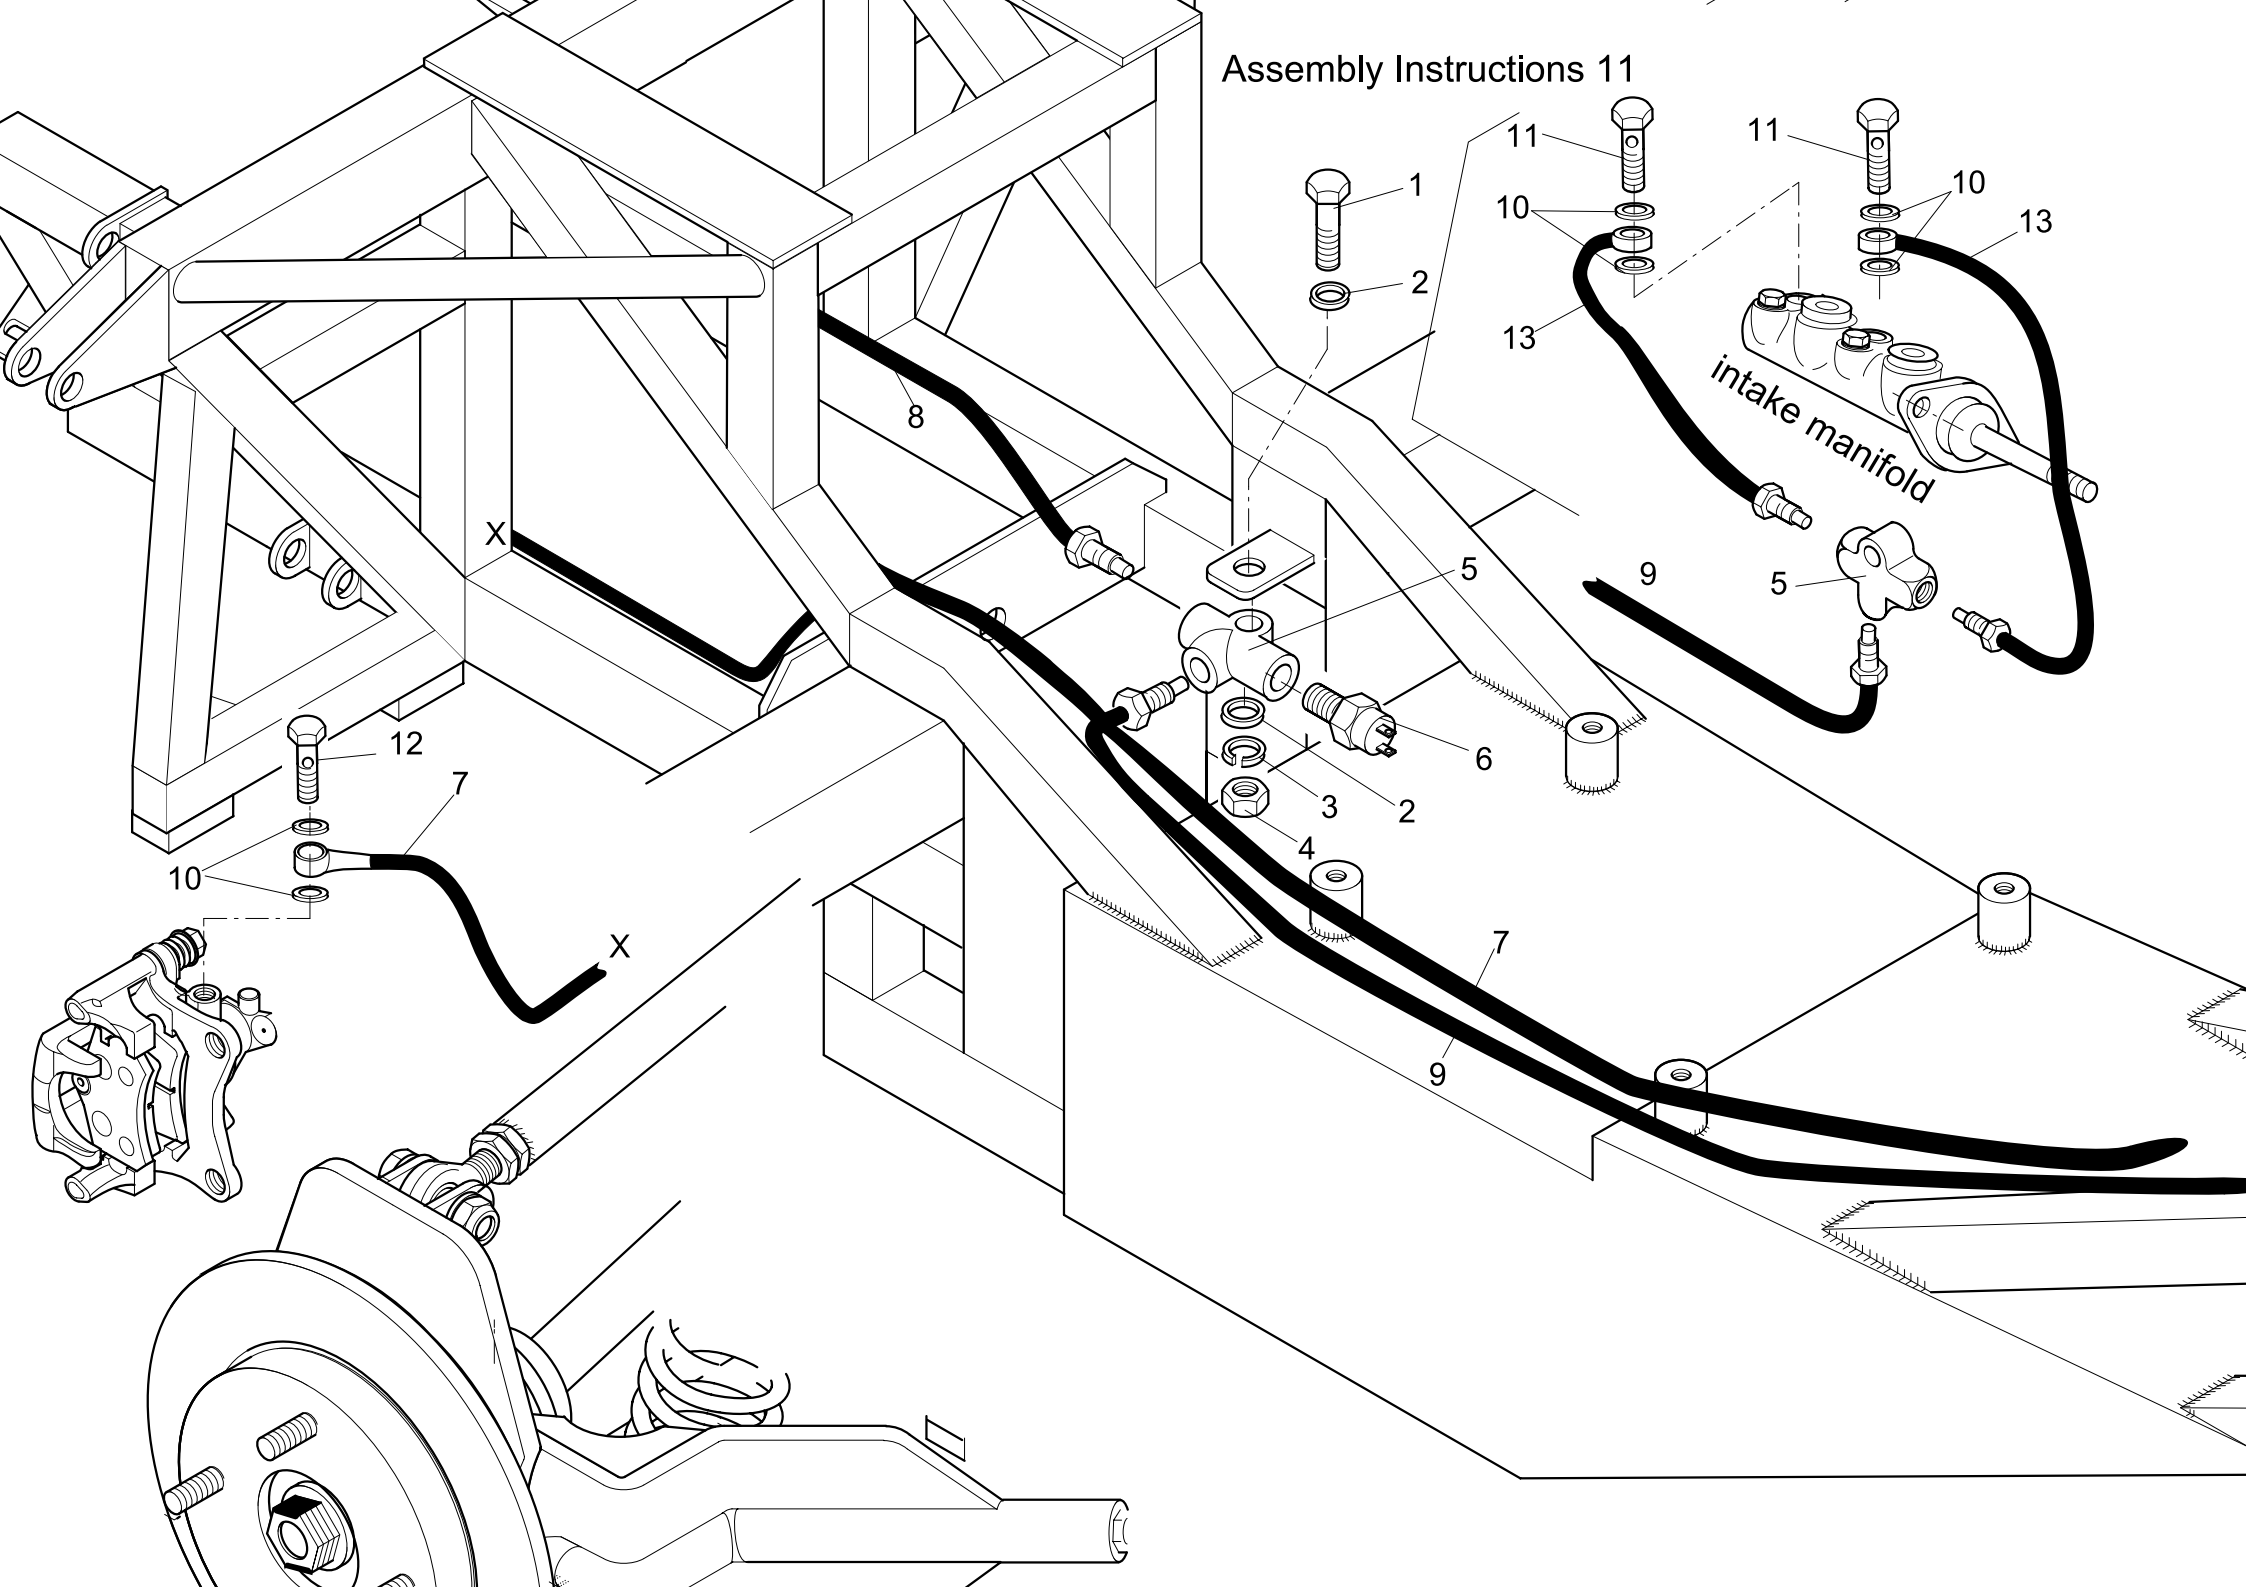

Modell: rewaco FX4 Base Seite: 11

Pos.	Q'ty	Art.-No.	Article Description
1	1	0933 A2 6/30	hexagon screw A2 M06X30
2	2	0125 A2 6	washer A2 M6
3	1	0127 B A2 6	spring lock washer Form B A2 M6
4	1	0934 A2 6	hexagon nut A2 M06
5	2	12 0010 1	brake manifold t-piece
6	1	12 0020 2	brake light switch
7	1	05 2100 1	steel braided hose 2100-2-, FX/RF (2400mm long), ring connection 45°/ring connection 45°
8	1	05 1400 1	steel braided hose 1400mm, FX/RF, outer threat 10mm/ring connection 45°
9	1	05 0130 2	steel braided hose, front brake, 1080mm, outer threat 10mm, ring connection 45°
10	11	05 0210 2	seal ring 10mm, banjo bolt brake master cyclinder
11	2	05 0200 2	banjo bolt, brake master cylinder M10X1X18
12	2	05 1200 2	banjo bolt M10X1X22, rear brake caliper
13	1	05 1002 1	steel braided hose 300 (400 mm) FX/RF outer threat 10mm, ring connection 45°


Assembly Instructions 11.1

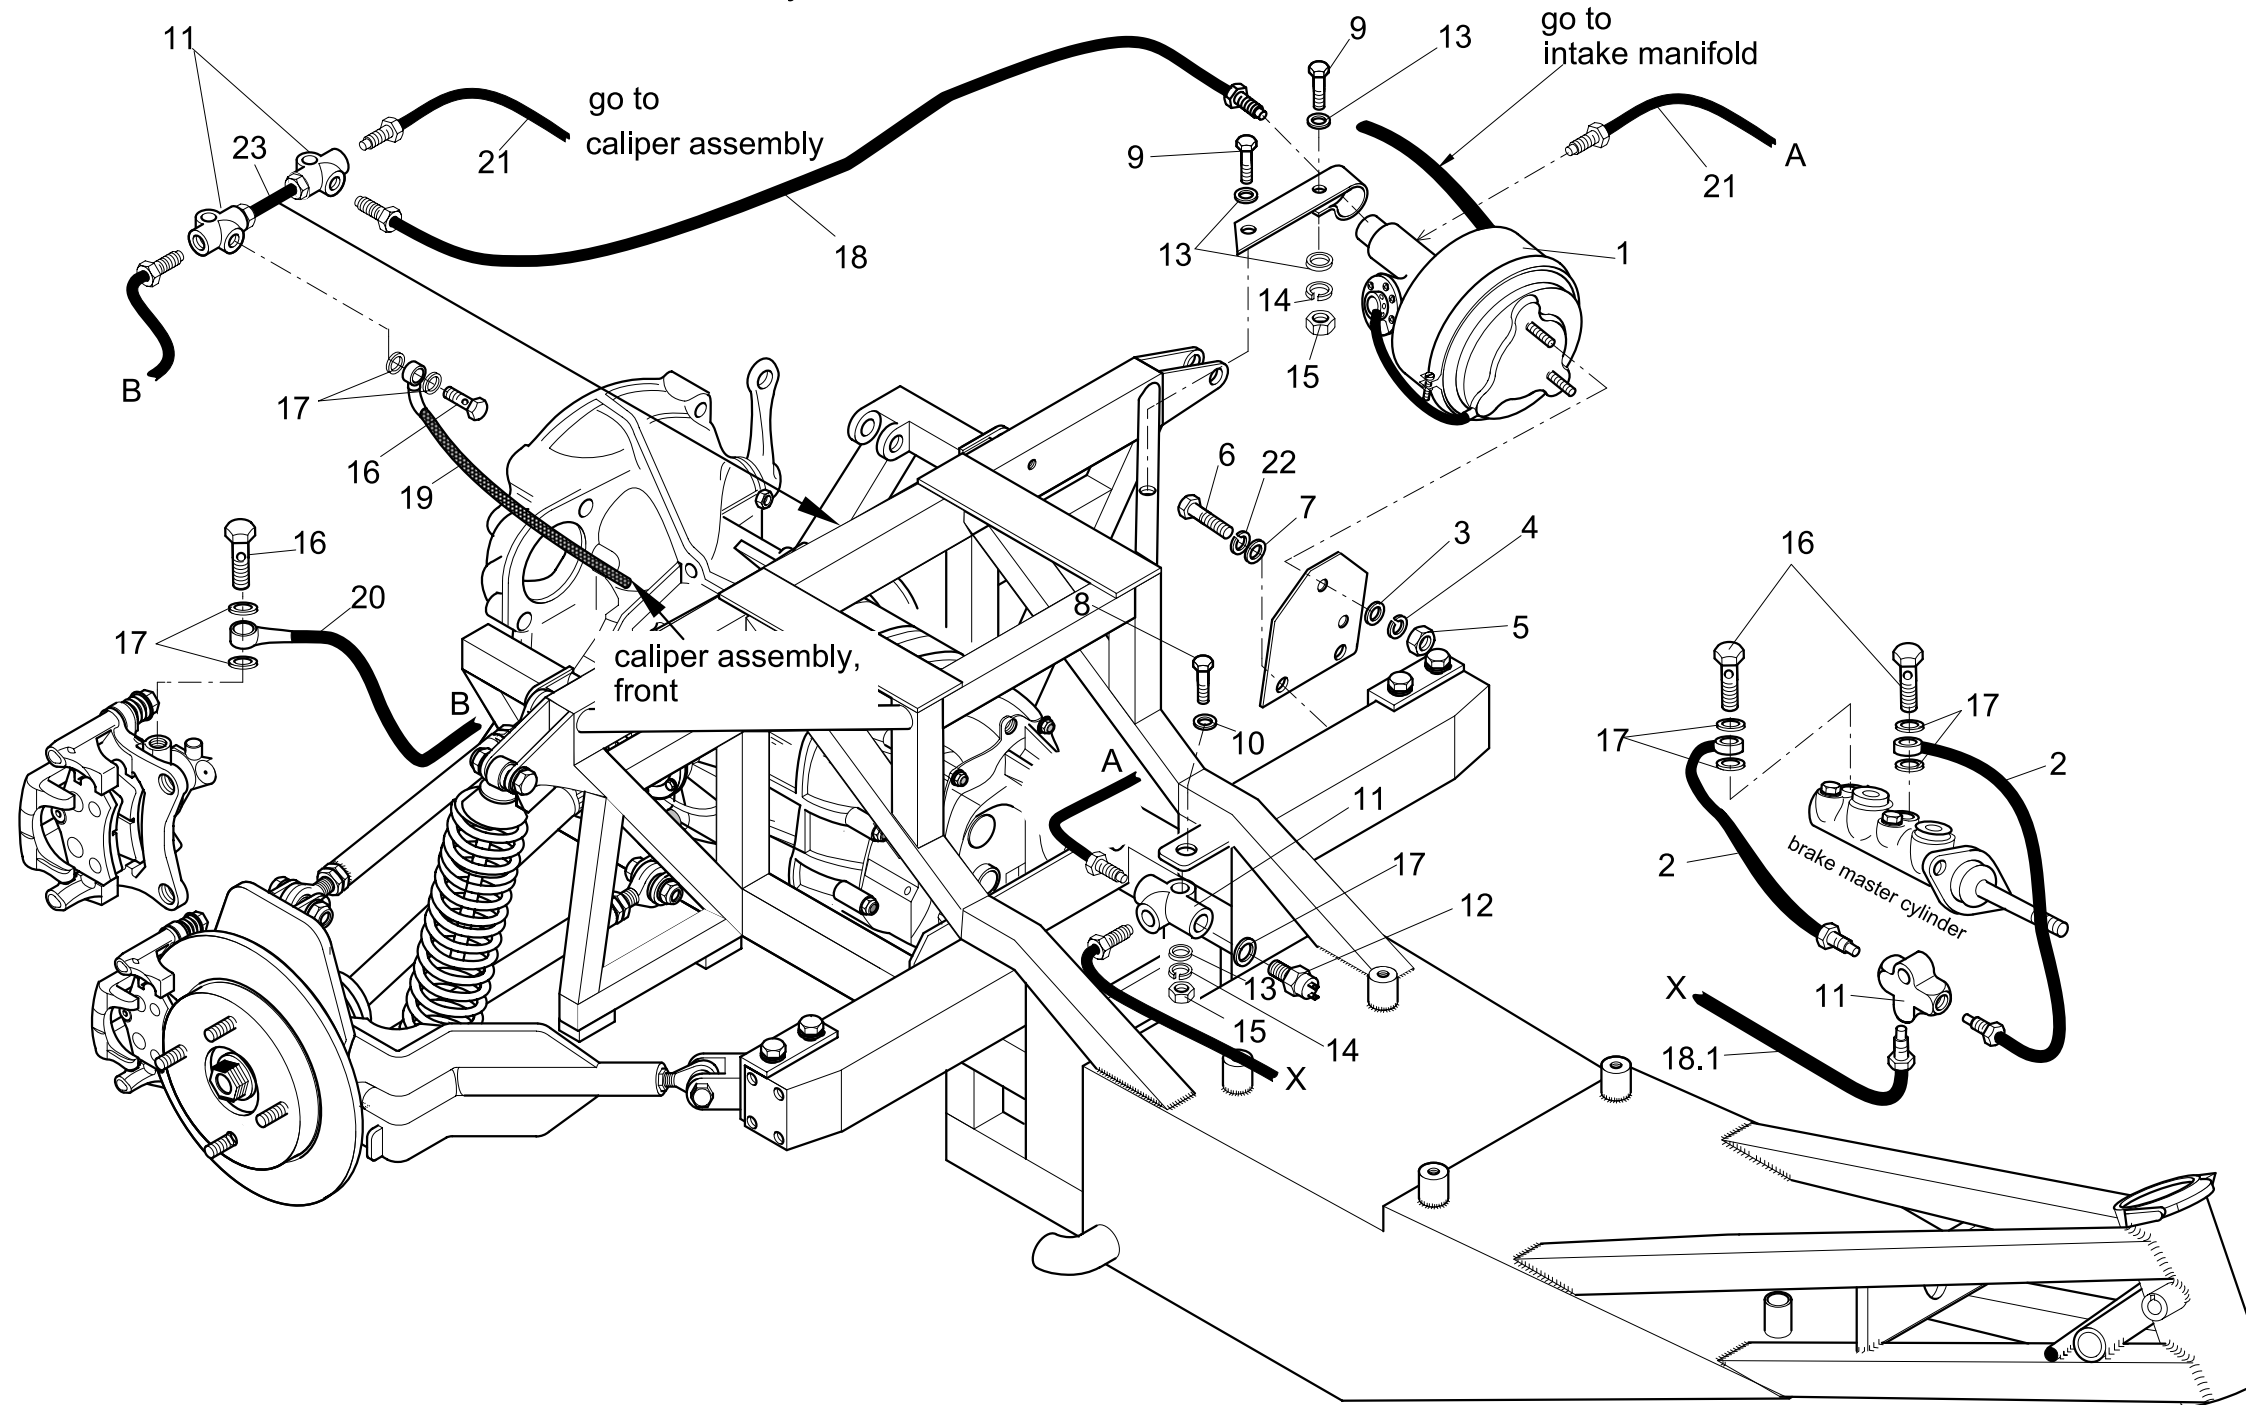

Modell: rewaco FX4 Base Seite: 11,1

Pos.	Q'ty	Art.-No.	Article Description
1	1	33 99191 1	brake booster HS/FX
2	2	05 1002 1	steel braided hose 300 (400 mm) FX/RF outer threat 10mm, ring connection 45°
3	2	9021 A2 8	washer, body, A2 M8
4	2	0127 B A2 8	spring lock washer Form B A2 M8
5	2	N 0934 5/16" x 18 UNC	hexagon nut 5/16" UNF A2
6	2	0933 A2 8/20	hexagon screw A2 M08X20
7	2	0125 A2 8	washer A2 M8
8	1	0933 A2 6/30	hexagon screw A2 M06X30
9	1	0933 A2 6/20	hexagon screw A2 M06X20
10	1	9021 A2 6	washer, body, A2 M6
11	4	12 0010 1	brake manifold t-piece
12	1	12 0020 2	brake light switch
13	4	0125 A2 6	washer A2 M6
14	2	0127 B A2 6	spring lock washer Form B A2 M6
15	2	0934 A2 6	hexagon nut A2 M06
16	4	05 0200 2	banjo bolt, brake master cylinder M10X1X18
17	9	02-00193-U-01	gasket ring, copper 10x16x1
18	1	05 1400 1	steel braided hose 1400mm, FX/RF, outer threat 10mm/ring connection 45°
18,1	1	12 0040 2	brake hose 1430 mm
19	1	05 2100 1	steel braided hose 2100-2-, FX/RF (2400mm long), ring connection 45°/ring connection 45°
20	1	05 1700 1	steel braided hose 1700, FX/RF (about 1600mm long), outer threat 10mm/ring connection 45°
21	2	05 0130 2.1	steel braided hose 600 mm/45° ring connection and M10x1 separately
22	1	0127 B A2 8	spring lock washer Form B A2 M8
23	1	06-00756-C-01	brake hose 60 mm, connector T-piece


Assembly Instructions 12

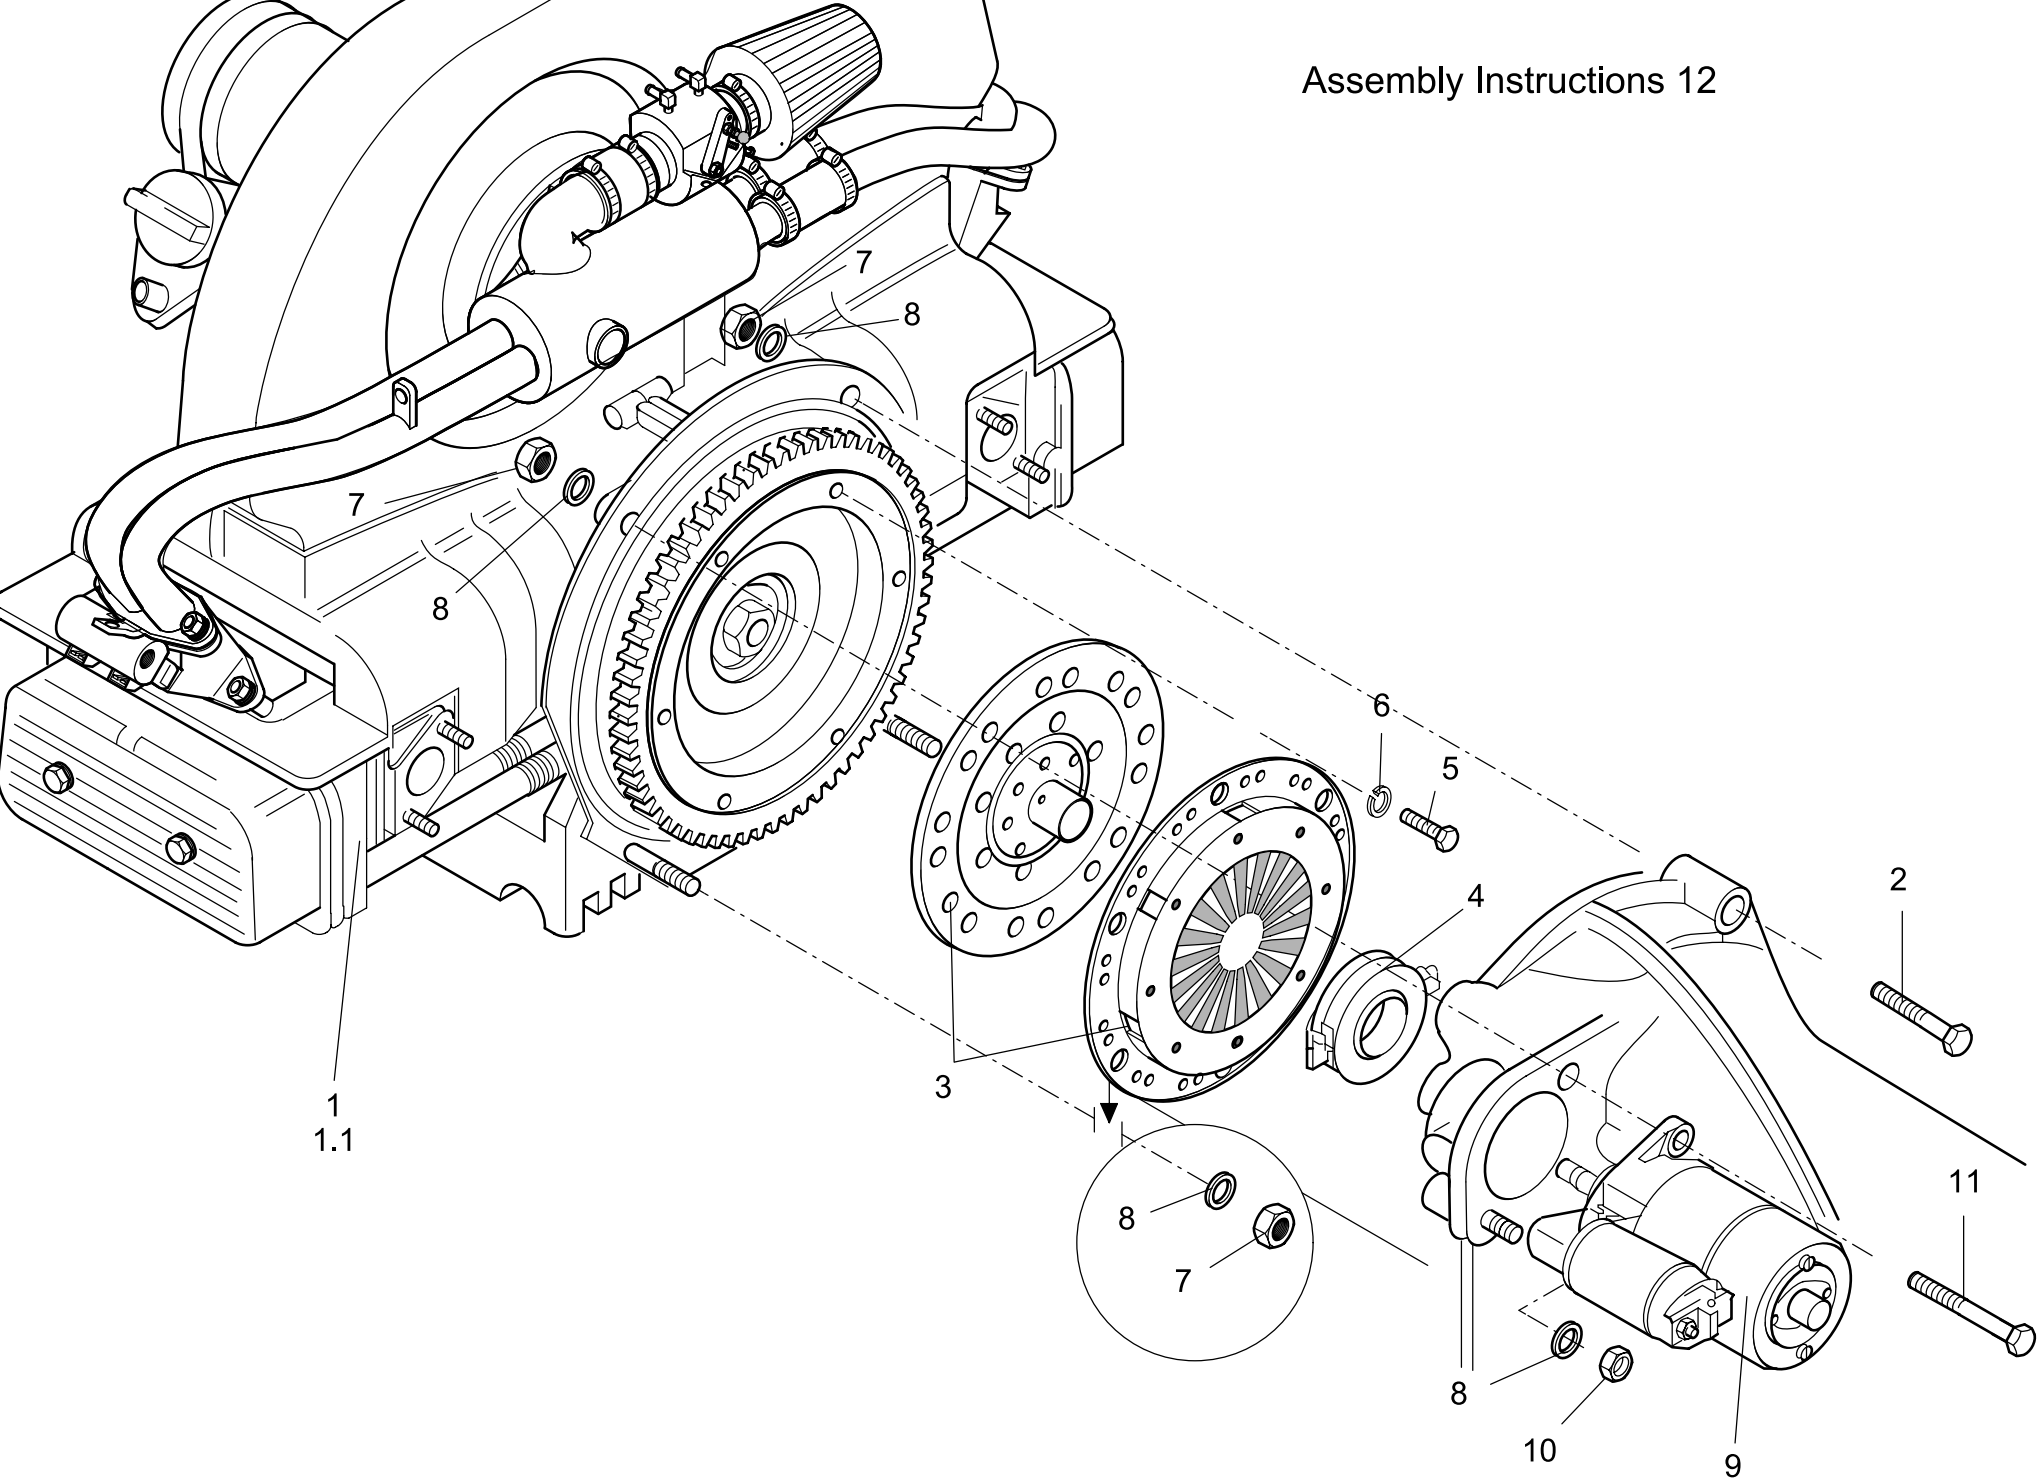

Modell: rewaco FX4 Base Seite: 12

Pos.	Q'ty	Art.-No.	Article Description
1	1	04-00691-J-01	engine without attached parts, 1.6, VW
1,1	1	13 1010 2.1	engine without attached parts 1.8 ltr. with revised valves
2	1	0931 ZN 10/70	hexagon screw zinc plated M10X70
3	1	13 0071 2	repair set, clutch, guided 200 mm
4	1	13 0100 2	disengage bearing, guided
5	6	0933 A2 8/20	hexagon screw A2 M08X20
6	6	0127 B A2 8	spring lock washer Form B A2 M8
7	3	0934 ZN 10	hexagon nut zinc plated M10
8	4	0125 ZN 10	washer zinc plated M10
9	1	13 0180 2	starter motor HS1 to HS 6
10	1	0934 ZN 10/15	hexagon nut SW15 zinc plated M10
11	1	0931 ZN 10/110	hexagon screw zinc plated M10X110


Assembly Instructions 13

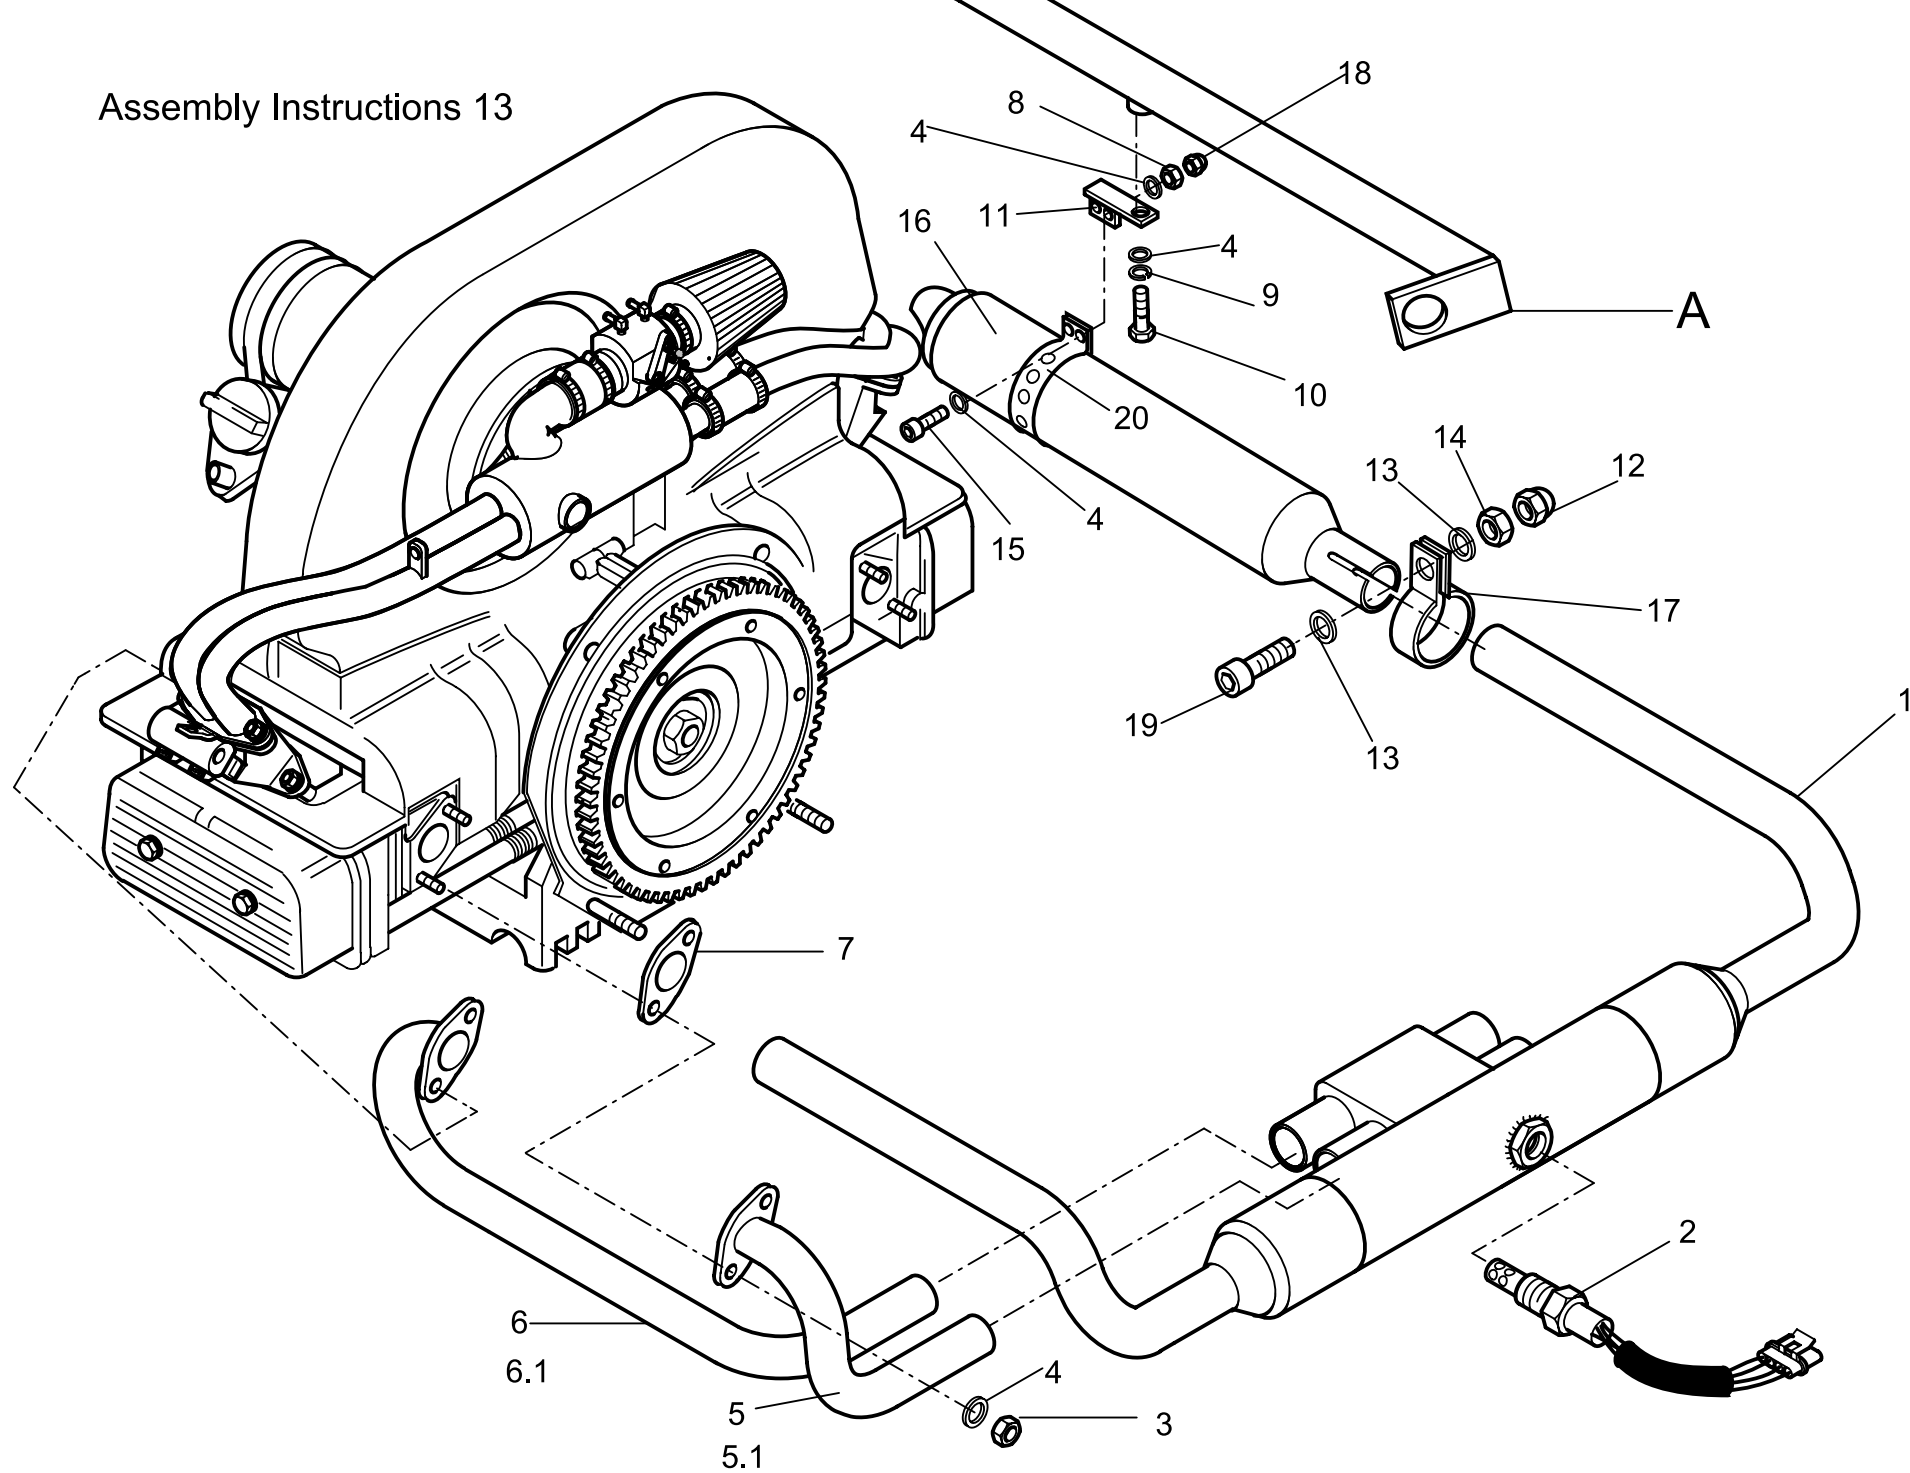

Modell: rewaco FX4 Base Seite: 13

Pos.	Q'ty	Art.-No.	Article Description
1	1	13 0110 1	collector, exhaust with cat. VW
2	1	01-00101-E-01	Lambda probe RF1
3	8	0934 A2 8	hexagon nut A2 M08
4	14	0125 A2 8	washer A2 M8
5	1	13 0111 1	exhaust manifold VW for cat.-exhaust, 1. cylinder, since 1/99
5,1	1	13 0113 1	exhaust manifold VW for cat.-exhaust 3. cylinder, since 1/99
6	1	13 0112 1	exhaust manifold VW for cat.-exhaust 2. cylinder, since 1/99
6,1	1	13 0114 1	exhaust manifold VW for cat.-exhaust 4. cylinder, since 1/99
7	4	13 0200 1	exhaust gasket VW
8	4	0934 A2 6	hexagon nut A2 M06
9	2	0127 B A2 6	spring lock washer Form B A2 M6
10	4	0933 A2 6/30	hexagon screw A2 M06X30
11	2	08-00137-F-01	bracket, Sportline exhaust FX4
12	2	03-00112-U-01	exhaust clamp 106mm for Sport-Line silencer since 04/2006
13	4	7349 ZN 10/25/4	washer zinc M10X25X4
14	2	0934 ZN 10	hexagon nut zinc plated M10
15	4	0912 A2 6/20	hexagon socket screw A2 M06X20
16	2	03-00111-U-01	exhaust silencer Cobra Duplex since 04/2006 (1 pc.)
17	2	19 0889 1	pipe clip, exhaust mounting dia.48
18	2	1587 A2 6	acorn nut A2 M06
19	2	0933 ZN 10/35	hexagon screw zinc plated M10X35

Assembly Instructions 14

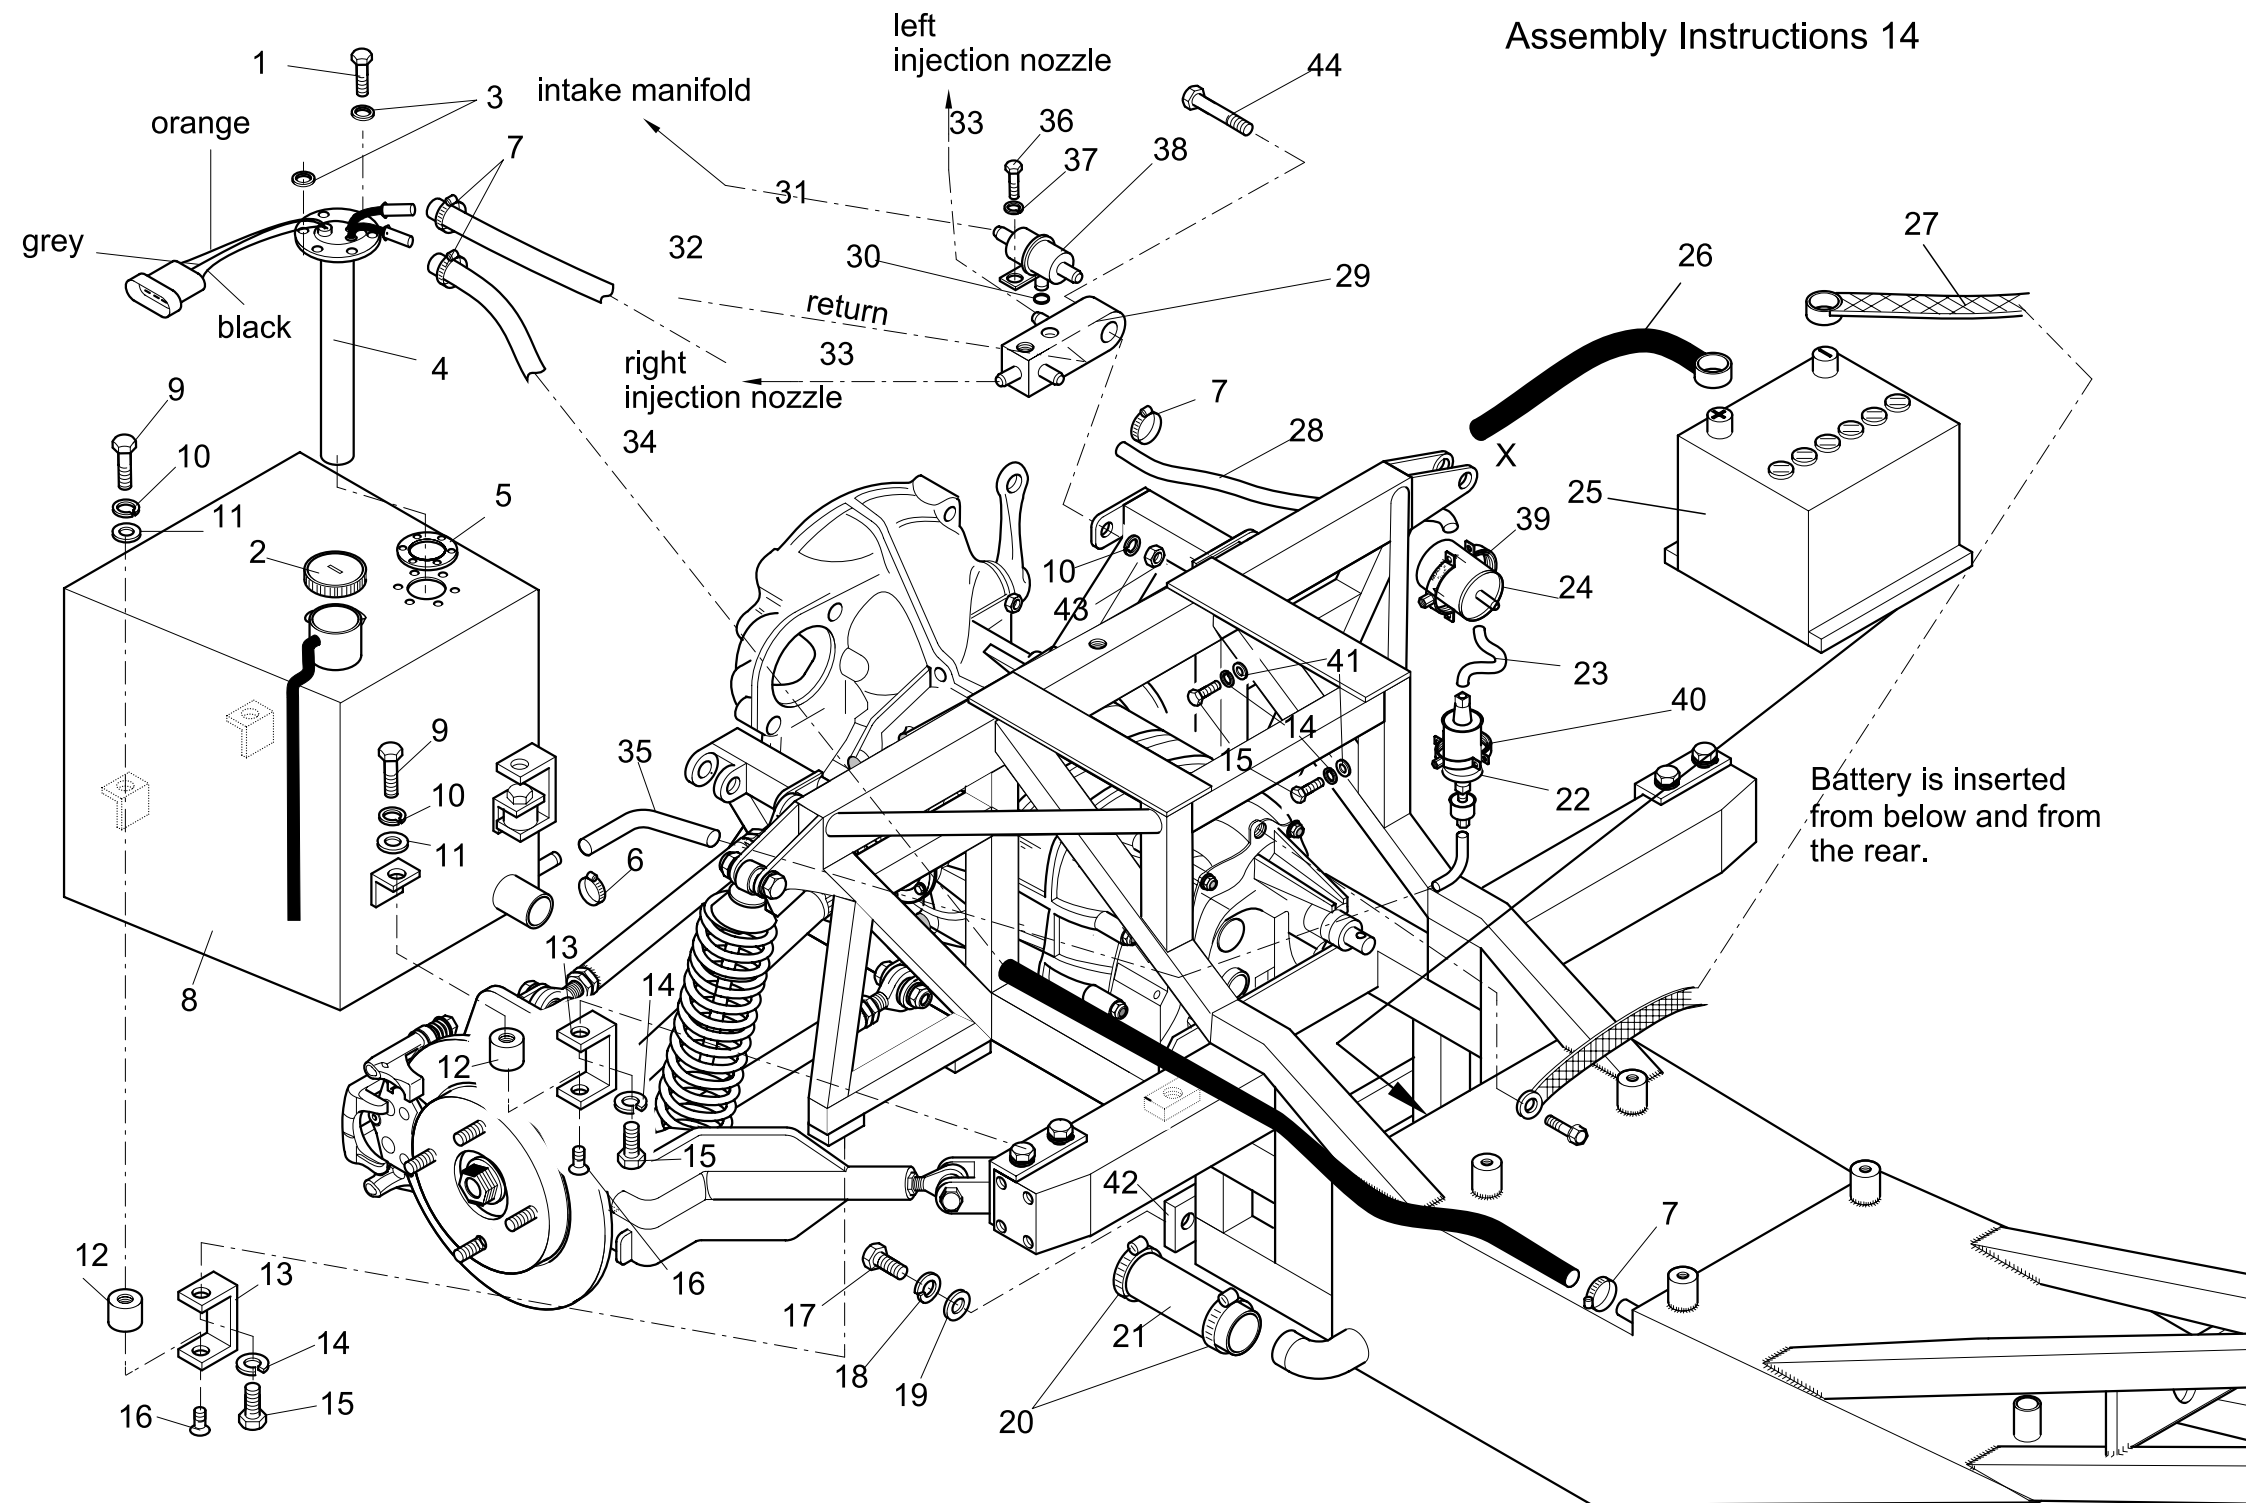


Modell: rewaco FX4 Base Seite: 14

Pos.	Q'ty	Art.-No.	Article Description
1	6	0933 A2 5/20	hexagon screw A2 M05X20
2	1	18 0589 4	cap, fuel tank, lockable HS4/HS5/HS6 / cap, oil filler neck HS/FX
3	6	0125 A2 5	washer A2 M5
4	1	14 1040 2	fuel level sender, dip pipe 372mm since 3/2001
5	1	14 0042 2	gasket fuel level sender (rubber, 6 holes)
6	2	16 0120 3	hose clamp Cobra 14 mm
7	11	539 8 12	Zebra-hose clip B 7.5mm SW6 8-12
8	1	06-00544-F-01	additional fuel tank FX4-6 (20ltrs.)
9	4	0933 A2 8/16	hexagon screw A2 M08X16
10	6	0127 B A2 8	spring lock washer Form B A2 M8
11	4	9021 A2 8	washer, body, A2 M8
12	4	33 6667 2	silent block, cushion, for tank mount since 08/2001, dia. 30 hei.20 2XM8 internal thread
13	4	20 0052 3	bracket for fuel tank mounting since 08/2001 (silent block)
14	4	0137 B ZN 10	spring lock washer Form B zinc plated M10
15	4	0933 ZN 10/20	hexagon screw 8.8 zinc plated M10X20
16	4	7991 ZN 8/12	countersunk screw zinc M08X12
17	2	0933 ZN 12/30	hexagon screw zinc plated M12X30
18	1	0127 B A2 12	spring lock washer Form B A2 M12
19	1	0125 A2 12	washer A2 M12
20	2	16 0121 1	hose clamp Torro 40-60 mm
21	1	11-00550-L-01	hose connection, main tank-additional tank FX
22	1	03-00089-C-01	fuelpump, electrical, HS/FX (fuel injection)
23	1	11-00546-U-01	fuel hose, inner dia.: 7.0mm, outer dia.: 13.0mm, 340mm long DIN 73379, rubber with textile inlay, plain, black
24	1	20 8571 2	fuel filter since 12/2000 (big) HS/FX
25	1	10 0034.1	battery 12V/36 AH


Modell: rewaco FX4 Base Seite: 14

Pos.	Q'ty	Art.-No.	Article Description
26	1	15 0070 2	wire assembly, battery positive
27	1	15 0020 2	ground strap
28	1	11-00065-U-01	fuel hose, inner dia.: 7.0mm, outer dia.: 13.0mm, 140mm long DIN 73379, rubber with textile inlay, plain, black
29	1	03-00548-M-01	housing for fuel pressure regulator FX
30	1	PRÜ03-00573-01	
31	1	01-00200-M-01	vacuum hose 3.2 mm, 420mm long
32	1	03-00547-U-01	fuel hose, inner dia.: 7.0mm, outer dia.: 13.0, length: 650mm, DIN73379, rubber with textile insert, plain, black
33	2	03-00548-U-01	fuel hose, inner dia.: 7.0mm, outer dia.: 13.0, length: 820mm, DIN73379, rubber with textile insert, plain, black
34	1	03-00549-E-01	fuel hose, inner dia.: 9.5mm, outer dia.: 15.5, length: 690mm, DIN73379, rubber with textile insert, plain, black
35	1	03-00690-U-01	fuel pipe, inner dia. 12mm, outer dia. 19mm DIN73379, rubber with textile padding
36	2	0933 A2 6/20	hexagon screw A2 M06X20
37	2	0125 A2 6	washer A2 M6
38	1	01-00095-M-01	fuel pressure regulator for fuel ignition engine Ford + VW
39	1	19 0898 2	pipe clip 68-73mm (fuel filter)
40	1	07-00047-01	pipe clip for fuel pump 44-48mm / two pc. pipe clip with rubber insert M8/10
41	4	0125 A2 10	washer A2 M10
42	1	06-00569-U-01	clamp rail for battery FX
43	1	0934 A2 8	hexagon nut A2 M08
44	1	0933 A2 8/45	hexagon screw A2 M08X45

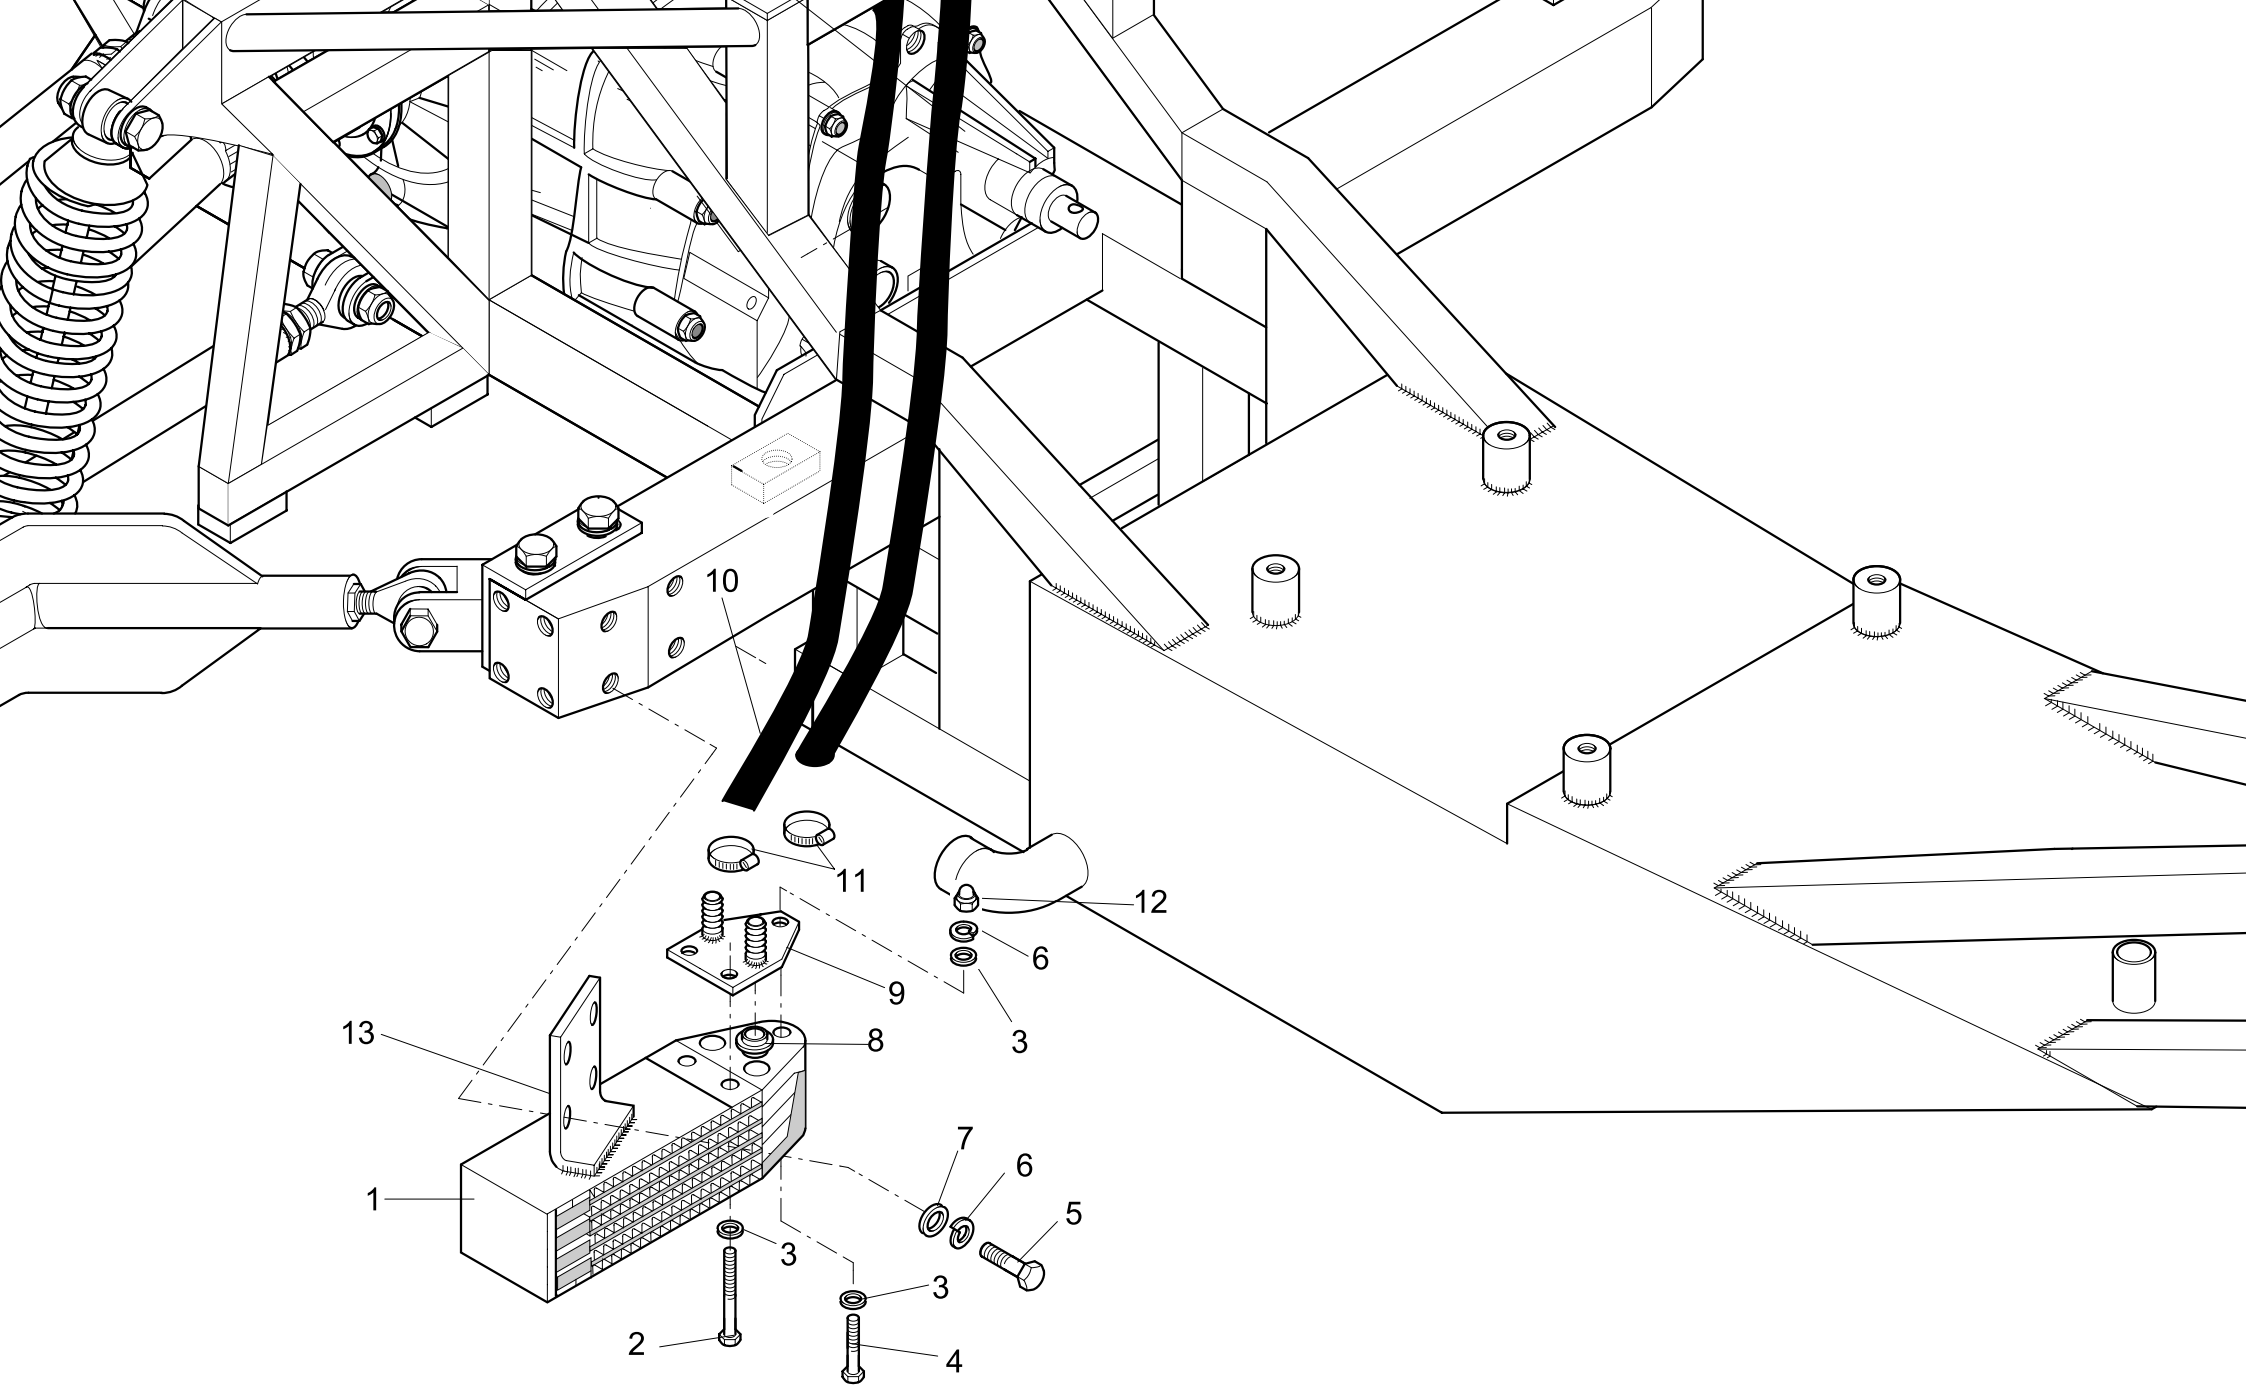

Modell: rewaco FX4 Base Seite: 15


Pos.	Q'ty	Art.-No.	Article Description
1	1	03-00686-J-01	oil cooler VW
2	2	0933 A2 6/80	hexagon screw A2 M06X80
3	6	0125 A2 6	washer A2 M6
4	1	0933 A2 6/40	hexagon screw A2 M06X40
5	1	0933 A2 6/25	hexagon screw A2 M06X25
6	7	0127 B A2 6	spring lock washer Form B A2 M6
7	4	9021 A2 6	washer, body, A2 M6
8	2	16 0112 2	gasket, oil cooler adaptor
9	1	03-00691-J-01	adaptor, oil cooler
10	2	15 0030 2	hose, oil cooler 1/2" 1 meter
11	4	539 16 25	Zebra-hose clip B 9mm SW6 16-25
12	3	1587 A2 6	acorn nut A2 M06
13	1	06-00728-F-01	mount for oil cooler FX4/FX5

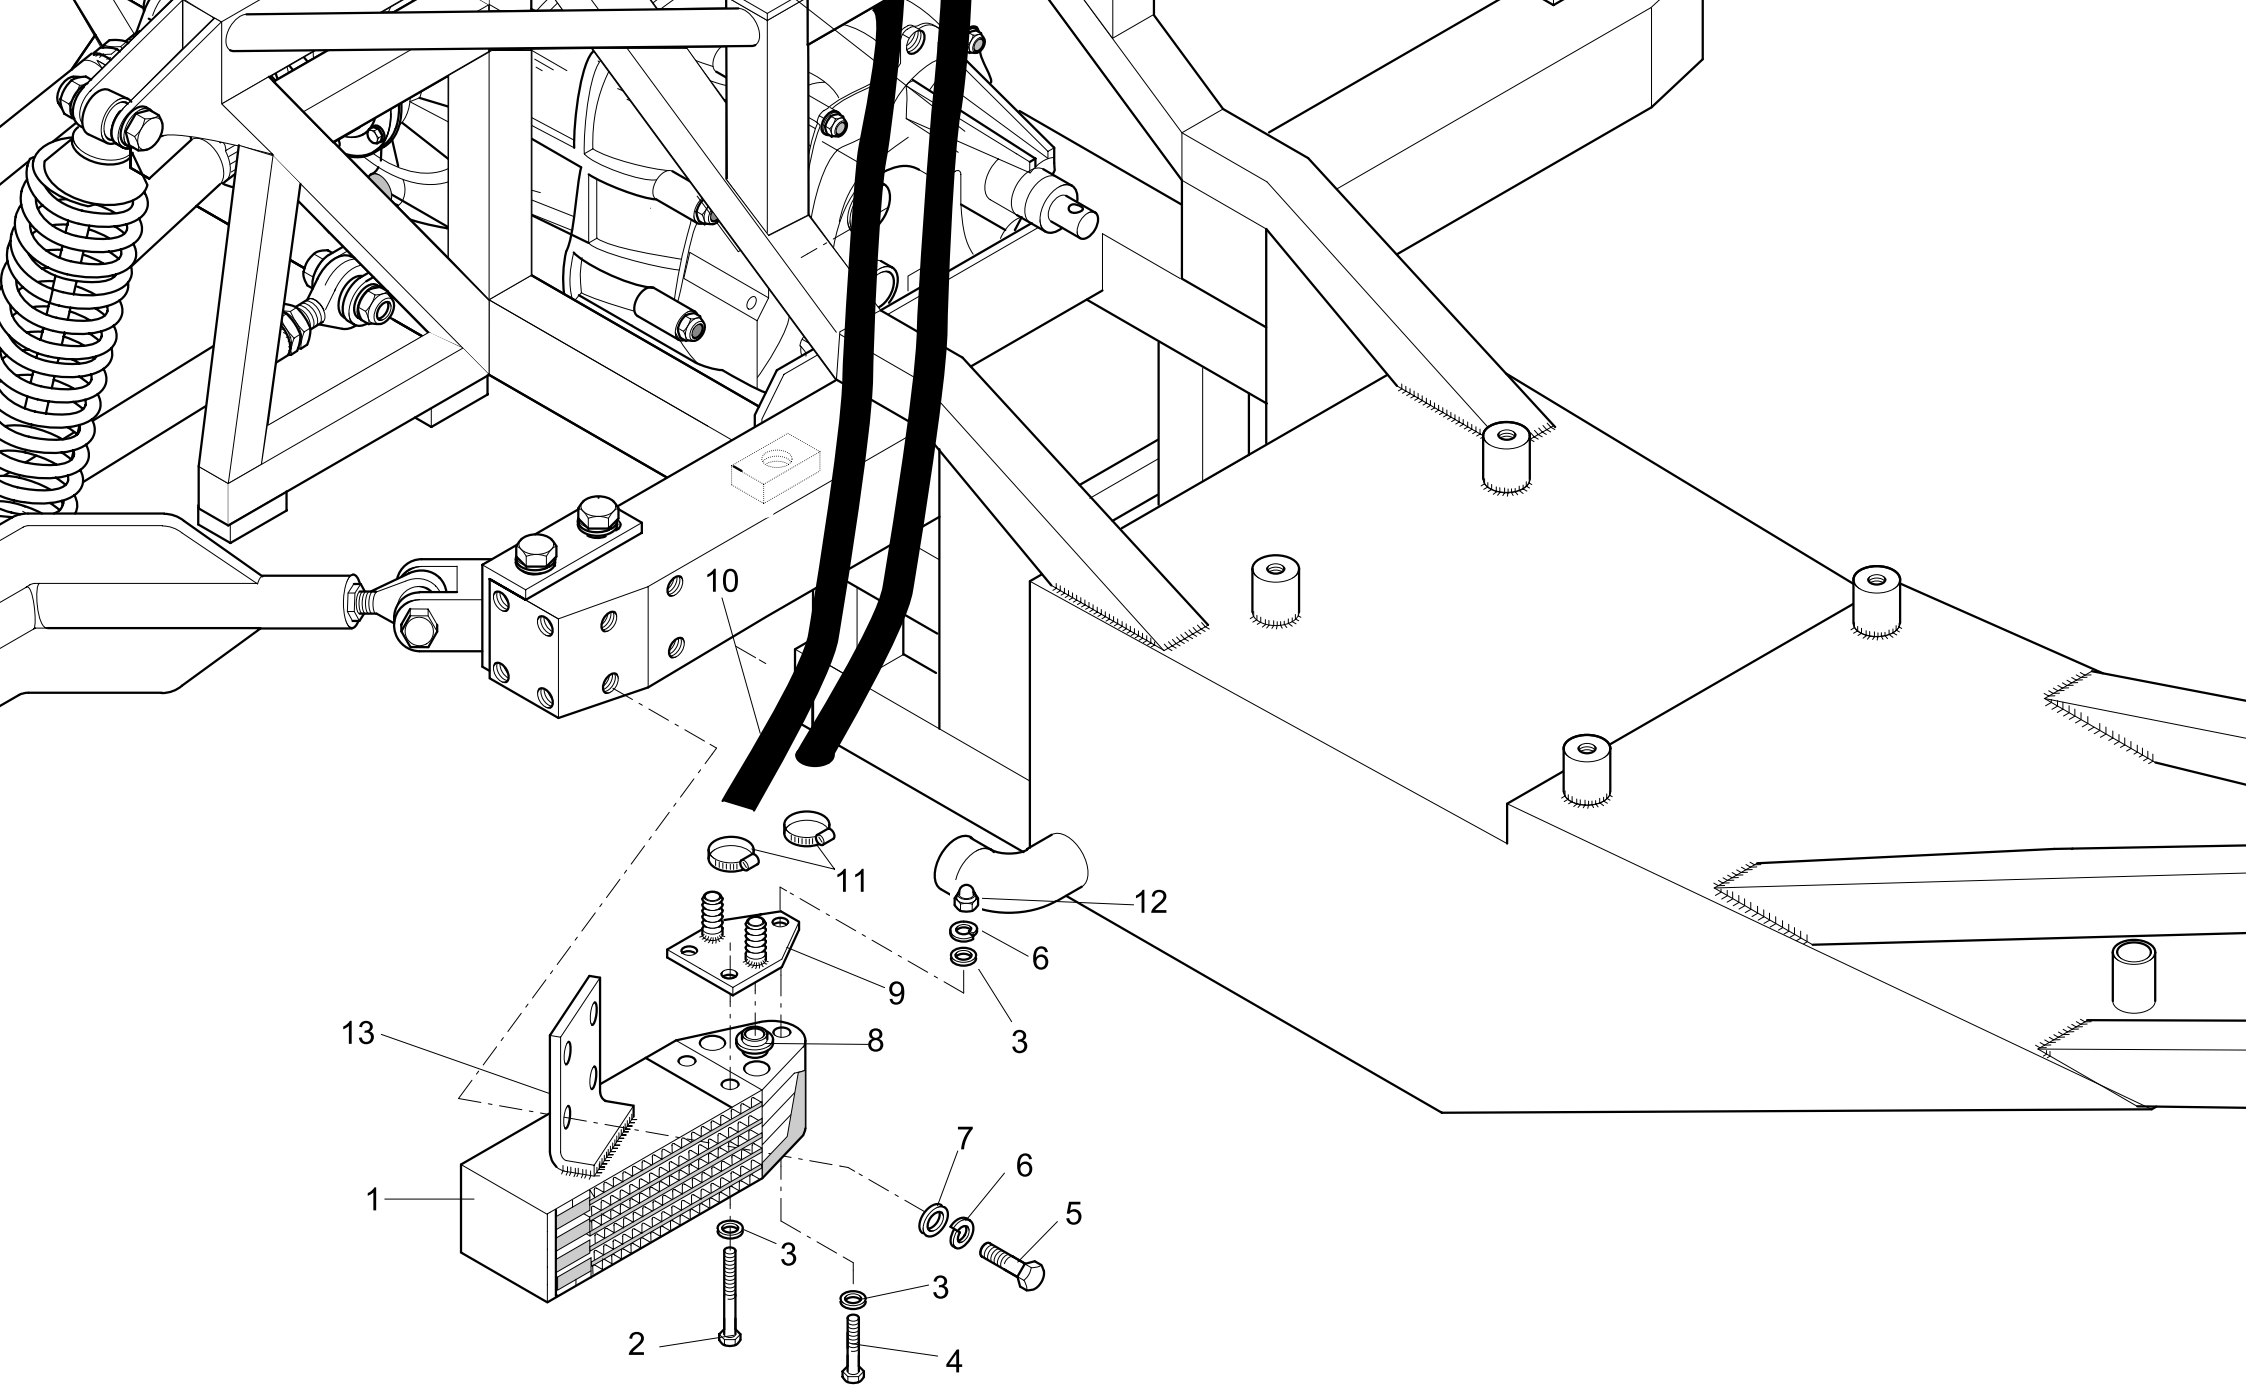

Modell: rewaco FX4 Base Seite: 15

Pos.	Q'ty	Art.-No.	Article Description
1	1	03-00686-J-01	oil cooler VW
2	2	0933 A2 6/80	hexagon screw A2 M06X80
3	6	0125 A2 6	washer A2 M6
4	1	0933 A2 6/40	hexagon screw A2 M06X40
5	1	0933 A2 6/25	hexagon screw A2 M06X25
6	7	0127 B A2 6	spring lock washer Form B A2 M6
7	4	9021 A2 6	washer, body, A2 M6
8	2	16 0112 2	gasket, oil cooler adaptor
9	1	03-00691-J-01	adaptor, oil cooler
10	2	15 0030 2	hose, oil cooler 1/2" 1 meter
11	4	539 16 25	Zebra-hose clip B 9mm SW6 16-25
12	3	1587 A2 6	acorn nut A2 M06
13	1	06-00728-F-01	mount for oil cooler FX4/FX5

Assembly Instructions 16

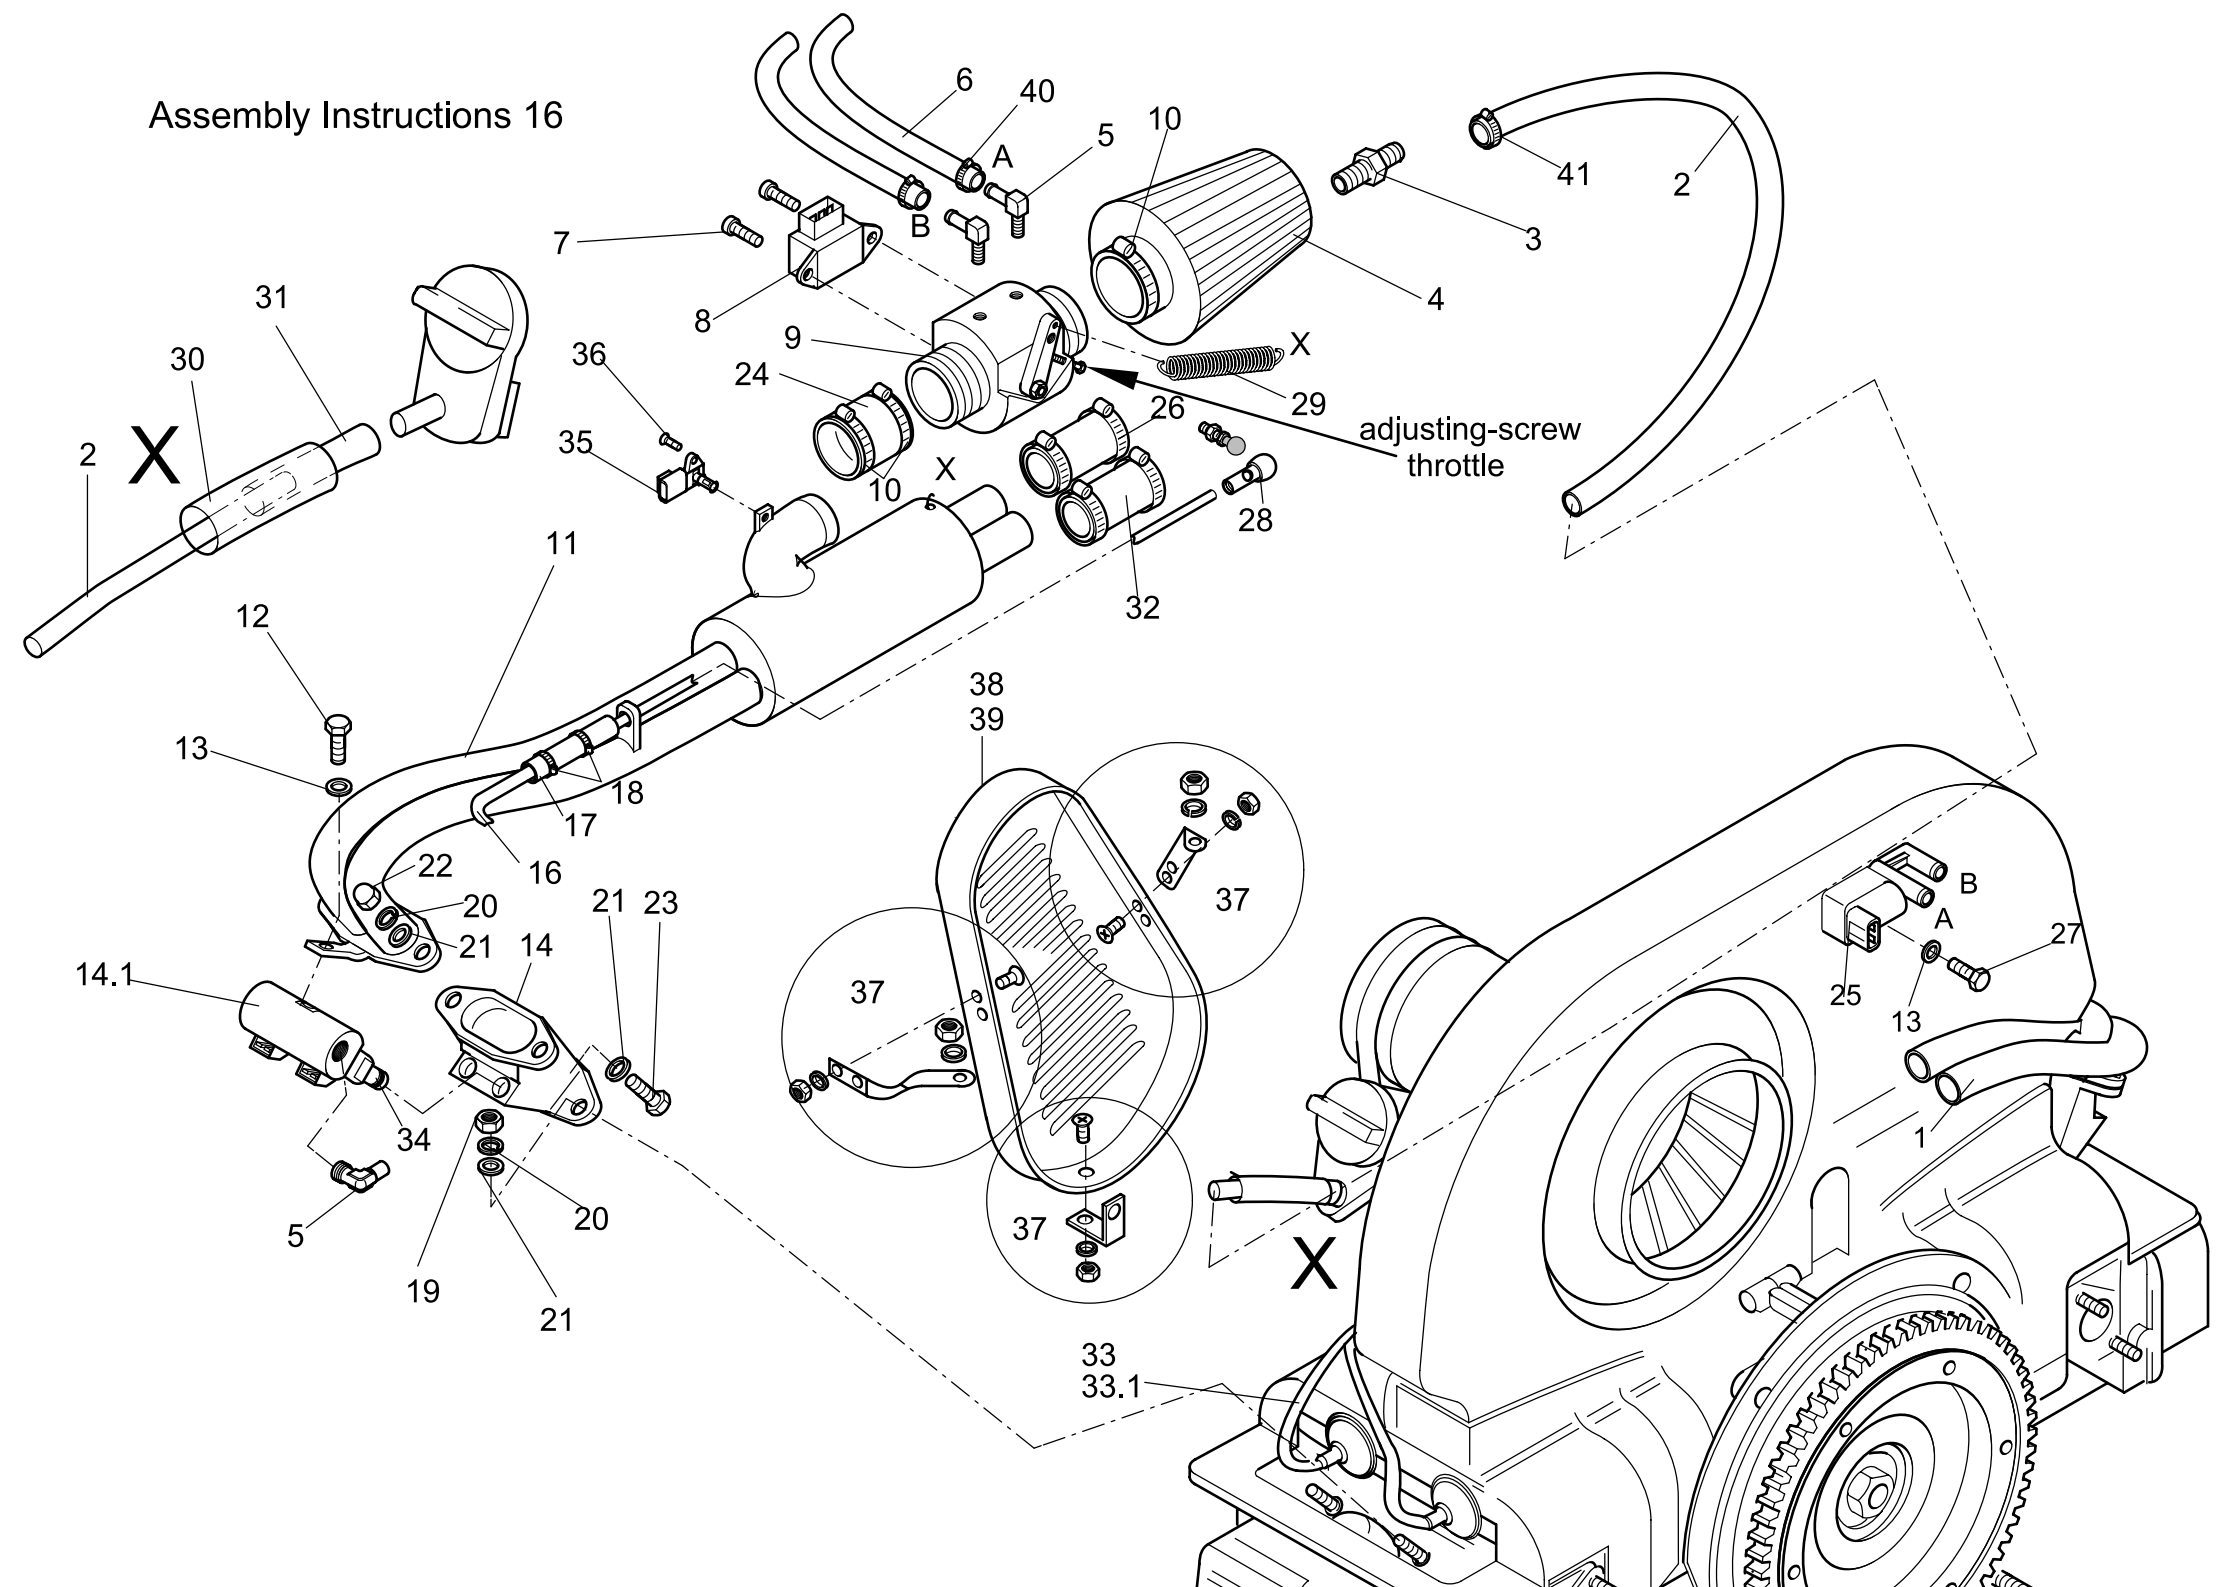


Modell: rewaco FX4 Base Seite: 16

Pos.	Q'ty	Art.-No.	Article Description
1	1	03-00554-F-01	suction tube, double channel 1.6/1.8 injector, lh
2	1	03-00693-U-01	breather hose, engine, 14mm
3	1	08-00574-F-01	connection of engine breather at air filter, FX
4	1	03-00113-01	airfilter Green, conical, 55mm, FX
5	4	34 6043 0	fitting 1/8 NPTF 90°
6	2	11-00546-U-01	fuel hose, inner dia.: 7.0mm, outer dia.: 13.0mm, 340mm long DIN 73379, rubber with textile inlay, plain, black
7	2	7991 A2 4/20	hexagon socket countersunk flathead screw A2 M04X20
8	1	01-00087-B-01	potentiometer for throttle valve, VW fuel injection engine
9	1	03-00095-L-01	throttle valve housing, compl. with shaft, housing, lever and throttle
10	3	07-00046-M-01	hose clamp Torro 50-70 mm for airfilter
11	1	03-00553-F-01	suction tube, double channel 1.6/1.8 injector, rh
12	2	0933 A2 6/20	hexagon screw A2 M06X20
13	3	0125 A2 6	washer A2 M6
14	2	01-00136-D-01	adaptor intake manifold FX / aluminium 108.5 x 61.6 x 86
14,1	2	03-00598-L-01	fuel distributor rail/injection nozzle
15	1	03-00547-u-01	fuel hose, inner dia.: 7.0mm, outer dia.: 13.0, length: 650mm, DIN73379, rubber with textile insert, plain, black
16	1	10 0100 1	throttle cable, complete HS/FX/RF with inner cable and outer housing
17	1	03-00569-U-01	fuel hose, inner dia.: 7.0mm, outer dia.: 11.0, length: 50mm, DIN73379, rubber with textile insert, plain, black
18	2	16 0120 1	hose clamp Cobra 10 mm
19	6	0934 A2 8	hexagon nut A2 M08

Modell: rewaco FX4 Base Seite: 16

Pos.	Q'ty	Art.-No.	Article Description
20	8	0127 B A2 8	spring lock washer Form B A2 M8
21	8	0125 A2 8	washer A2 M8
22	2	1587 A2 8	acorn nut A2 M08
23	4	0933 A2 8/25	hexagon screw A2 M08X25
24	1	03-00717-E-01	rubber connector throttle valve/intake manifold FX, 55mmx100mm
25	1	13 0670 1	valve for cold start FX/RF
26	4	16 0121 1	hose clamp Torro 40-60 mm
27	1	0933 A2 6/25	hexagon screw A2 M06X25
28	1	01-00678-F-01	knuckle joint DIN 71802/C10-M6 zinc plated, white
29	1	06-00176-N-01	tension spring for gear shift; wire dia.: 1.0, spring outer dia.: 9.0mm; length: 100
30	1	10 0101 2	heat shrinkable tubing grey diam.= 24/8
31	1	03-00694-U-01	breather hose, engine, 19mm
32	2	03-00565-E-01	rubber connector suction tube FX
33	1	01-00160-01	set of ignition cables FX 1.6/1.8, fuel injection
33,1	4	20 5489 1	spark plug BERU UX79 for 1.6 and 1.8 Mex.-engines
34	4	280 150 921	injection nozzle FX 1.6/1.8 since 04/2006
35	1	01-00096-E-01	MAP sensor RF/ intake manifold
36	1	7991 ZN 5/10	countersunk screw zinc M05X10
37	1	16 0033 2	mounting kit, v-belt cover
38	1	16 0031 2	v-belt cover, grid
39	1	16 0032 2	v-belt cover, slotted
40	4	539 8 12	Zebra-hose clip B 7.5mm SW6 8-12
41	1	539 12 20	Zebra-hose clip B 9mm SW6 12-20

Assembly Instructions 16.1

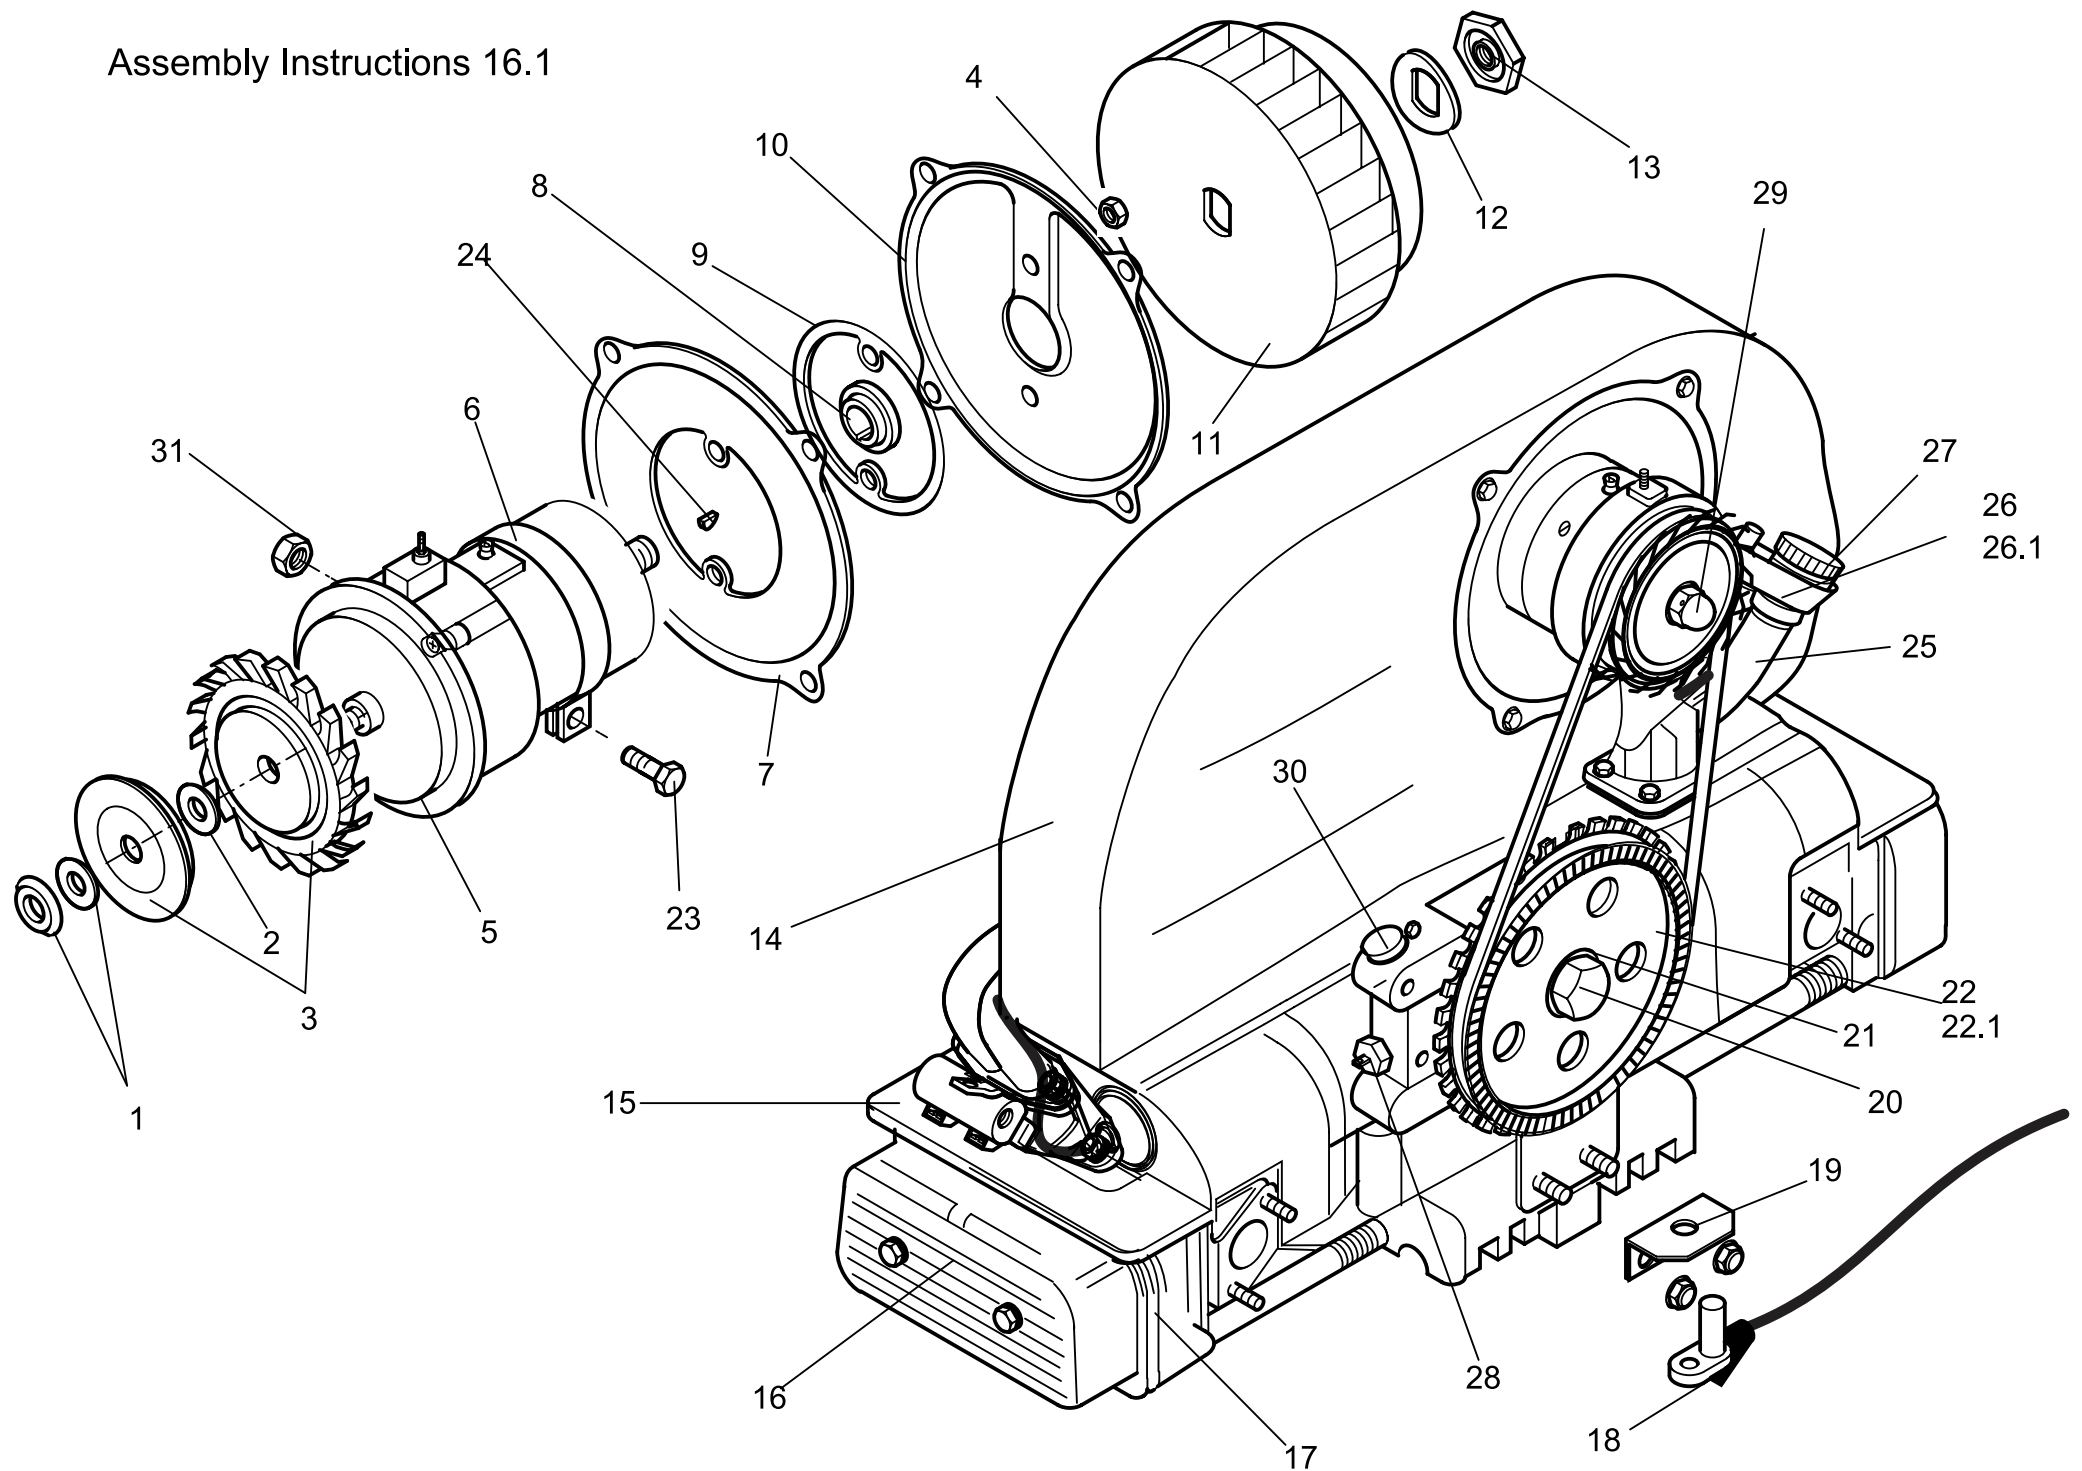


Modell: rewaco FX4 Base Seite: 16,1

Pos.	Q'ty	Art.-No.	Article Description
1	1	03-00713-G-02	cup washer for generator
2	1	03-00714-G-02	shim, belt pulley
3	1	NEU 1--22 1028 1	v rod pulley, generator, std.
4	2	0985 ZN 6	hexagon nut, self-locking zinc plated M06
5	1	06 0031 1	generator, VW, 55Ah (AC)
6	1	16 0089 7	tension band, chrome-plated, generator
7	1	03-00586-G-02	front back plate, generator
8	1	03-00704-J-01	hub for fan wheel
9	1	03-00590-G-02	reinforcement sheet, generator back plate
10	1	03-00587-G-02	rear back plate, generator
11	1	03-00703-J-01	fan wheel, VW
12	1	03-00705-J-01	spring washer for fan wheel
13	1	03-00706-J-01	nut for fan wheel, VW
14	1	20 9001 1	fan housing, chrome plated
15	1	22 1012 1	cylinder cover plate, chrome plated, 2 channels
16	1	16 0161 2	cylinder head cover, aluminium (set)
17	2	20 6511 2	gasket, valve cover
18	1	01-00086-B-01	rev sensor for VW fuel injection engine
19	1	04-00204-B-01	bracket, rev sensor
20	1	16 0253 2	screw, v-belt pulley, crankshaft, chrome
21	1	11 7030 1	plate spring, v belt pulley
22	1	04-00199-F-01	v rod pulley, aluminium, with angular spacing, FX (with tooth wheel for rev recognition)
23	1	0933 A2 8/40	hexagon screw A2 M08X40
24	1	03-00705-J-01	spring washer for fan wheel
25	1	03-00710-J-01	generator stand, VW
26	1	04-00686-F-01	oil filler neck, aluminium
27	1	09-00004-U-01	cap, fuel tank, lockable RF1/ cap, oil filler neck VW

Modell: rewaco FX4 Base Seite: 16,1

Pos.	Q'ty	Art.-No.	Article Description
28	1	20 3000 1	oil pressure switch
29	1	03-00712-G-02	nut for generator pulley
30	1	08-00079-N-01	aluminium cover for ignition distributor drive
31	1	0985 A2 8	hexagon nut, self-locking A2 M08

Assembly Instructions 17

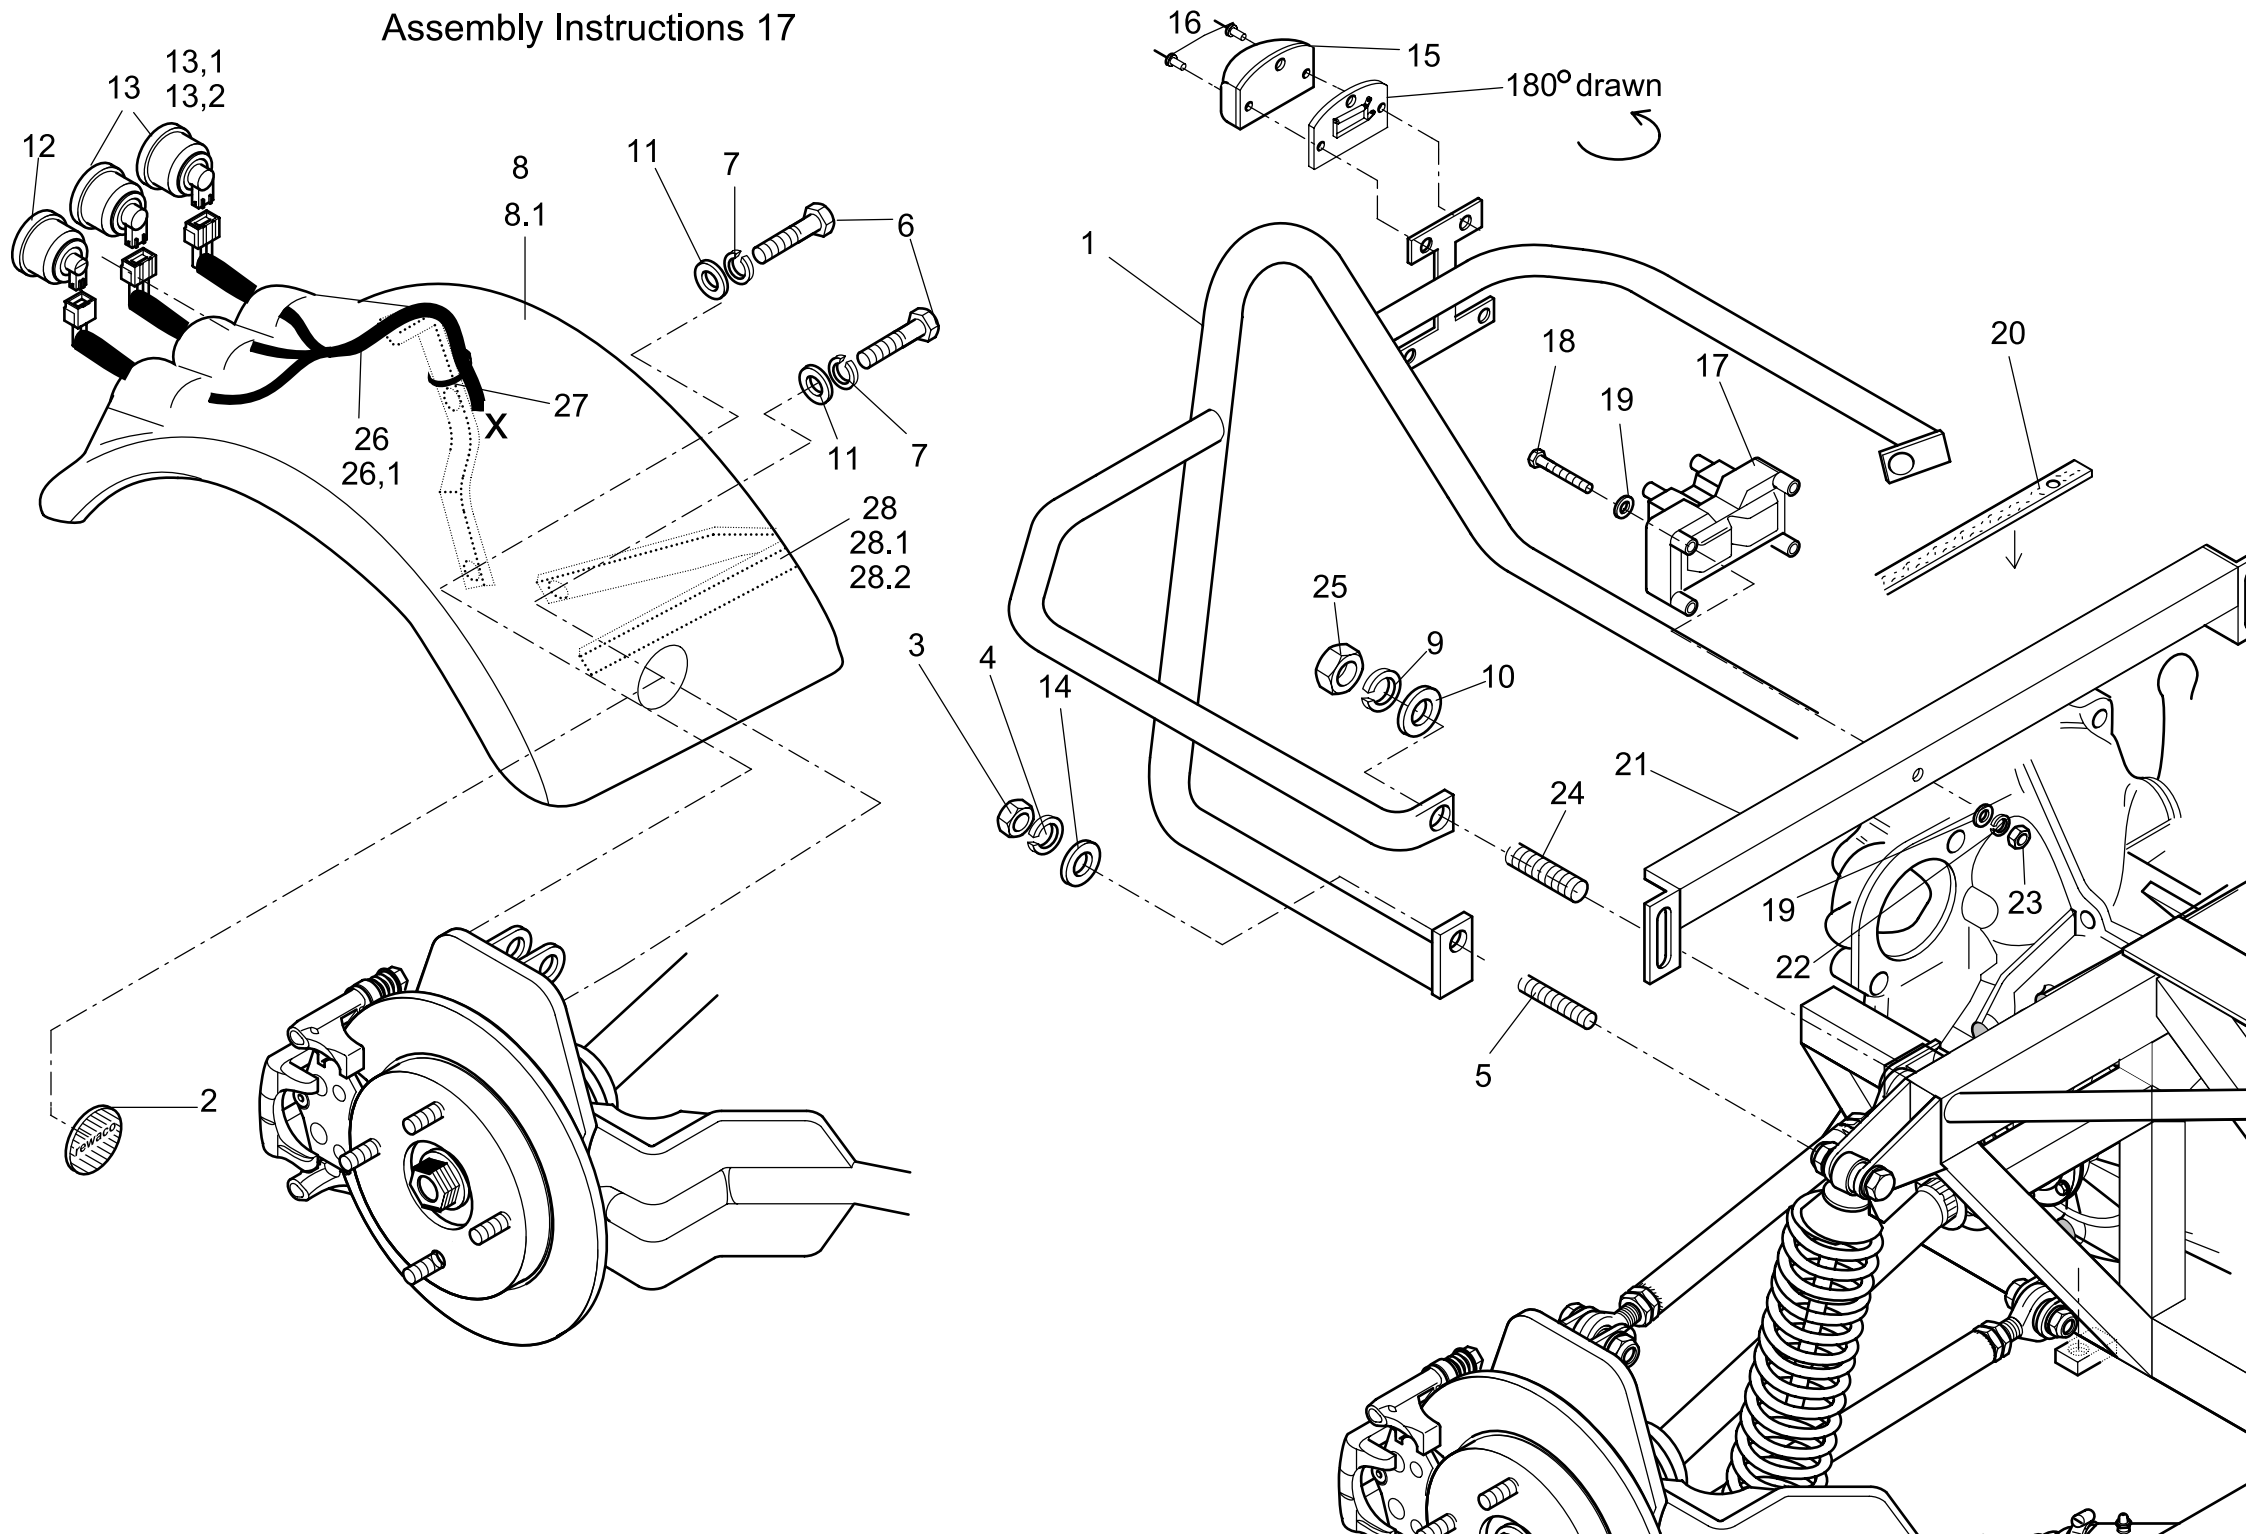


Modell: rewaco FX4 Base Seite: 17

Pos.	Q'ty	Art.-No.	Article Description
1	1	08-00100-U-01	engine protection bar FX4 since 04/2006, stainless steel
2	2	06-00717-U-01	decal rewaco logo, round bow
3	6	0934 ZN 10	hexagon nut zinc plated M10
4	6	0127 A ZN 10	spring lock washer A zinc plated M10
5	2	0938 ZN 10/30	stud bolt 8.8 zinc plated M10X30
6	4	0961 ZN 10/1.25/30	hexagon screw 10.9 zinc plated M10x1.25x30
7	1	18 0589 1	bulb 12V 5W
8	2	06-00545-U-01	mudguard FX4/FX6 lh/rh 12"
8,1	2	06-00544-U-01	mudguard FX4/FX6 lh/rh 10-11"
9	2	0127 B A2 12	spring lock washer Form B A2 M12
10	2	0125 A2 12	washer A2 M12
11	4	0125 A2 10	washer A2 M10
12	2	01-00182-F-01	turn signal HS/FX with aluminium ring (without plug)
13	4	01-00186-F-01	tail light/brake light FX with aluminium ring (without plug)
13,1	1	04-00198-F-01	back up light FX with aluminium ring (without plug)
13,2	1	01-00184-F-01	rear fog light FX with aluminium ring (without plug)
14	2	9021 A2 10	washer, body, A2 M10
15	1	18 0991 2	lamp, registration plate, chrome plated, HS/FX
16	2	N6300464	blind rivet Al/St flat 4x12
17	1	01-00094-M-01	ignition coil (Bosch) for fuel injection engine Ford + VW
18	2	09-00177-U-01	hexagon screw A2 M06X55
19	2	0125 A2 6	washer A2 M6
20	1	19 0122 3	sponge foam 30x6mm 1000mm long
21	1	08-00124-F-01	rear cross brace FX4
22	2	0127 B A2 6	spring lock washer Form B A2 M6

Modell: rewaco FX4 Base Seite: 17

Pos.	Q'ty	Art.-No.	Article Description
23	2	0934 A2 6	hexagon nut A2 M06
24	2	0938 ZN 12/40	stud bolt 8.8 zinc plated M12X40
25	2	0934 A2 12	hexagon nut A2 M12
26	1	01-00140-U-01	wiring harness taillight FX4/6, lh, since 04/2006 - contacts mounted, 1x plug housing separately
26,1	1	01-00138-01	wiring harness taillight FX4/6, rh, since 04/2006 - contacts mounted, 1x plug housing separately
27	16	N1304850 S	cable strap 4.8X200 mm
28	1	06-00797-F-01	bracket for mudguard 10", FX, for laminating, lh rear, rh front
28,1	1	06-00534-F-01	bracket for mudguard 10", FX, for laminating, lh front, rh rear
28,2	1	06-00796-F-01	bracket for mudguard 12", FX, for laminating, lh front, rh rear
28,3	1	08-00132-F-01	bracket, mudguard 12" FX, for laminating, lh rear, rh front
28,4	1	08-00131-F-01	bracket for mudguard 11", FX, for laminating, lh front, rh rear
28,5	1	06-00795-F-01	bracket for mudguard 11", FX, for laminating, lh rear, rh front
29	1	14 0050 1	breather hose, engine, 14mm
30	2	33 1049 1	reflector with SAE certificate
31	1	18 0589 1	bulb 12V 5W
32	6	01-00218-01	plug housing for taill light/brake light RF1, 3 pole

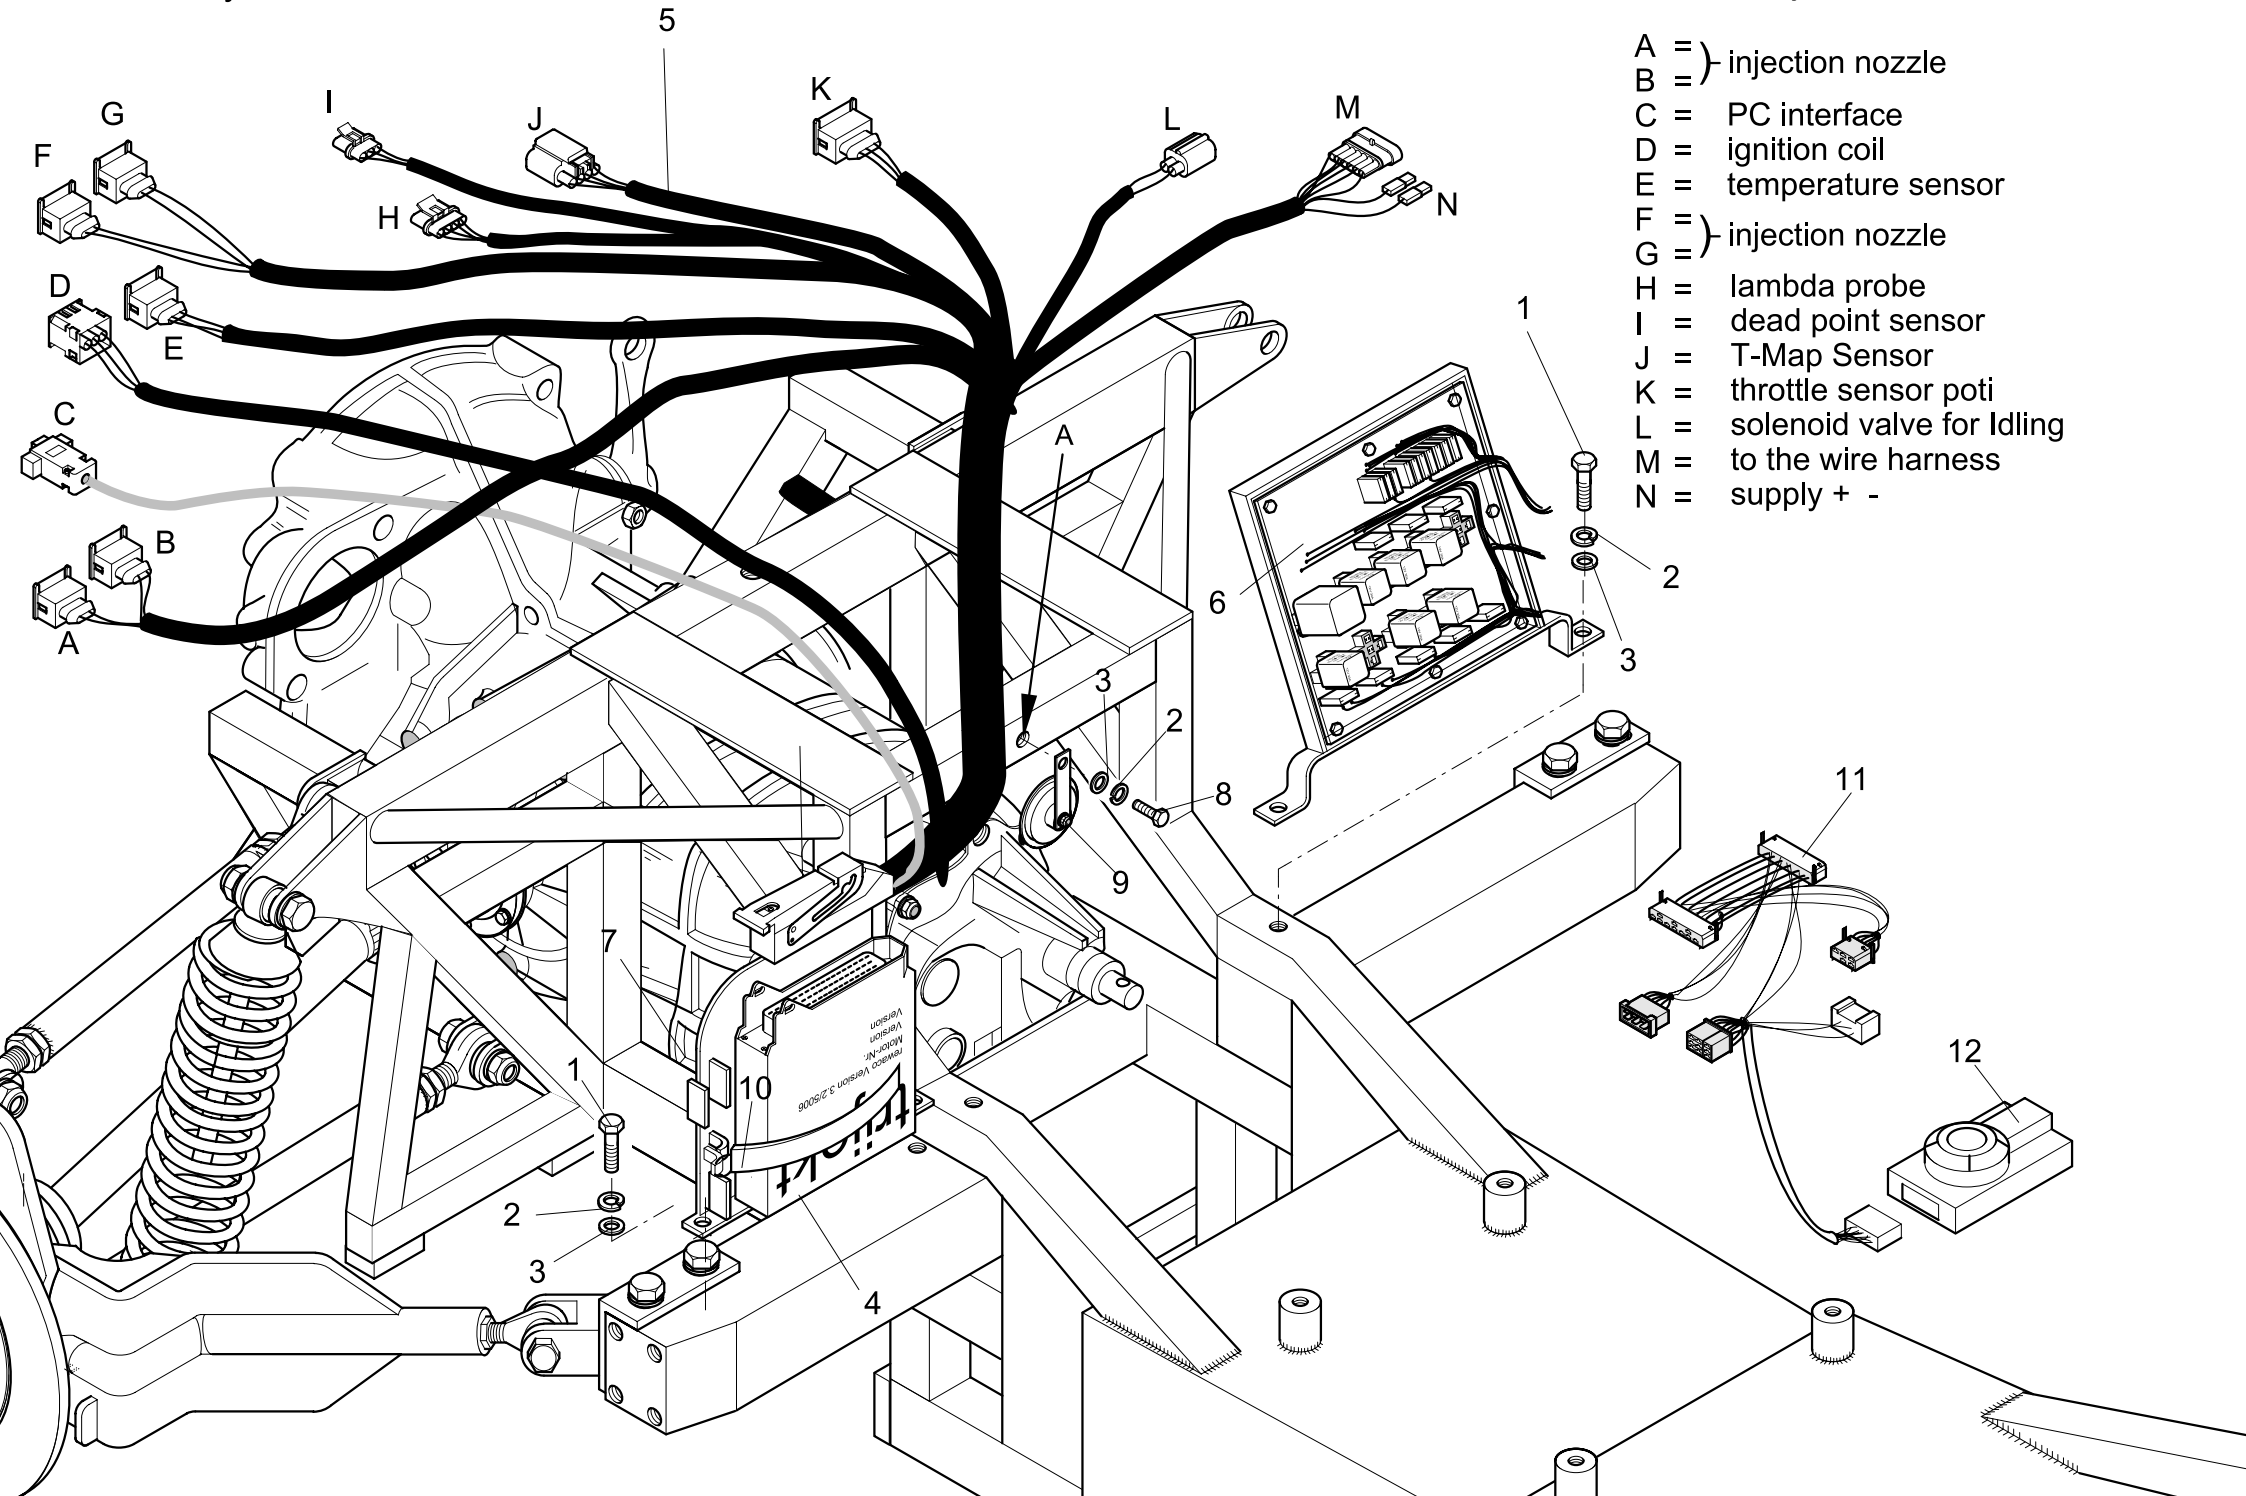


Modell: rewaco FX4 Base Seite: 18

Pos.	Q'ty	Art.-No.	Article Description
1	4	0933 A2 8/16	hexagon screw A2 M08X16
2	5	0127 B A2 8	spring lock washer Form B A2 M8
3	5	0125 A2 8	washer A2 M8
4	1	20 7004 1	ignition-injection control unit, trijekt, since 09/05
5	1	01-00147-U-01	wiring harness engine FX4-FX5 since 04/2006
6	1	04-00198-U-01	central electric device FX/RF
7	1	03-00551-U-01	holder for ECU and FX
8	1	0933 A2 8/20	hexagon screw A2 M08X20
9	1	09 0090 2	horn assembly
10	1	06-00743-U-01	rubber band for ECU
11	1	01-00214-01	wiring harness, alarm device, FX-RF
12	1	01-00215-01	wiring harness generator, FX
13	1	18 0585 2	turn signal relay, HS1-6/RF1
14	6	18 0586 1	relay 30A
15	4	20 2003 1	fuse 15 Amp
16	4	20 2004 1	fuse 10 Amp
17	2	20 2005 2	fuse 25 Amp
18	4	20 2002 1	fuse 20 Amp

Assembly Instructions 19


- a = choppertank
- b = ignition switch
- c = headlight and turn signal bracket
- d = brake fluid reservoir
- e = cockpit
- f = switch assy since 01/2005
- g = fuel pump, electrical, fuel level sender
- h = brake light switch
- i = switch, reversing lamp, VW
- j = fan wheel thermostat
- k = tail light, rh
- l = wiring harness engine + starter motor
- m = ignition-injection motor
- n = horn assembly
- o = fan
- p = tail light, lh, 3. brake light
- q = fuse box
- r =
- s =
- t = ground

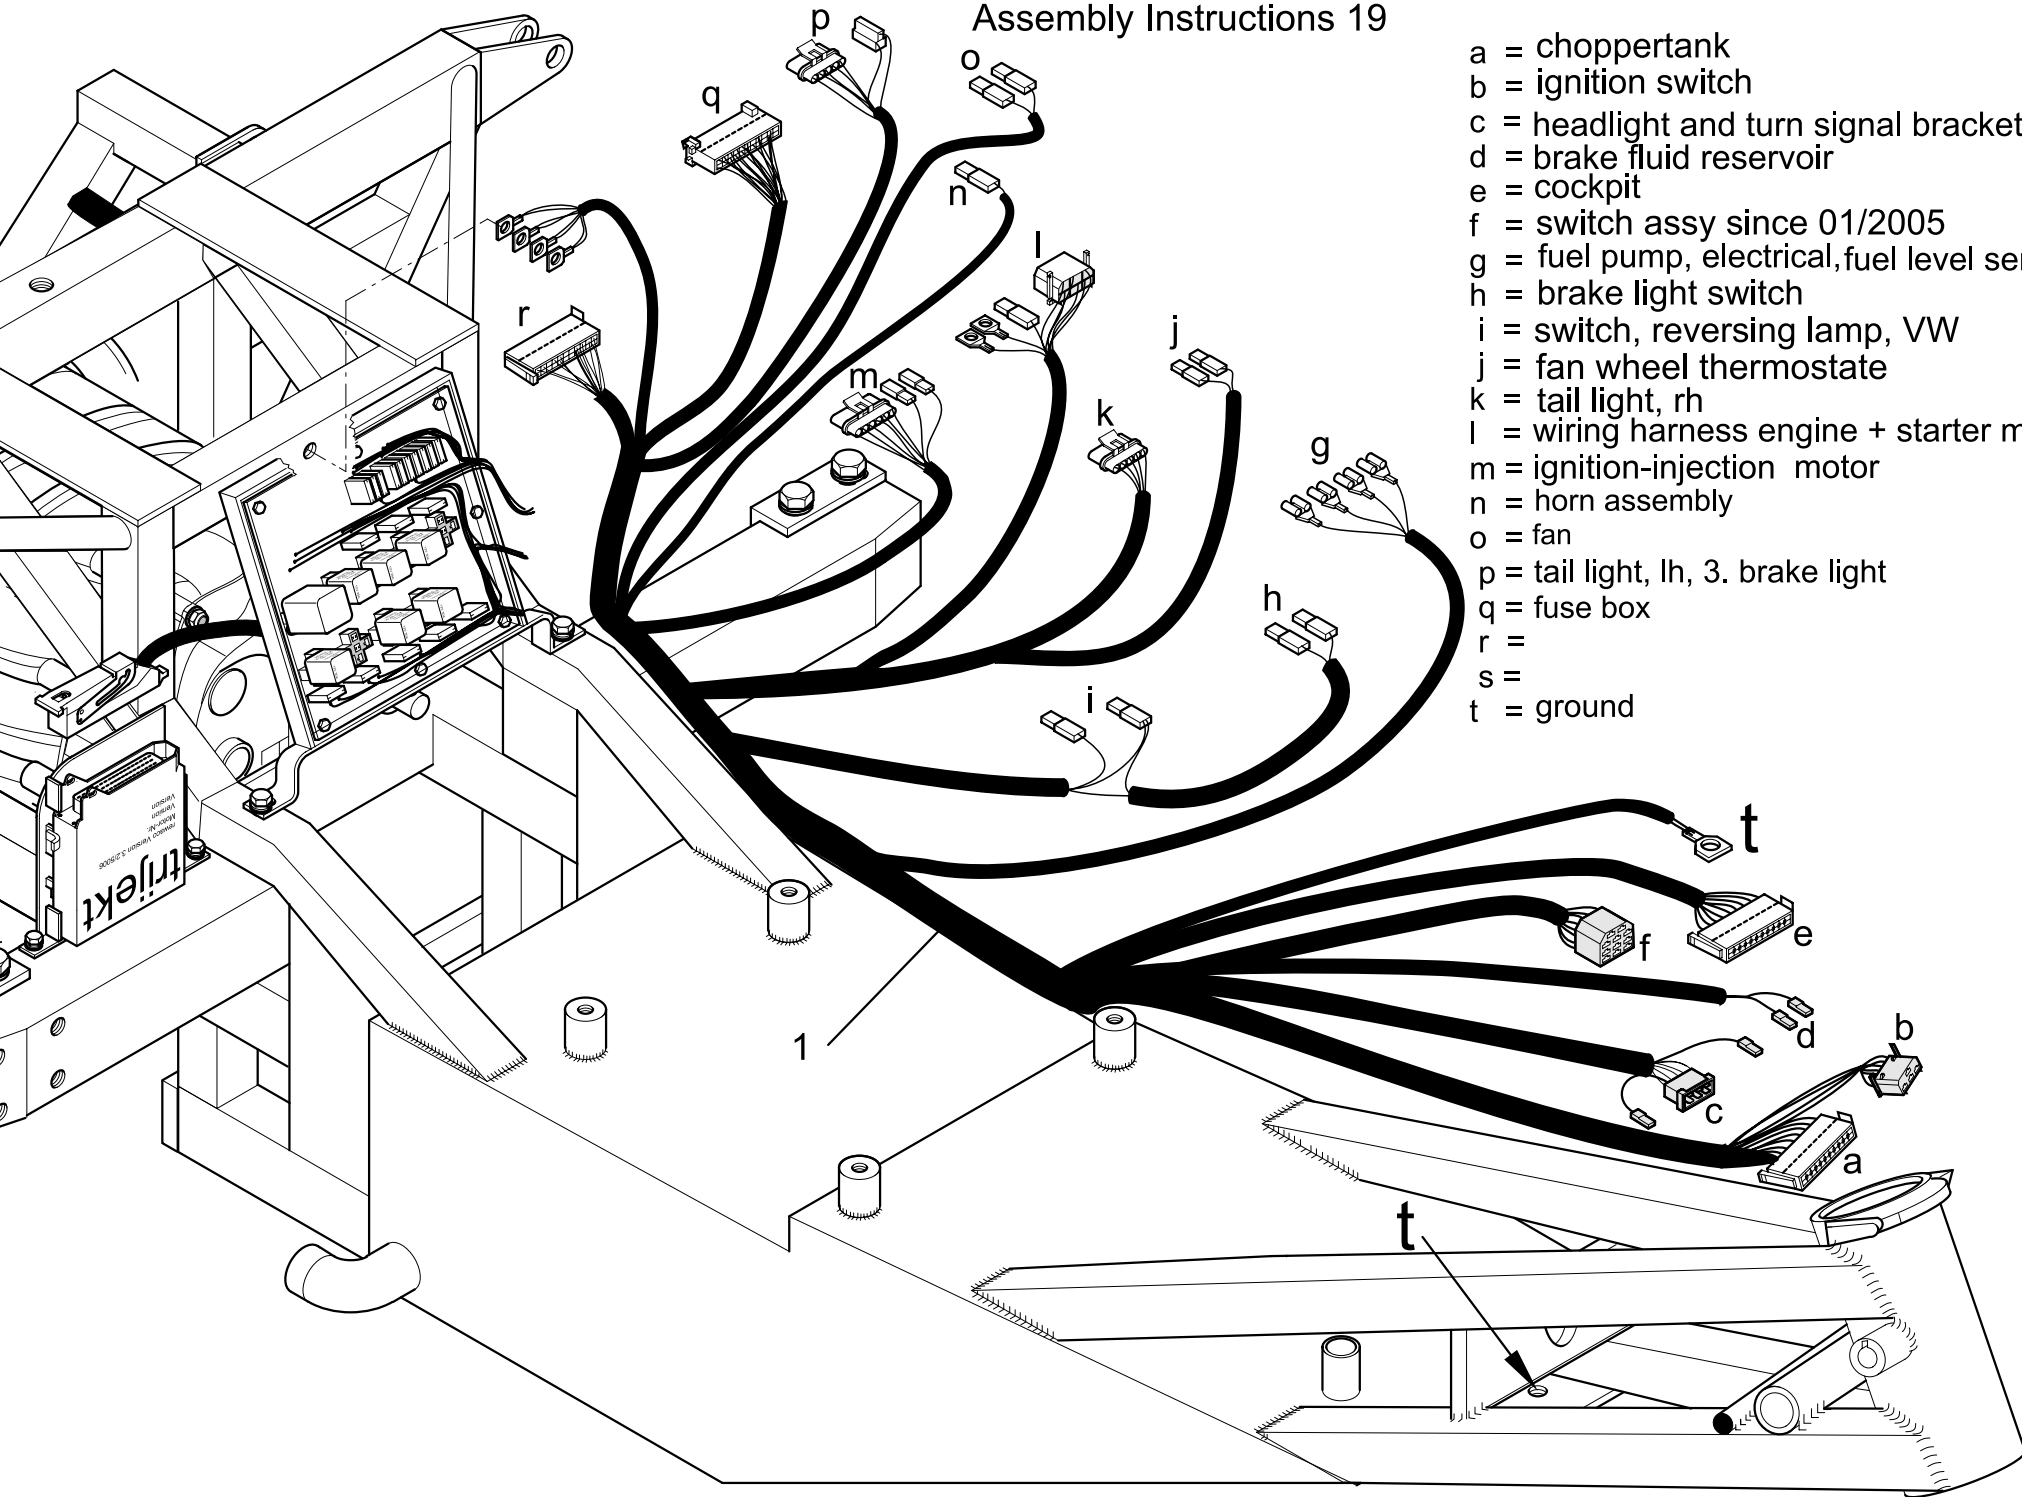

Modell: rewaco FX4 Base Seite: 19

Pos.	Q'ty	Art.-No.	Article Description
1	1	01-00150-U-01	wiring harness chassis FX

Assembly Instructions 20

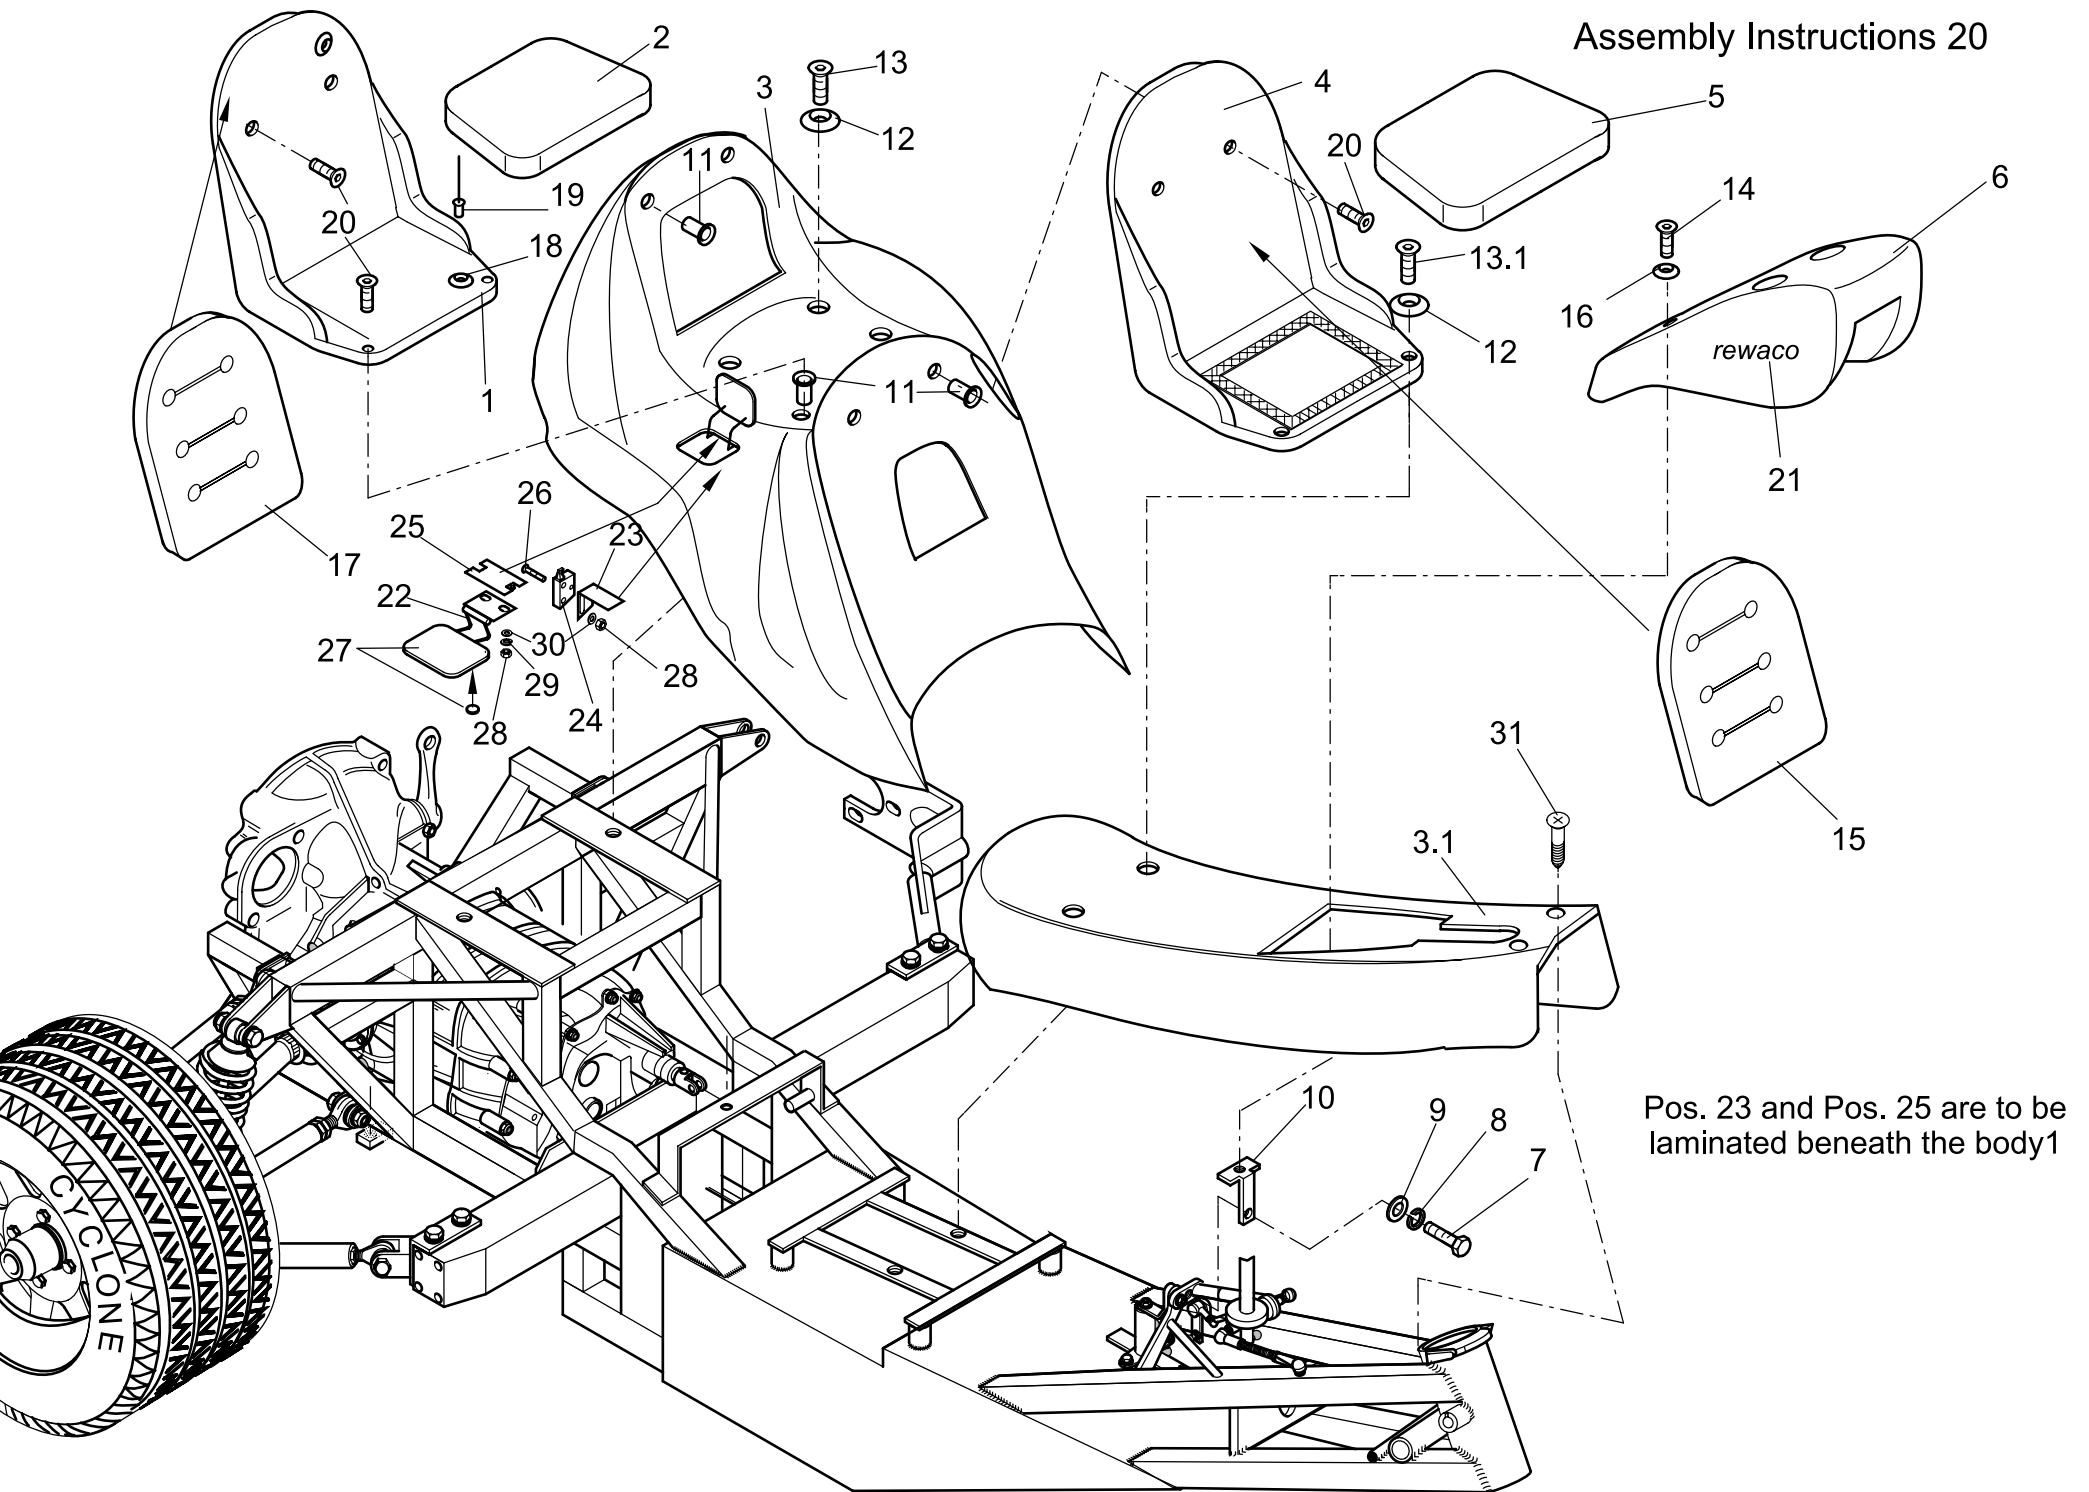

Modell: rewaco FX4 Base Seite: 20

Pos.	Q'ty	Art.-No.	Article Description
1	1	06-00131-C-01	rear seat FX4/FX6, black, without cushions, since 04/2006 till 3/2008
2	1	06-00117-C-01	seat cushion for rear seat FX4/FX6, black, since 04/2006 till 3/2008
3	1	03-00726-A-01	rear body part FX4 for painting
3,1	1	06-00600-F-01	body, forepart, FX4/5/6, for painting
4	1	06-00132-C-01	front seat FX4/FX6, black, without cushions, since 04/2006 till 3/2008
5	1	06-00112-C-01	seat cushion for front seat FX4/FX6, black, since 04/2006 till 3/2008
6	1	06-00602-F-01	dummy tank, Chopper, FX4/5/6 for painting
7	1	0933 A2 8/16	hexagon screw A2 M08X16
8	1	0127 B A2 8	spring lock washer Form B A2 M8
9	1	0125 A2 8	washer A2 M8
10	1	08-00127-F-01	holder for dummy tank mount, Chopper, FX4/FX6
11	4	09-00591-U-01	draw in rivet 9x16 aluminium, screw in rivet M6
12	4	07-00033-U-01	washer for countersunk flathead screws M8
13	2	07-00025-U-01	countersunk flathead screw A2 M8x30 with allan head
13,1	2	07-00032-U-01	countersunk flathead screw A2 M8X35 with allan head
14	1	6912 A4 6/25	hexagon socket screw (flat head) A2 M06X20
15	1	06-00122-C-01	back cushion for front seat FX4/FX6, black, since 04/2006 till 3/2008
16	2	07-00190-U-01	washer for hexagon socket countersunk flathead screw M6
17	1	06-00127-C-01	back cushion for back seat FX4/FX6, black, since 04/2006 till 3/2008
18	4	02 0011 6	snap fastener
19	4	N6302157	blind rivet Al/St counter sunk 3x08

Modell: rewaco FX4 Base Seite: 20

Pos.	Q'ty	Art.-No.	Article Description
20	1	09-00707-U-01	countersunk flathead screw A2 M6x30 with allan head
21	2	19 0300 4	decal rewaco writing since 12/2004
22	1	06-00831-F-01	fork joint for master brake cylinder HS4/HS6 until 12/2000
23	1	06-00838-F-01	fork joint for master brake cylinder HS4/HS6 until 12/2000
24	1	09-00774-A-01	linchpin, top case lid HS4 big
25	1	06-00839-F-01	fork joint for master brake cylinder HS4/HS6 until 12/2000
26	2	09-00762-E-01	Phillips screw, counter sunk A2 M4x25
27	1	06-00841-F-01	fork joint for master brake cylinder HS4/HS6 until 12/2000
28	4	0934 A2 3	hexagon nut A2 M03
29	4	0127 B A2 3	spring lock washer Form B A2 M4
30	4	0125 A2 3	washer A2 M3
31	2	N4,2X32VA	Zebra-Pias-phillips panhead screw 4.2X32 stainless steel, self tapping

Instructions 21

7

The diagram illustrates the connection of a SATA-to-USB adapter cable. One end of the cable, which has a SATA connector and a USB-A connector, is shown being plugged into the SATA port of a drive. The other end of the cable, which has a USB-A connector and a USB-B connector, is shown being plugged into a USB port on a computer. The number 7 is placed near the SATA connector of the cable.

A circular cross-section diagram of a multi-layered structure. The diagram shows a central core with a circular hole, surrounded by several concentric layers. The components are numbered 1 through 9. Component 1 is a small rectangular feature at the top. Component 2 is a larger rectangular feature below it. Component 3 is a cross-shaped feature on the left. Component 4 is a cross-shaped feature at the bottom left. Component 5 is a cross-shaped feature at the bottom. Component 6 is a cross-shaped feature at the bottom right. Component 7 is a cross-shaped feature on the right. Component 8 is a cross-shaped feature at the top right. Component 9 is a cross-shaped feature at the top. The central hole is labeled with 'L' and 'R' on opposite sides. The numbers 15, 30, 30b, 49, 49a, 58, and 59 are also present, likely indicating specific dimensions or material properties.


9 = red-yellow

3

Modell: rewaco FX4 Base Seite: 21

Pos.	Q'ty	Art.-No.	Article Description
1	1	18 0010 2	ignition switch
2	1	18 0020 2	switch, hazard-warning signal flasher
3	1	18 0079 1	voltage gauge, ROAD, Ford + VW
4	1	18 0075 1	fuel gauge, ROAD, VW, 52mm/78Ohm/200
5	1	18 0023 1.1	switch, rear fog light RF1 and HS/FX since 04/2006, yellow control light
6	1	22 1075 1	oil temperature gauge ROAD 150
7	1	06-00757-F-01	upper leather strap, dummy tank, FX
7,1	1	06-00758-F-01	lower leather strap, dummy tank, FX
8	1	20 0211 2	edge protection with rubber seal, 1.4m for dummy tank HS/FX
9	1	02-00192-O-01	gear cover/ frame of slotted piece, gear shift, polished
10	1	06-00531-F-01	rubber bellow, gearshift lever, FX
11	8	0934 A2 4	hexagon nut A2 M04
12	1	06-00532-D-01	frame for rubber bellow, gearshift lever
13	8	7991 A2 4/20	hexagon socket countersunk flathead screw A2 M04X20
14	8	0125 A2 4	washer A2 M4
15	1	01-00144-U-01	wiring harness, dummy tank, RF1 and HS4-HS5-HS6 since 04/2006
16	1	01-00212-01	lighter socket, dia. 36mm, length 55mm, with waterprotection cap, 80cm wire + 8A fuse


Assembly Instructions 22

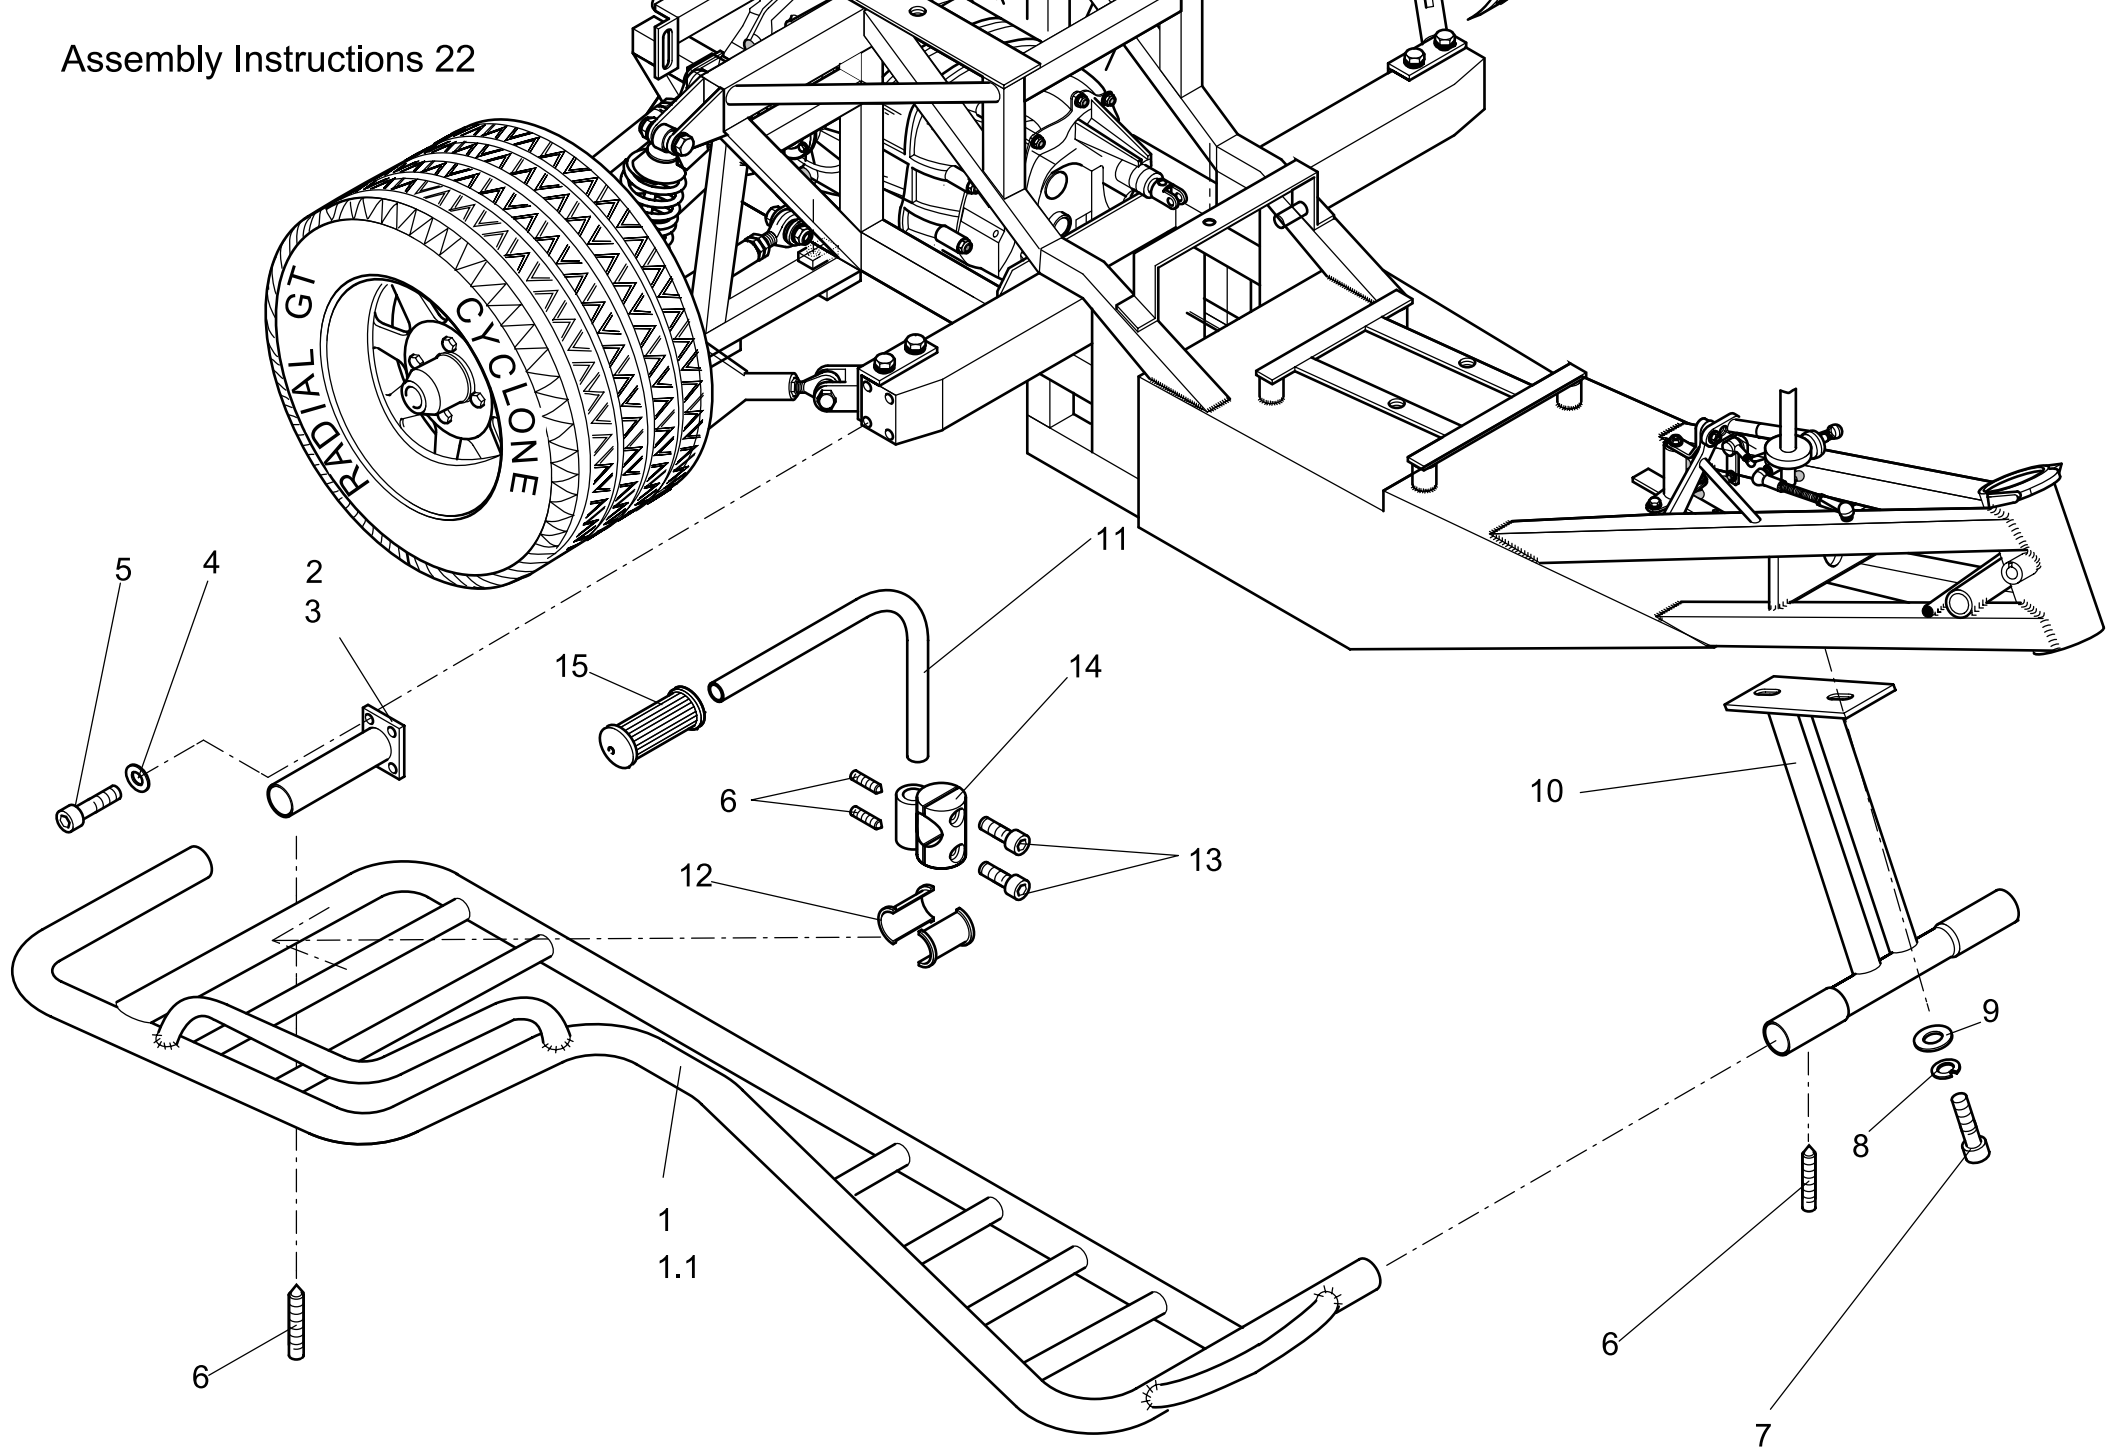

Modell: rewaco FX4 Base Seite: 22

Pos.	Q'ty	Art.-No.	Article Description
1	1	18 0016 1	SIPS, lh, stainless steel
1,1	1	18 0025 1	SIPS, rh, stainless steel
2	1	08-00564-F-01	mount, SIPS, FX, rh
3	1	08-00565-F-01	mount, SIPS, FX, lh
4	8	0125 A2 10	washer A2 M10
5	8	0912 A2 10/20	hexagon socket screw A2 M10X20
6	8	0913 A2 8/8	hexagon socket screw A2 M08X08 (slug)
7	2	0912 A2 10/25	hexagon socket screw A2 M10X25
8	2	0127 B A2 10	spring lock washer Form B A2 M10
9	2	9021 A2 10	washer, body, A2 M10
10	1	09 0025 0	footrest bracket, front for SIPS HS/FX
11	2	09 0081 2	footrests, rear FX and RF (set), lh + rh
12	2	09 0082 3	clamping piece for rear footrest, FX and RF
13	4	0912 A2 10/30	hexagon socket screw A2 M10X30
14	2	06-00530-U-01	counterpart for footrest fixation FX and RF
15	1	22 1051 1	pad, pedal, chrome plated (pair)


Assembly Instructions 23

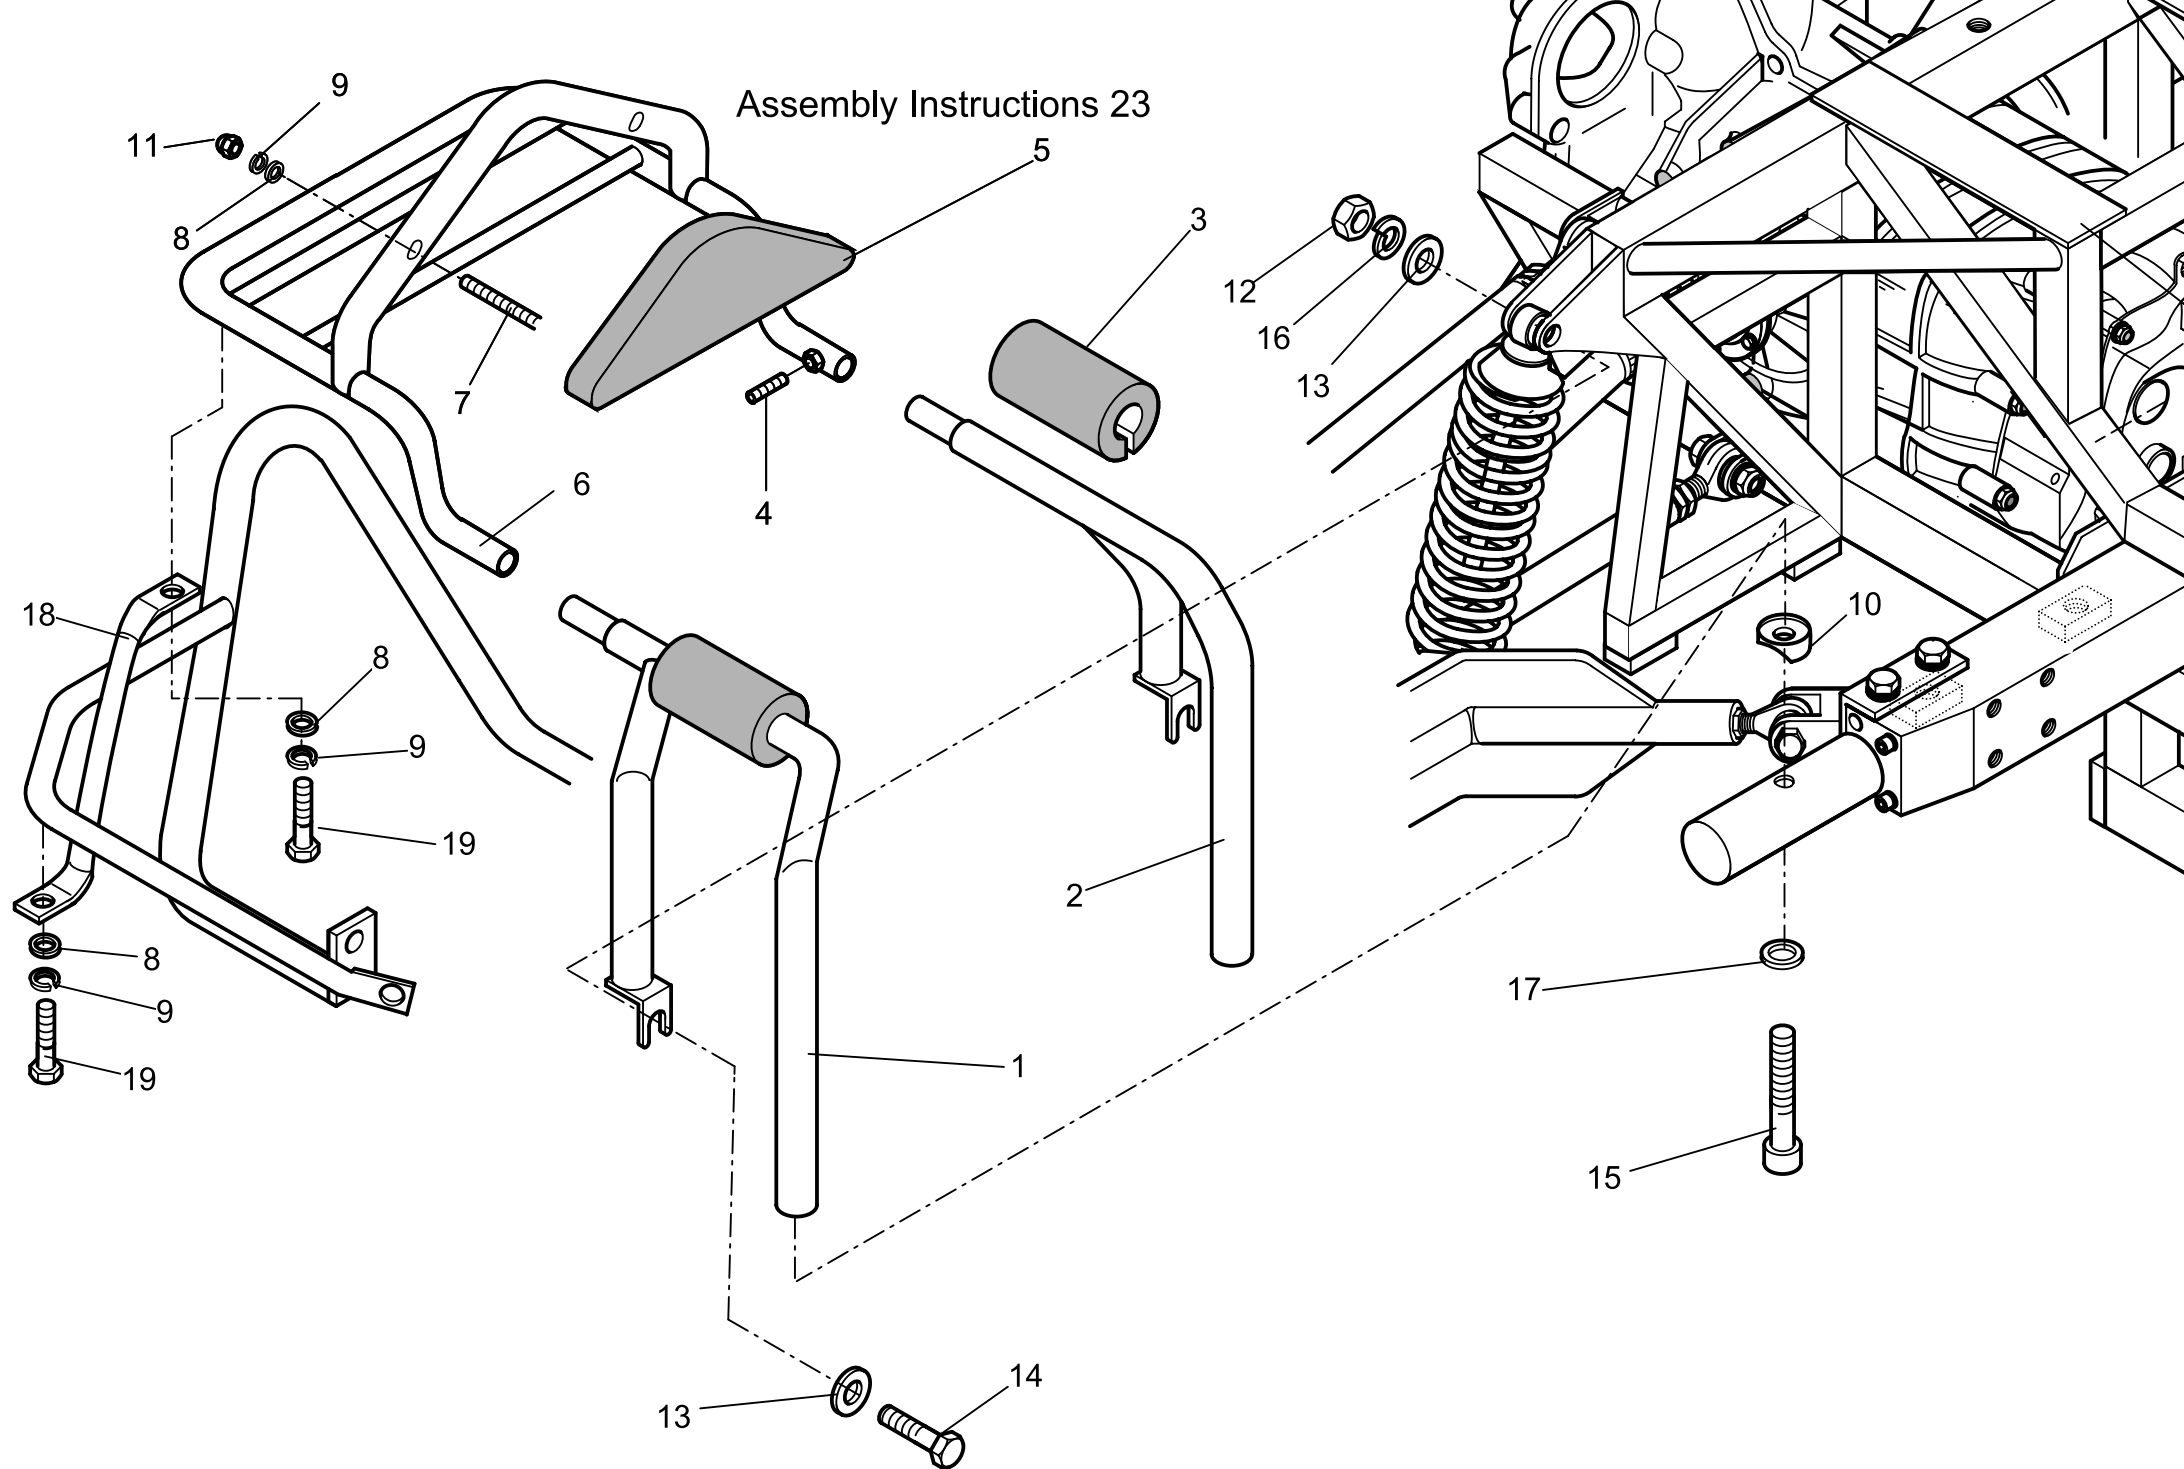

Modell: rewaco FX4 Base Seite: 23

Pos.	Q'ty	Art.-No.	Article Description
1	1	05-00176-F-01	rail FX4/FX6, lh, stainless steel, since 01/2007
2	1	05-00177-F-01	rail FX4/FX6, rh, stainless steel, since 01/2007
3	2	05-00188-E-01	arm pad, rail FX4-5-6, black
4	2	0913 A2 8/8	hexagon socket screw A2 M08X08 (slug)
5	1	20 1832 0	neck cushion, Sissy Bar HS4-HS6 / FX4-FX6 black
6	1	05-00178-F-01	luggage rack for leather luggage roll, FX4, with Sissy Bar, stainless steel, since 04/2006
7	2	0976 ZN 8/80	threaded bolt zinc plated M08X80
8	6	0125 A2 8	washer A2 M8
9	6	0127 B A2 8	spring lock washer Form B A2 M8
10	2	38 0030 2	spacer, rail HS4 and FX4, at SIPS
11	2	1587 A2 8	acorn nut A2 M08
12	2	0934 ZN 12	hexagon nut zinc plated M12
13	4	0125 ZN 12	washer zinc plated M12
14	1	0933 ZN 12/60	hexagon screw zinc plated M12X60
15	2	0912 A2 10/90	hexagon socket screw A2 M10X90
16	2	0127 A ZN 12	spring lock washer A zinc plated M12
17	2	0125 A2 10	washer A2 M10
18	2	06-00592-F-01	rail support, 400 mm
19	2	0933 A2 8/20	hexagon screw A2 M08X20

Bauanleitung 23.1

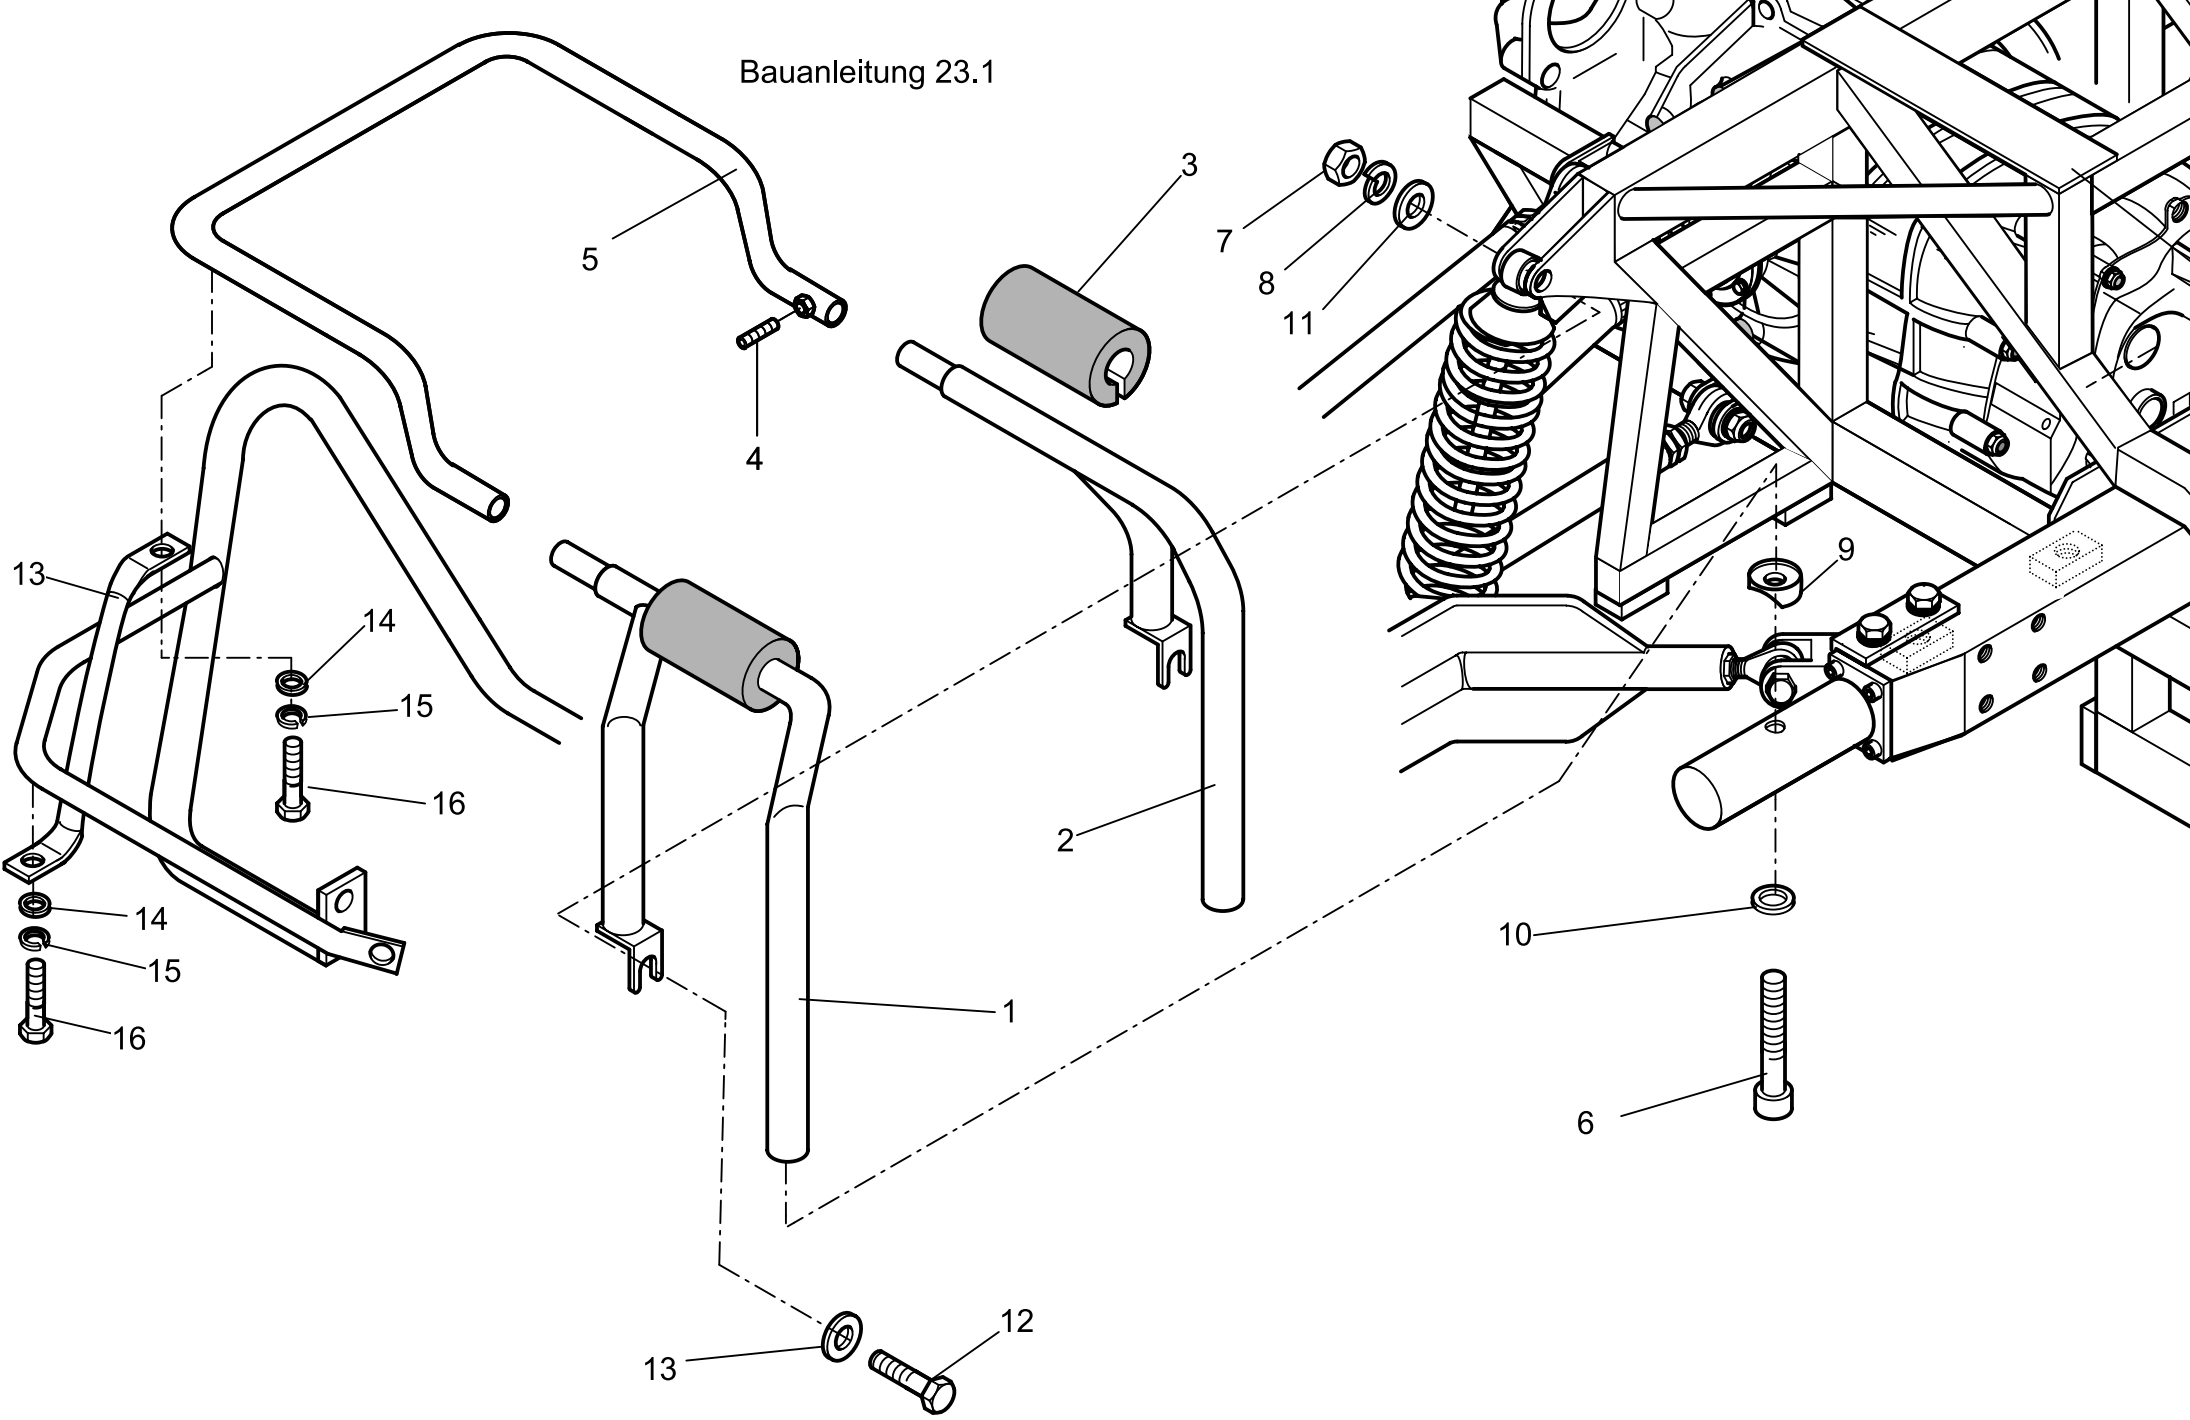

Modell: rewaco FX4 Base Seite: 23,1


Pos.	Q'ty	Art.-No.	Article Description
1	1	05-00177-F-01	rail FX4/FX6, rh, stainless steel, since 01/2007
2	1	05-00176-F-01	rail FX4/FX6, lh, stainless steel, since 01/2007
3	2	05-00188-E-01	arm pad, rail FX4-5-6, black
4	2	0913 A2 8/8	hexagon socket screw A2 M08X08 (slug)
5	1	05-00179-F-01	luggage rack for top case FX4, stainless steel, since 01/2007
6	2	0912 A2 10/90	hexagon socket screw A2 M10X90
7	2	0934 ZN 12	hexagon nut zinc plated M12
8	2	0127 A ZN 12	spring lock washer A zinc plated M12
9	2	38 0030 2	spacer, rail HS4 and FX4, at SIPS
10	2	0125 A2 10	washer A2 M10
11	4	0125 ZN 12	washer zinc plated M12
12	2	0933 ZN 12/60	hexagon screw zinc plated M12X60
13	2	06-00592-F-01	rail support, 400 mm
14	4	0125 A2 8	washer A2 M8
15	4	0127 B A2 8	spring lock washer Form B A2 M8
16	2	0933 A2 8/20	hexagon screw A2 M08X20

Drehmoment =

Pos. 6 = 15 N/m


Pos. 7 = 28 N/m

Assembly Instructions 24

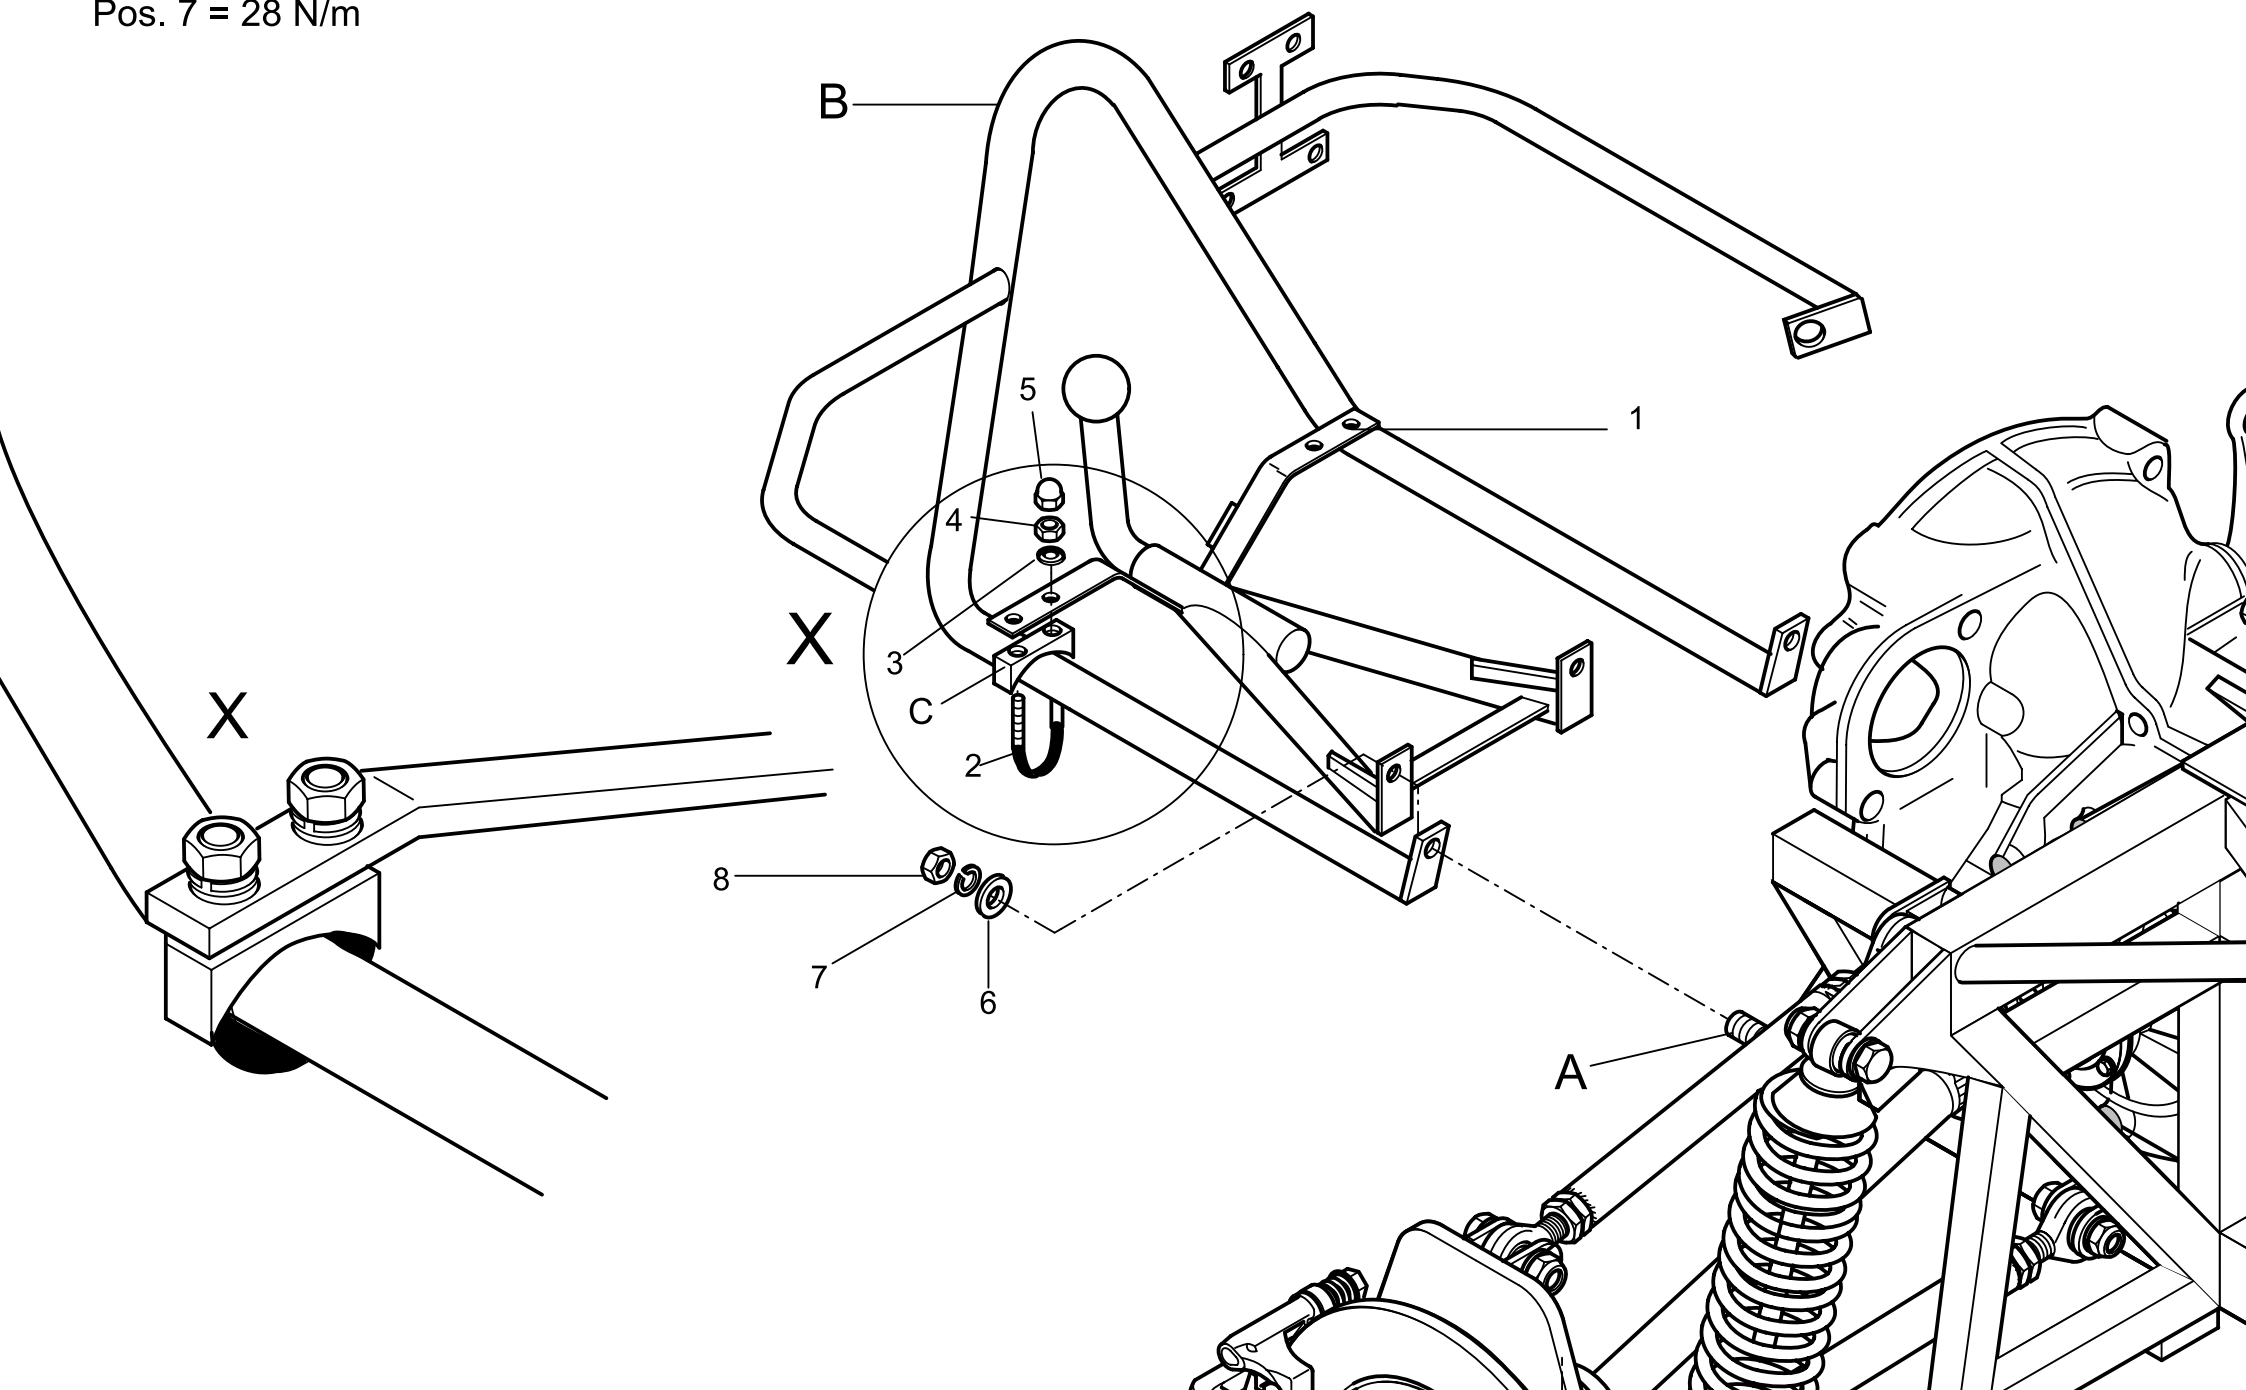

Modell: rewaco FX4 Base Seite: 24


Pos.	Q'ty	Art.-No.	Article Description
1	1	34 0056 0	trailer hitch HS4-5 and FX4 since 01/2001, 400 kg
2	2	19 0090 2	clip 42 mm
3	4	0125 A2 8	washer A2 M8
4	2	0985 A2 8	hexagon nut, self-locking A2 M08
5	1	7349 ZN 10/25/4	washer zinc M10X25X4
6	2	0127 A ZN 10	spring lock washer A zinc plated M10
7	2	0934 ZN 10	hexagon nut zinc plated M10

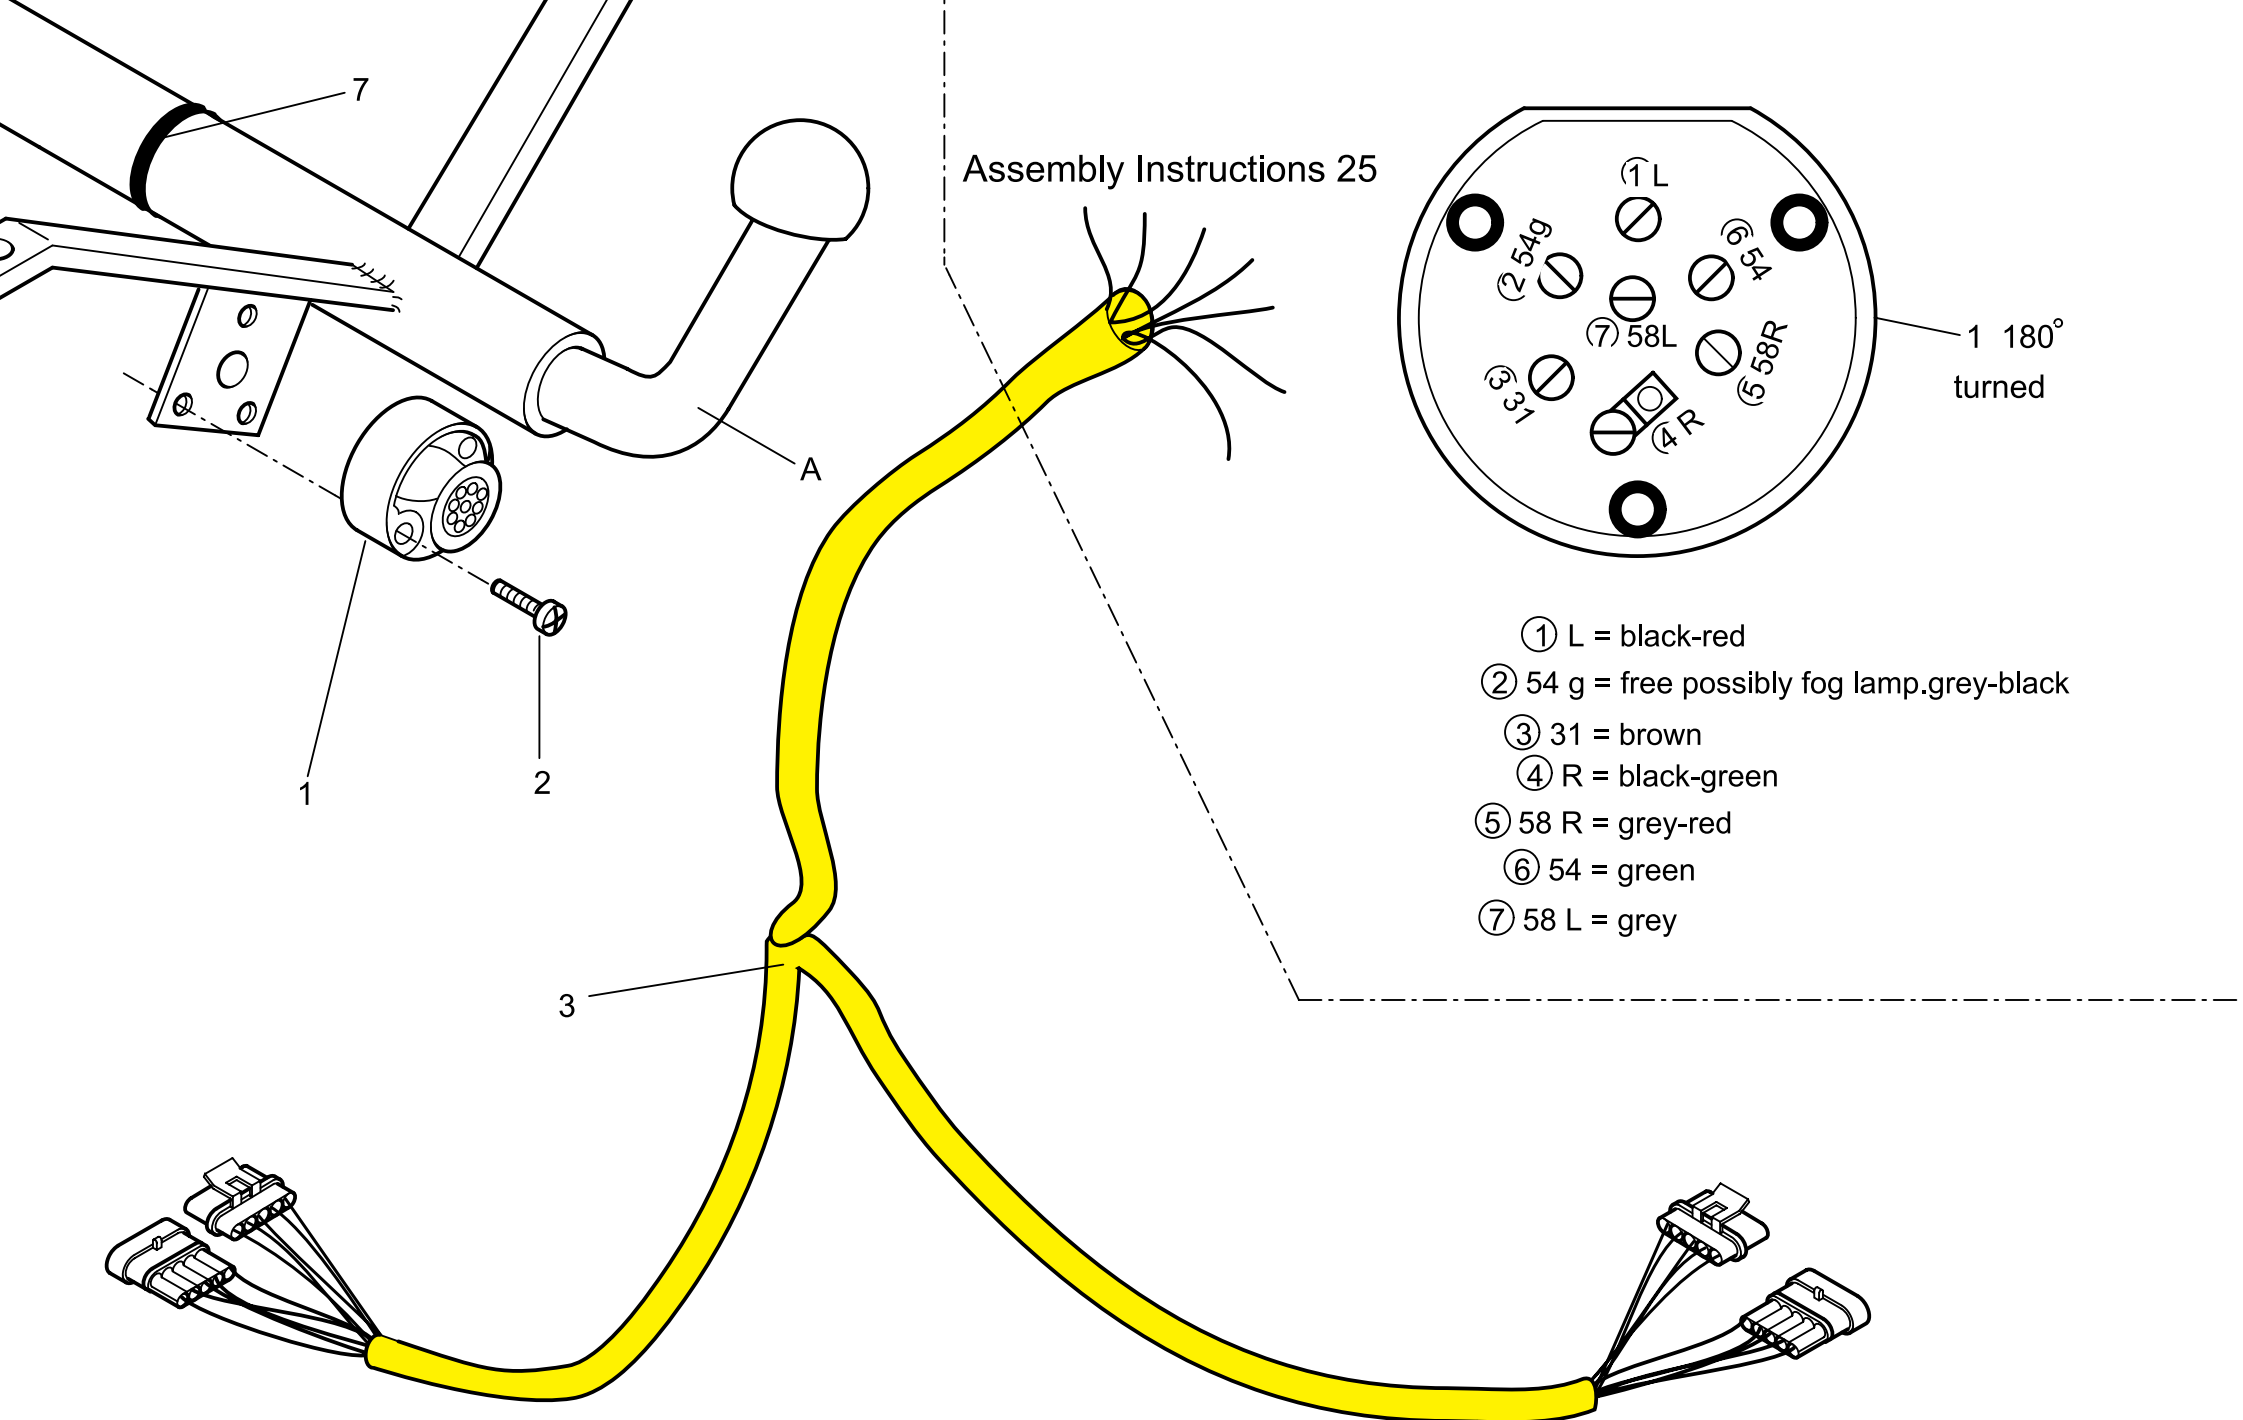

Modell: rewaco FX4 Base Seite: 25

Pos.	Q'ty	Art.-No.	Article Description
1	1	18 0400 1	power socket, 7-pole
2	3	7985 A2 5/35	fillister head screw, cross slot A2 M05X35
3	1	01-00149-U-01	wiring harness trailer hitch RF/FX and HS since 04/2006


Assembly Instructions 26

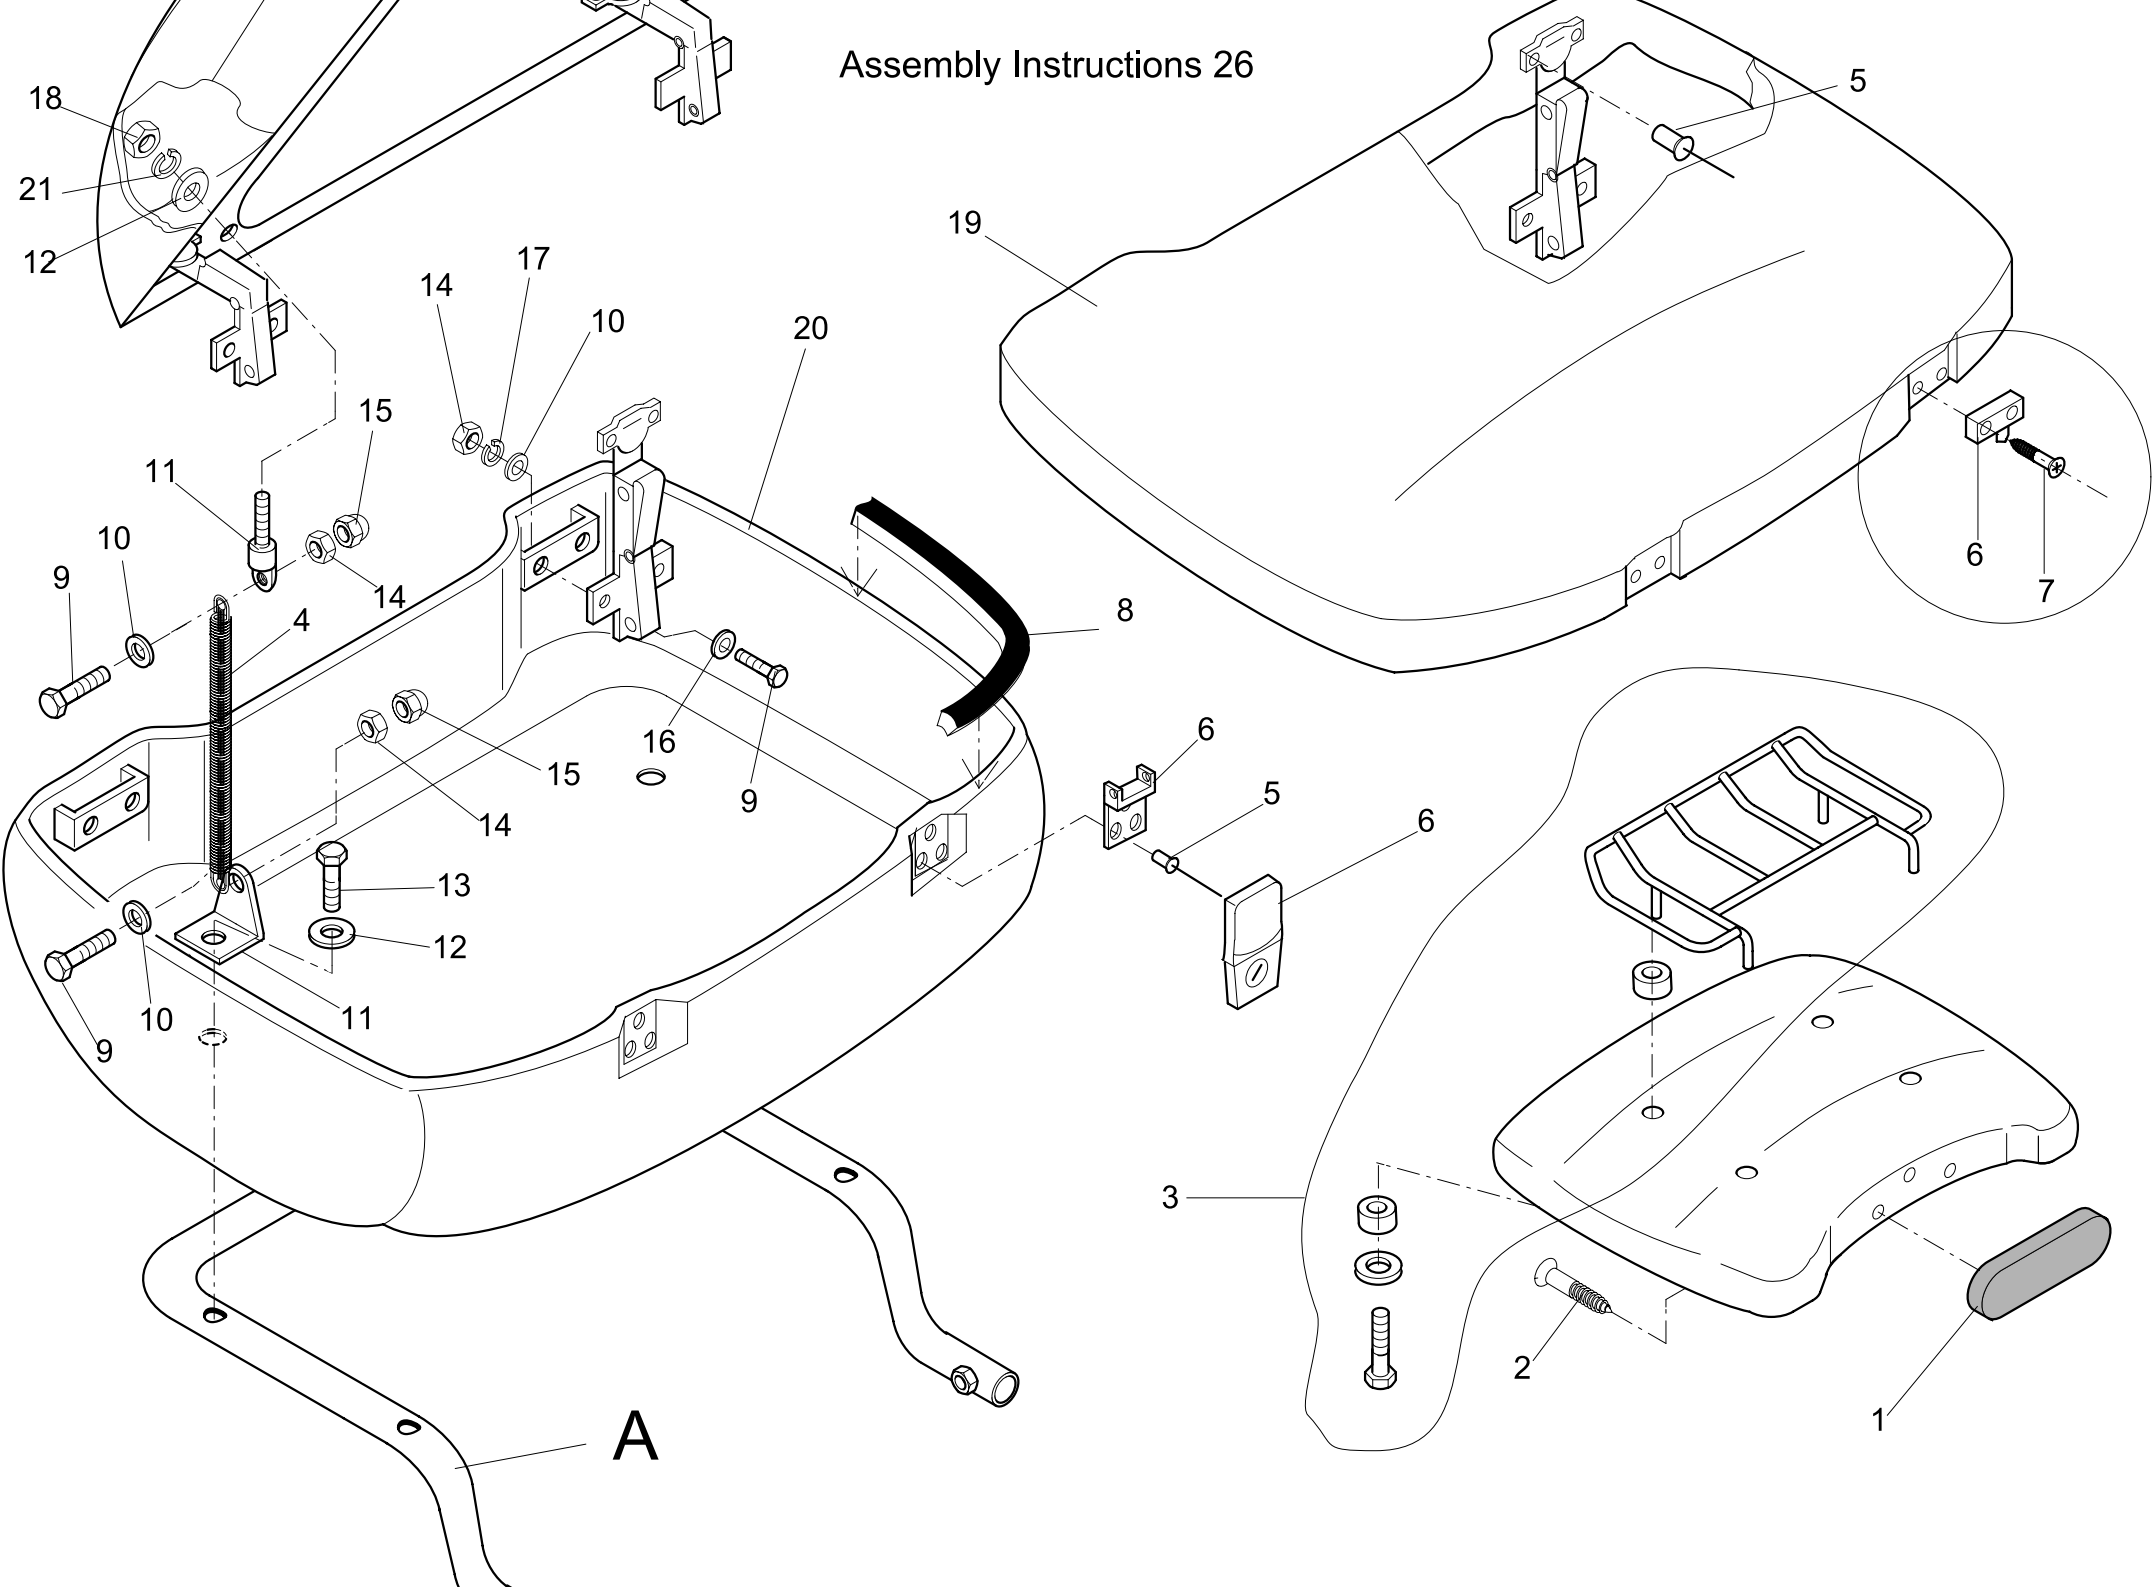

Modell: rewaco FX4 Base Seite: 26

Pos.	Q'ty	Art.-No.	Article Description
1	1	20 1834 0	neck cushion, top case assembly HS4/FX4, black
2	3	N4,2X25VA	Zebra-Pias-phillips panhead screw 4.2X25 stainless steel, self tapping
3	1	18 0233 5	luggage rack for HS/FX top case
4	1	33 4040 2	spring, top case, with pull rope
5	8	915 904 819	Zebra-blind rivet alu/black, big set header 4.8x25
6	2	10 0202 1	lock, top case HS4/HS6 FX4/FX6 since 04/2005 and glove compartment RF1
7	4	7991 A2 3/30	hexagon socket countersunk flathead screw A2 M04X30
8	1	19 0131 2	edge protection with rubber seal, top case HS/FX .Tank HS/FX
9	6	0933 A2 5/16	hexagon screw A2 M05X16
10	6	0125 A2 5	washer A2 M5
11	1	33 3040 2	mount (set), spring, top case HS4/HS6 FX4/FX6
12	5	9021 A2 6	washer, body, A2 M6
13	4	0933 A2 6/20	hexagon screw A2 M06X20
14	6	0934 A2 5	hexagon nut A2 M05
15	2	1587 A2 5	acorn nut A2 M05
16	4	9021 A2 5	washer, body, A2 M5
17	4	0127 B A2 5	spring lock washer Form B A2 M5
18	1	0934 A2 6	hexagon nut A2 M06
19	1	19 1111 0	lid, top case HS4/HS6 / FX4/FX6
20	1	19 1112 0	lower shell, top case HS4/FX6
21	1	0127 B A2 6	spring lock washer Form B A2 M6

Assembly Instructions 27

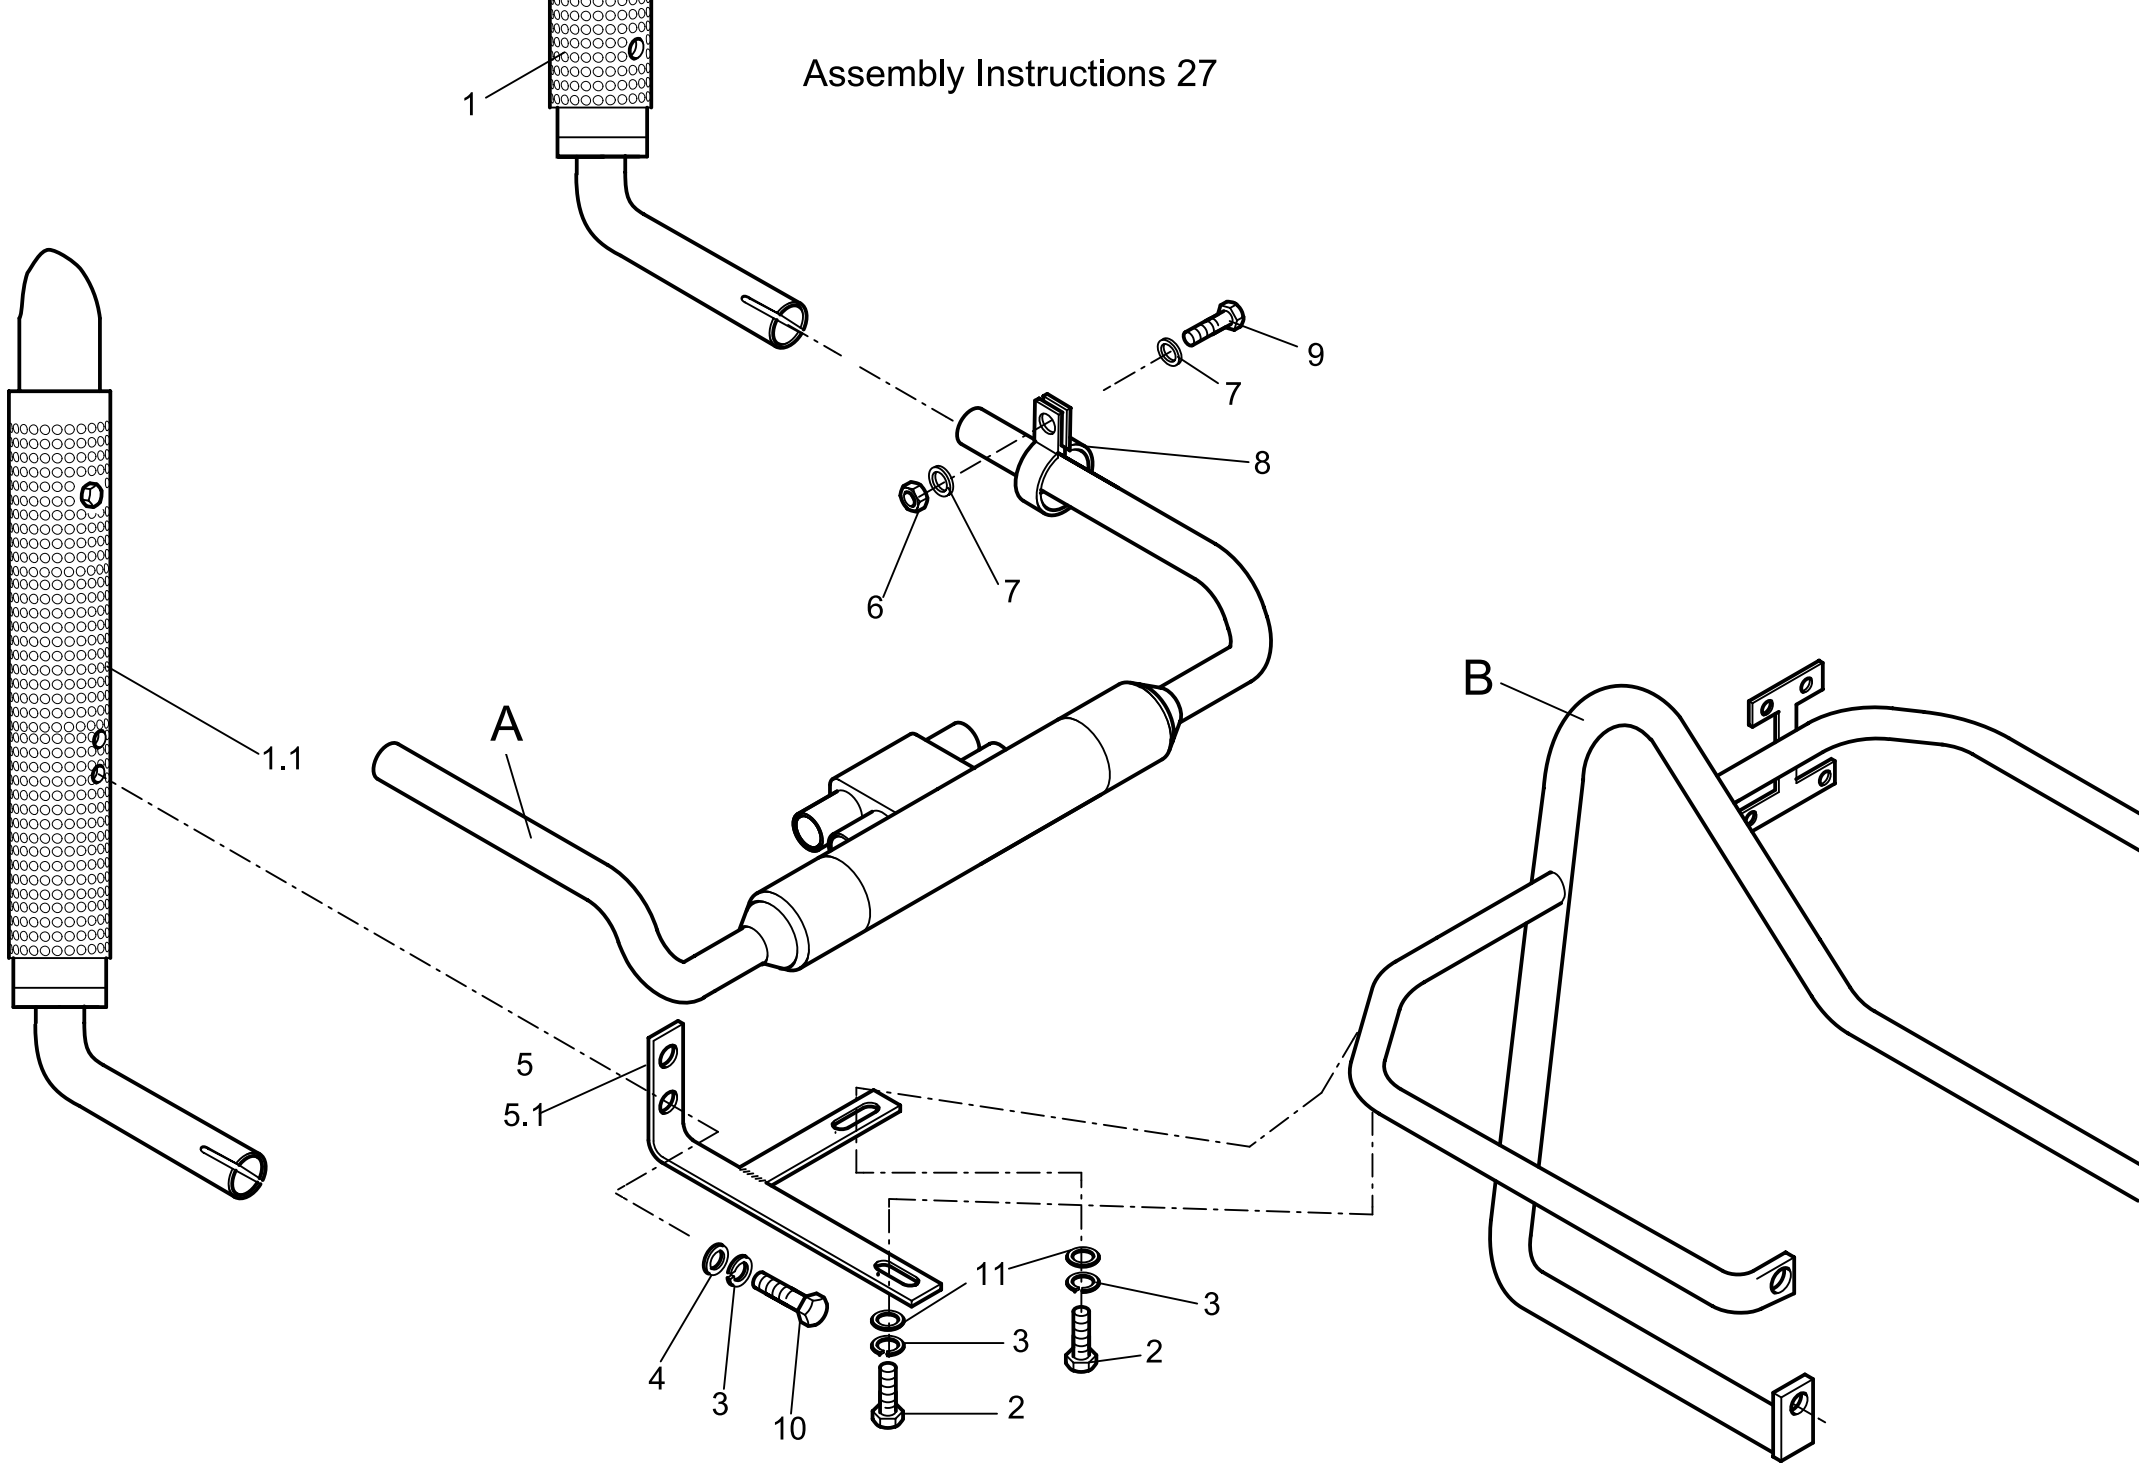

Modell: rewaco FX4 Base Seite: 27

Pos.	Stk.	Artikel-Nr	Artikel bezeichnung
1	1	13 0285 1	Hochauspuff-Endschalldämpfer HS1-HS5 FX4/FX5 für Kat-Motor links
1,1	1	13 0285 0	Hochauspuff-Endschalldämpfer HS1-HS5 FX4/FX5 für Kat-Motor rechts
2	4	0933 A2 8/20	Skt-Schraube A2 M08X20
3	8	0127 B A2 8	Federring Form B A2 M8
4	4	0125 A2 8	U-Scheibe A2 M8
5	1	13 0118 2	Halter für Hochauspuff Kat. HS4 und FX4 links am Heckbügel
5,1	1	13 0118 3	Halter für Hochauspuff Kat. HS4 und FX4 rechts am Heckbügel
6	2	0934 A2 10	Skt-Mutter A2 M10 Mutter M10 VA
7	2	9021 A2 10	K-Scheibe A2 M10
8	2	19 0889 1	Rohrschelle-Auspuffbefest. Dr.48
9	2	0933 ZN 10/30	Skt-Schraube ZN M10X30 10.9
10	4	0933 A2 8/16	Skt-Schraube A2 M08X16
11	4	9021 A2 8	K-Scheibe A2 M8